User Manual

Read and understand this manual before using machine.

10” HYBRID SAW

Model Number

35990CG
35990G
35990C
35990CS
35990SS

C US

STEEL CITY TOOL WORKS
VER. 08.12
Manual Part No. SC76038

THANK YOU for purchasing your new Steel City Table Saw. This table saw has been designed, tested, and inspected with you, the customer, in mind. When properly used and maintained, your table saw will provide you with years of trouble free service, which is why it is backed by one of the longest machinery warranties in the business.

This table saw is just one of many products in the Steel City's family of woodworking machinery and is proof of our commitment to total customer satisfaction.

At Steel City we continue to strive for excellence each and every day and value the opinion of you, our customer. For comments about your table saw or Steel City Tool Works, please visit our web site at **www.steelcitytoolworks.com** .

TABLE OF CONTENTS

INTRODUCTION

SECTION 1 Warranty 4

SECTION 2 Product Specifications 7

SECTION 3 Accessories and Attachments 7

SECTION 4 Definition of Terms 8

SECTION 5 Feature Identification 9

SECTION 6 General Safety 10

SECTION 7 Product Safety 12

SECTION 8 Electrical Requirements 13

SECTION 9 Grounding Instructions 14

SECTION 10 Unpacking & Inventory 15

SECTION 11 Assembly 17

SECTION 12 Adjustments 24

SECTION 13 Operation 28

SECTION 14 Maintenance 33

SECTION 15 Troubleshooting Guide 34

SECTION 16 Parts List 36

INTRODUCTION

This user manual is intended for use by anyone working with this machine. It should be kept available for immediate reference so that all operations can be performed with maximum efficiency and safety. Do not attempt to perform maintenance or operate this machine until you have read and understand the information contained in this manual.

The drawings, illustrations, photographs, and specifications in this user manual represent your machine at time of print. However, changes may be made to your machine or this manual at any time with no obligation to Steel City Tool Works.

WARRANTY

2 YEAR LIMITED WARRANTY

Steel City Tool Works, LLC (SCTW) warrants this SCTW machinery to be free of defects in workmanship and materials for a period of 2 years from the date of the original retail purchase by the original owner for domestic use. Granite components are warranted for 2 years based on normal use and is void if non SCTW accessories are used that cause the break or chip. Customer must advise SCTW within 30 days for any damage or defect found upon receipt of the product to qualify for the warranty on granite.

The warranty does not cover any product used for professional or commercial production purpose nor for industrial or educational applications. Such cases are covered by our 1 year Limited Warranty with the Conditions and Exceptions listed below.

Conditions and exception:

Warranty applies to the original buyer only and may not be transferred. Original proof of purchase is required.

Warranty does not include failures, breakage or defects deemed after inspection by an Authorized Service Center, (ASC) or agent of, have been directly or indirectly caused by or resulting from improper use, lack of or improper maintenance, misuse or abuse, negligence, accidents, damage in handling or transport, or normal wear and tear of any part or component.

Additionally, warranty is void if repairs or alterations are made to the machine by an unauthorized service center without the direct consent of SCTW

Consumables such as blades, knives, bits and sandpaper are not covered.
Wear items such as drive belt, bearings, switch, are covered for 1 year.

To file a claim of warranty or to find a service center, call toll free 877-724-8665 or email customercare@steelcitytoolworks.net and you must be able to present the original or photo copy of the sales receipt including the serial number from the machine and/or carton.

SCTW will inspect, repair or replace, at its expense and its option, any part that has proven to be defective in workmanship or material, provided that the customer returns the product prepaid to a designated ASC and provides SCTW with a reasonable opportunity to verify the alleged defect by inspection. SCTW will return the product or replacement at our expense unless it is determined by us that there is no defect or that the defect resulted from causes not within the scope of our *warranty in which case we will, at your direction, dispose of or return the product.* In the event you choose to have the product returned, you will be responsible for the handling and shipping costs of the return.

SCTW furnishes the above warranties in lieu of all other warranties, express or implied. SCTW shall not be liable for any special, indirect, incidental, punitive or consequential damages, including without limitation loss of profits arising from or related to the warranty, the breach of any agreement or warranty, or the operation or use of its machinery, including without limitation damages arising from damage to fixtures, tools, equipment, parts or materials, direct or indirect loss caused by and other part, loss of revenue or profits, financing or interest charges, and claims by and third person, whether or not notice of such possible damages has been given to SCTW. Damages or any kind for any delay by or failure of SCTW to perform its obligations under this agreement or claims made a subject of a legal proceeding against SCTW more than one (1) year after such cause of action first arose.

The validity, construction and performance of this Warranty and any sale of machinery by SCTW shall be governed by the law of the Commonwealth of Pennsylvania, without regard to conflicts of law's provisions of any jurisdiction. Any action related in any way to any alleged or actual offer, acceptance or sale by SCTW or any claim related to the performance of and agreement including without limitation this Warranty, shall take place in the federal or state courts in Allegheny County, Pennsylvania.

Warranty registration card must be submitted to SCTW for purpose of proof within 90 days of purchase with a copy of the sales receipt. Failure to do so will, revert the 2 year warranty to 1 year as in the terms stated above. This registration is also needed to facilitate contact in case of a safety recall.

This warranty gives you specific legal rights and you may have other rights which vary in certain States or Provinces.

Note to user
This instruction manual is meant to serve as a guide only. Specification and references are subject to change without prior notice. Check the website www.steelcitytoolworks.com for updated manuals with reference to the VER# located on the front page.

LIMITED WARRANTY – ACCU-SHOP line of bench top tools

Steel City Tool Works, LLC (SCTW) warrants this SCTW ACCU-SHOP machinery to be free of defects in workmanship and materials for a period of 2 years from the date of the original retail purchase by the original owner for domestic use.
Consumables such as blades, knives, bits and sandpaper are not covered.
Wear items such as drive belt, bearings, switch, are covered for 1 year.

The warranty does not cover any product used for professional or commercial production purpose nor for industrial or educational applications. Such cases are covered by our 30 days Limited Warranty with the Conditions and Exceptions listed previously.

WARRANTY CARD

Name _____

Street _____

Apt. No. _____

City _____ State _____ Zip _____

Phone Number _____

E-Mail _____

Product Description: _____

Model No.: _____ Serial No.: _____

NOTE: The **Proof of Purchase** must be submitted along with this card in order to have the Warranty to take into effect. Fail to submit the Proof of Purchase may invalidate your Product Warranty.

The following information is given on a voluntary basis and is strictly confidential.

1. Where did you purchase your STEEL CITY machine?
   Store: _____
   City: _____ Online: _____

2. How did you first learn of Steel City Tool Works?
   ___ Advertisement ___ Mail Order Catalog
   ___ Web Site ___ Friend
   ___ Local Store Other _____

3. Which of the following magazines do you subscribe to?
   ___ American Woodworker ___ Cabinetmaker
   ___ Canadian Woodworking ___ Family Handyman
   ___ Fine Homebuilding ___ Fine Woodworking
   ___ Journal of Light Construction ___ Old House Journal
   ___ Popular Mechanics ___ Popular Science
   ___ Popular Woodworking ___ Today's Homeowner
   ___ WOOD ___ Woodcraft
   ___ WOODEN Boat ___ Woodshop News
   ___ Woodsmith ___ Woodwork
   ___ Woodworker ___ Woodworker's Journal
   ___ Workbench Other _____

4. Which of the following woodworking / remodeling shows do you watch?
   ___ Backyard America ___ The American Woodworker
   ___ Home Time ___ The New Yankee Workshop
   ___ This Old House ___ Woodwright's Shop
   Other _____

5. What is your annual household income?
   ___ $20,000 to $29,999 ___ $30,000 to $39,999
   ___ $40,000 to $49,999 ___ $50,000 to $59,999
   ___ $60,000 to $69,999 ___ 70,000 to $79,999
   ___ $80,000 to $89,999 ___ $90,000 +

6. What is your age group?
   ___ 20 to 29 years ___ 30 to 39 years
   ___ 40 to 49 years ___ 50 to 59 years
   ___ 60 to 69 years ___ 70 + years

7. How long have you been a woodworker?
   ___ 0 to 2 years ___ 2 to 8 years
   ___ 8 to 20 years ___ over 20 years

8. How would you rank your woodworking skills?
   ___ Simple ___ Intermediate
   ___ Advance ___ Master Craftsman

9. How many Steel City machines do you own? _____

10. What stationary woodworking tools do you own?
    Check all that apply.
    ___ Air Compressor ___ Band Saw
    ___ Drill Press ___ Drum Sander
    ___ Dust Collection ___ Horizontal Boring Machine
    ___ Jointer ___ Lathe
    ___ Mortiser ___ Panel Saw
    ___ Planer ___ Power Feeder
    ___ Radial Arm Saw ___ Shaper
    ___ Spindle Sander ___ Table Saw
    ___ Vacuum Veneer Press ___ Wide Belt Sander
    Other _____

11. Which benchtop tools do you own? *Check all that apply.*
    ___ Belt Sander ___ Belt / Disc Sander
    ___ Drill Press ___ Band Saw
    ___ Grinder ___ Mini Jointer
    ___ Mini Lathe ___ Scroll Saw
    ___ Spindle / Belt Sander Other _____

12. Which portable / hand held power tools do you own?
    Check all that apply.
    ___ Belt Sander ___ Biscuit Jointer
    ___ Dust Collector ___ Circular Saw
    ___ Detail Sander ___ Drill / Driver
    ___ Miter Saw ___ Orbital Sander
    ___ Palm Sander ___ Portable Thickness Planer
    ___ Saber Saw ___ Reciprocating Saw
    ___ Router Other _____

13. What machines / accessories would you like to see added to the STEEL CITY line?
    _____
    _____

14. What new accessories would you like to see added?
    _____
    _____

15. Do you think your purchase represents good value?
    ___Yes ___ No

16. Would you recommend STEEL CITY products to a friend?
    ___ Yes ___ No

17. Comments:
    _____
    _____
    _____
    _____
    _____

✂ CUT HERE

FOLD ON DOTTED LINE

PLACE
STAMP
HERE

SteelCityToolWorks

#4 Northpoint Court
Bolingbrook, IL 60440

FOLD ON DOTTED LINE

PRODUCT SPECIFICATIONS

	35990G	35990C	35990CS	35990SS	35990CG
Motor type	Induction	Induction	Induction	Induction	Induction
HP	1.5	1.5	1.5	1.5	1.5
Amps	13 / 6.5	13 / 6.5	13 / 6.5	13 / 6.5	13 / 6.5
Volts	120 / 240	120 / 240	120 / 240	120 / 240	120 / 240
Hertz	60	60	60	60	60
RPM	3450	3450	3450	3450	3450
Blade Tilt	Left	Left	Left	Left	Left
Blade Drive	Poly-V Belt	Poly-V Belt	Poly-V Belt	Poly-V Belt	Poly-V Belt
Blade Diameter	10-in	10-in	10-in	10-in	10-in
Blade Arbor	5/8-in	5/8-in	5/8-in	5/8-in	5/8-in
Number of Teeth	40	40	40	40	40
Blade Speed	3450	3450	3450	3450	3450
Max Depth of cut at 90°	3-3/8-in	3-3/8-in	3-3/8-in	3-3/8-in	3-3/8-in
Max Depth of cut at 45°	2-1/4-in	2-1/4-in	2-1/4-in	2-1/4-in	2-1/4-in
Table in front of blade at max depth of cut	12-1/2-in	12-1/2-in	12-1/2-in	12-1/2-in	12-1/2-in
Max Dado width	13/16-in	13/16-in	13/16-in	13/16-in	13/16-in
Max Dado blade diameter	8-in	8-in	8-in	8-in	8-in
Left Extention table wing	13.7-in Granite	13.7-in Cast Iron	13.7-in Cast Steel	13.7-in Cast Steel	13.7-in Granite
Right Extention table wing	14.9-in Granite	14.9-in Cast Iron	14.9-in Cast Steel	14.9-in Cast Steel	14.9-in Granite
Product Dimensions					
Length	68"	68"	68"	68"	68"
Width	38"	38"	38"	38"	38"
Height	35-1/2"	35-1/2"	35-1/2"	35-1/2"	35-1/2"
Net Weight	348 lbs	313 lbs	254 lbs	224 lbs	342 lbs
Shipping Dimensions					
Length	31.5-in	31.5-in	31.5-in	31.5-in	31.5-in
Width	30.1-in	30.1-in	30.1-in	30.1-in	30.1-in
Height	21.7-in	21.7-in	21.7-in	21.7-in	21.7-in
Gross Weight	363 lbs	328 lbs	269 lbs	240 lbs	354 lbs

ACCESSORIES AND ATTACHMENTS

Dado Insert: 35830
Zero Clearance Insert: 35831

There are more accessories available for your Steel City Product. For more information on any accessories associated with this and other machines, please contact your nearest Steel City distributor, or visit our website at: www.**steelcitytoolworks.com.**

DEFINITION OF TERMS

Anti-Kickback Fingers – A safety device attached to the blade guard and splitter assembly designed to minimize the chance of a workpiece being thrown back during a cutting operation.

Arbor – The shaft on which the blade or accessory cutting-tool is mounted.

Bevel Cut – The operation of making any cut with the blade set on a degree other than 90 degrees.

Compound Cut – The operation of making both a bevel and a miter cut at one time.

Crosscut – The operation of making a cut across the grain or width of a workpiece.

Dado – A non-through cut that produces a square notch. A dado is typically from 1/8-in. to 13/16-in. wide. A dado requires a special set of blades, not included with this table saw.

Featherboard – An accessory device that can be made or purchased to help guide or hold down a workpiece during cutting operations.

Freehand – A very dangerous operation of making a cut without using the fence or miter gauge in a cutting operation. **FREEHAND CUTS MUST NEVER BE PERFORMED ON A TABLE SAW.**

Gum, Pitch or Resin – A sticky, sap based residue that comes from wood products.

Heeling – The misalignment of the blade to the miter slots; when the blade is not parallel to the miter slots.

Kerf – The material removed by the blade in the workpiece during any cutting operation.

Kickback – When the workpiece is thrown back toward the operator at a high rate of speed during a cutting operation.

Miter Cut – The operation of making a cut using the miter gauge at any angle other than zero degrees.

Push Stick – An accessory device that can be made or purchased to help push the workpiece through the blade. A push stick is used to keep the operator's hands away from the blade when ripping a narrow workpiece.

Rabbet – A square notch in the edge of the workpiece.

Rip Cut – The operation of making a cut with the grain of the workpiece.

Saw Blade Path – The area that is directly in line with the blade, including area over, under, behind and in front of it.

Set of the Saw Blade – The distance that the tips of the saw blade are angled outwards from the thickness of the blade. The set of the saw blade teeth allows for the blade body to pass safely through all cuts.

Table/Work Area – The total surface of the top of the table saw on which the workpiece rests while set-up or cutting operations are being performed.

FEATURE IDENTIFICATION

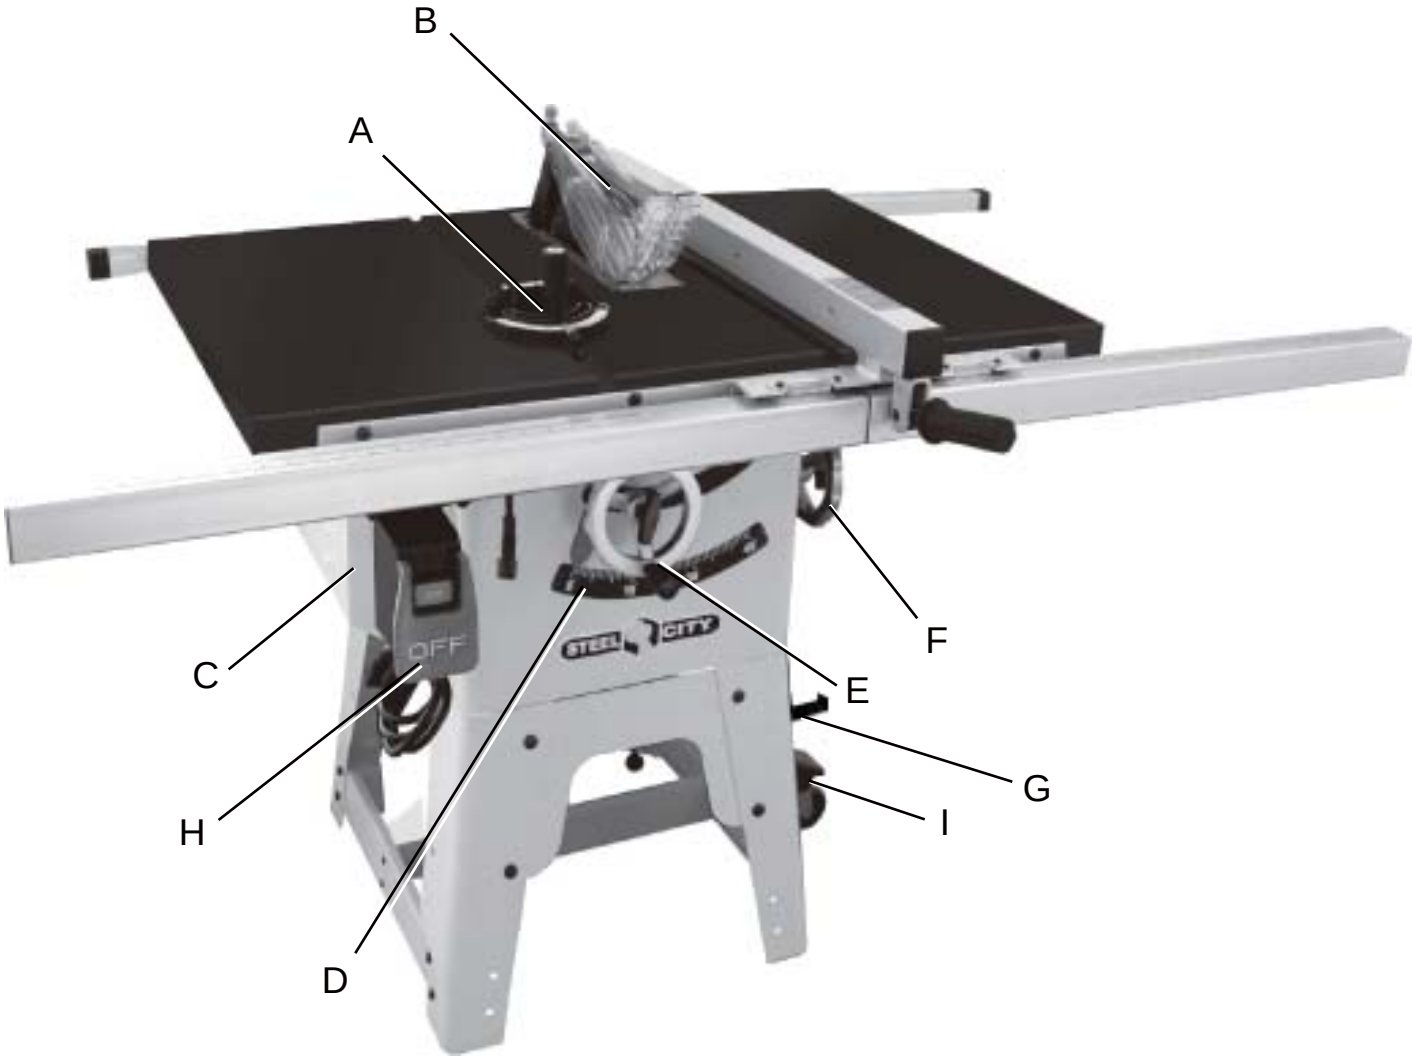

A) Miter Gauge
B) Blade Guard Assembly with Riving Knife
C) Motor Cover
D) Bevel Scale
E) Height Adjustment Handwheel
F) Bevel Adjustment Handwheel
G) Fence Hooks
H) On/Off Switch
I) Mobile Base Caster Assembly

GENERAL SAFETY

⚠ WARNING

TO AVOID serious injury and damage to the machine, read and follow all Safety and Operating Instructions before assembling and operating this machine.

This manual is not totally comprehensive. It does not and can not convey every possible safety and operational problem which may arise while using this machine. The manual will cover many of the basic and specific safety procedures needed in an industrial environment.

All federal and state laws and any regulations having jurisdiction covering the safety requirements for use of this machine take precedence over the statements in this manual. Users of this machine must adhere to all such regulations.

Below is a list of symbols that are used to attract your attention to possible dangerous conditions.

⚠

This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

⚠ DANGER

Indicates an imminently hazardous situation which, if not avoided, WILL result in death or serious injury.

⚠ WARNING

Indicates a potentially hazardous situation which, if not avoided, COULD result in death or serious injury.

⚠ CAUTION

Indicates a potentially hazardous situation, if not avoided, **MAY** result in minor or moderate injury. It may also be used to alert against unsafe practices.

CAUTION

CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.

NOTICE

This symbol is used to alert the user to useful information about proper operation of the machine.

⚠ WARNING

Exposure to the dust created by power sanding, sawing, grinding, drilling and other construction activities may cause serious and permanent respiratory or other injury, including silicosis (a serious lung disease), cancer, and death. Avoid breathing the dust, and avoid prolonged contact with dust. The dust may contain chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

Some examples of these chemicals are:

- Lead from lead-based paints.
- Crystalline silica from bricks, cement and other masonry products.
- Arsenic and chromium from chemically-treated lumber.

Always operate tool in well ventilated area and provide for proper dust removal. Use a dust collection system along with an air filtration system whenever possible. Always use properly fitting NIOSH/OSHA approved respiratory protection appropriate for the dust exposure, and wash exposed areas with soap and water.

1. To avoid serious injury and damage to the machine, read the entire User Manual before assembly and operation of this machine.

⚠ WARNING

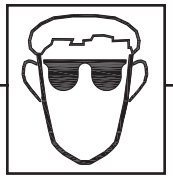

2. **ALWAYS** wear eye protection. Any machine can throw debris into the eyes during operations, which could cause severe and permanent eye damage. Everyday eyeglasses are **NOT** safety glasses. **ALWAYS** wear Safety Goggles (that comply with ANSI standard Z87.1) when operating power tools.

⚠ WARNING

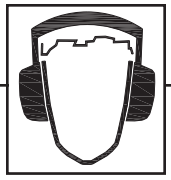

3. **ALWAYS** wear hearing protection. Plain cotton is not an acceptable protective device. Hearing equipment should comply with ANSI S3.19 Standards.

⚠ WARNING

4. **ALWAYS** wear a NIOSH/OSHA approved dust mask to prevent inhaling dangerous dust or airborne particles.

5. **ALWAYS** keep the work area clean, well lit, and organized. **DO NOT** work in an area that has slippery floor surfaces from debris, grease, and wax.

6. **ALWAYS** unplug the machine from the electrical receptacle when making adjustments, changing parts or performing any maintenance.

7. **AVOID ACCIDENTAL STARTING**. Make sure that the power switch is in the "OFF" position before plugging in the power cord to the electrical receptacle.

⚠ WARNING

8. **AVOID** a dangerous working environment. **DO NOT** use electrical tools in a damp environment or expose them to rain or moisture.

⚠ WARNING

9. **CHILDPROOF THE WORKSHOP AREA** by removing switch keys, unplugging tools from the electrical receptacles, and using padlocks.

10. **DO NOT** use electrical tools in the presence of flammable liquids or gasses.

11. **DO NOT FORCE** the machine to perform an operation for which it was not designed. It will do a safer and higher quality job by only performing operations for which the machine was intended.

12. **DO NOT** stand on a machine. Serious injury could result if it tips over or you accidentally contact any moving part.

13. **DO NOT** store anything above or near the machine.

14. **DO NOT** operate any machine or tool if under the influence of drugs, alcohol, or medication.

15. **EACH AND EVERY** time, check for damaged parts prior to using any machine. Carefully check all guards to see that they operate properly, are not damaged, and perform their intended functions. Check for alignment, binding or breakage of all moving parts. Any guard or other part that is damaged should be immediately repaired or replaced.

16. Ground all machines. If any machine is supplied with a 3-prong plug, it must be plugged into a 3-contact electrical receptacle. The third prong is used to ground the tool and provide protection against accidental electric shock. **DO NOT** remove the third prong.

17. Keep visitors and children away from any machine. **DO NOT** permit people to be in the immediate work area, especially when the machine is operating.

18. **KEEP** protective guards in place and in working order.

19. **MAINTAIN** your balance. **DO NOT** extend yourself over the tool. Wear oil resistant rubber soled shoes. Keep floor clear of debris, grease, and wax.

20. **MAINTAIN** all machines with care. **ALWAYS KEEP** machine clean and in good working order. **KEEP** all blades and tool bits sharp.

21. **NEVER** leave a machine running, unattended. Turn the power switch to the OFF position. **DO NOT** leave the machine until it has come to a complete stop.

22. **REMOVE ALL MAINTENANCE TOOLS** from the immediate area prior to turning the machine ON.

23. **SECURE** all work. When it is possible, use clamps or jigs to secure the workpiece. This is safer than attempting to hold the workpiece with your hands.

24. **STAY ALERT**, watch what you are doing, and use common sense when operating any machine. **DO NOT** operate any machine tool while tired or under the influence of drugs, alcohol, or medication. A moment of inattention while operating power tools may result in serious personal injury.

25. **USE ONLY** recommended accessories. Use of incorrect or improper accessories could cause serious injury to the operator and cause damage to the machine. If in doubt, **DO NOT** use it.

26. **THE USE** of extension cords is not recommended for 230V equipment. It is better to arrange the placement of your equipment and the installed wiring to eliminate the need for an extension cord. If an extension cord is necessary, refer to the chart in the Grounding Instructions section to determine the minimum gauge for the extension cord. The extension cord must also contain a ground wire and plug pin.

27. Wear proper clothing, **DO NOT** wear loose clothing, gloves, neckties, or jewelry. These items can get caught in the machine during operations and pull the operator into the moving parts. Users must wear a protective cover on their hair, if the hair is long, to prevent it from contacting any moving parts.

28. **SAVE** these instructions and refer to them frequently and use them to instruct other users.

29. Information regarding the safe and proper operation of this tool is also available from the following sources:

    Power Tool Institute
    1300 Summer Avenue
    Cleveland, OH 44115-2851
    www.powertoolinstitute.org

    National Safety Council
    1121 Spring Lake Drive
    Itasca, IL 60143-3201

    American National Standards Institute
    25 West 43rd Street, 4th floor
    New York, NY 10036
    www.ansi.org

    ANSI 01.1 Safety Requirements for
    Woodworking Machines, and the U.S. Department of Labor regulations
    www.osha.gov

PRODUCT SAFETY

1. Serious personal injury may occur if normal safety precautions are overlooked or ignored. Accidents are frequently caused by lack of familiarity or failure to pay attention. Obtain advice from supervisor, instructor, or another qualified individual who is familiar with this machine and its operations.

2. Every work area is different. Always consider safety first, as it applies to your work area. Use this machine with respect and caution. Failure to do so could result in serious personal injury and damage to the machine.

3. Prevent electrical shock. Follow all electrical and safety codes, including the National Electrical Code (NEC) and the Occupational Safety and Health Regulations (OSHA). All electrical connections and wiring should be made by qualified personnel only.

⚠ WARNING

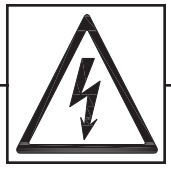

4. **TO REDUCE** the risk of electrical shock. **DO NOT** use this machine outdoors. **DO NOT** expose to rain or moisture. Store indoors in a dry area.

5. **STOP** using this machine, if at any time you experience difficulties in performing any operation. Contact your supervisor, instructor or machine service center immediately.

6. Safety decals are on this machine to warn and direct you to how to protect yourself or visitors from personal injury. These decals **MUST** be maintained so that they are legible. **REPLACE** decals that are not legible.

7. **DO NOT** leave the unit plugged into the electrical outlet. Unplug the unit from the outlet when not in use and before servicing, performing maintenance tasks, or cleaning.

8. **ALWAYS** turn the power switch “OFF” before unplugging the table saw.

⚠ WARNING

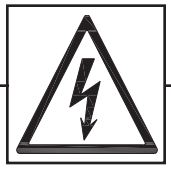

9. **DO NOT** handle the plug or table saw with wet hands.

10. **USE** accessories only recommended by Steel City.

11. **DO NOT** pull the table saw by the power cord. **NEVER** allow the power cord to come in contact with sharp edges, hot surfaces, oil or grease.

12. **DO NOT** unplug the table saw by pulling on the power cord. **ALWAYS** grasp the plug, not the cord.

13. **REPLACE** a damaged cord immediately. **DO NOT** use a damaged cord or plug. If the table saw is not operating properly, or has been damaged, left outdoors or has been in contact with water.

14. **DO NOT** use the table saw as a toy. **DO NOT** use near or around children.

15. **ENSURE** that the machine sits firmly on the floor before using. If the machine wobbles or is unstable, correct the problem by using shims or blocks prior to operation.

16. **KEEP** saw blade sharp and clean. Failure to do so greatly increases friction, decreases cut quality, and increases the possibility of a kickback.

17. **MAKE CERTAIN** the saw blade is parallel with the miter slots and with the rip fence. A blade that is not aligned parallel can cause the workpiece to be pinched between the blade and the fence causing burning or kickbacks.

18. **ALWAYS** use blade guard on all through cuts. This will help prevent the cut from closing on the back of the saw blade. The blade guard also has anti-kickback fingers which minimize the chance of a workiece being thrown back during a cutting operation.

19. **ALWAYS** push the workpiece past the blade. **DO NOT** release a workpiece until it is past the blade and removed from the saw.

20. **DO NOT** execute a cut when you do not have complete control of the situation.

21. **DO NOT** cut a workpiece that is too large for you to handle.

22. **DO NOT** use the rip fence as a guide when cross-cutting.

23. **BE MINDFUL** of flaws in the wood. Cutting a warped or twisted board along the rip fence can get pinched between the fence and the blade, causing a kickback.

24. **ALWAYS** remove cut off pieces and scraps from the table before starting the saw.

25. **NEVER** start the machine with the workpiece against the blade.

26. **NEVER** perform freehand operations. Use either the fence or miter gauge to position and guide the workpiece through the blade.

27. **ALWAYS** use a pushstick for ripping narrow work-pieces.

28. **NEVER** have any part of your body in line with the path of the saw blade. If a kickback occurs with you directly in front of the blade, a serious injury can occur.

29. **NEVER** attempt to free a stalled blade without first turning the machine off and disconnecting the saw from the power source.

ELECTRICAL REQUIREMENTS

⚠ WARNING

To reduce the risk of electric shock, follow all electrical and safety codes, including the National Electric Code (NEC) and the Occupational Safety and Health Regulations (OSHA). All electrical connections and wiring should be made by qualified personnel only.

This manual is written for 3 specific models, Model No 35990G, 35990C & 35990CS Please follow the specific requirements for your model saw.

The switch provided with your saw is a dual voltage capable switch, meaning it is designed to function at either 120 or 240 volts. The switch and saw comes prewired for 120 volt operation. If you decide to convert the saw to 240V, you will have to replace the 120 volt plug on the switch with a UL/CSA Listed plug, suitable for 240 volts.

The table saw with a 240 volt plug should only be connected to an outlet having the same configuration of your 240V outlet. Please follow the instruction of wiring diagram for changing the motor Voltage from 120 Volt to 240 Volt.

WIRING DIAGRAM

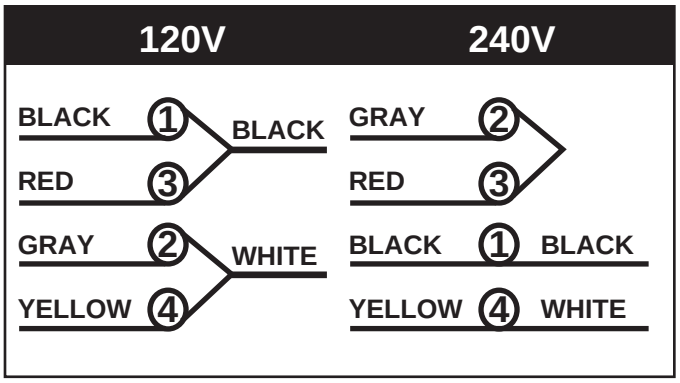

GROUNDING INSTRUCTIONS

⚠ WARNING

This machine **MUST BE GROUNDED** while in use to protect the operator from electric shock.

In the event of a malfunction or breakdown, **GROUNDING** provides the path of least resistance for electric current and reduces the risk of electric shock. The plug **MUST** be plugged into a matching electrical receptacle that is properly installed and grounded in accordance with **ALL** local codes and ordinances.

If a plug is provided with your machine **DO NOT** modify the plug. If it will not fit your electrical receptacle, have a qualified electrician install the proper connections to meet all electrical codes local and state. All connections must also adhere to all of OSHA mandates.

IMPROPER ELECTRICAL CONNECTION of the equipment-grounding conductor can result in risk of electric shock. The conductor with the green insulation (with or without yellow stripes) is the equipment-grounding conductor. **DO NOT** connect the equipment-grounding conductor to a live terminal if repair or replacement of the electric cord or plug is necessary.

Check with a qualified electrician or service personnel if you do not completely understand the grounding instructions, or if you are not sure the tool is properly grounded.

PLUGS/RECEPTACLES

⚠ WARNING

- Electrocution or fire could result if this machine is not grounded properly or if the electrical configuration does not comply with local and state electrical codes.
- **MAKE CERTAIN** the machine is disconnected from power source before starting any electrical work.
- **MAKE SURE** the circuit breaker does not exceed the rating of the plug and receptacle.

The motor supplied with your machine is either a 115/230 dual voltage motor (Model 35600) or a dedicated 230 volt, single phase motor (Model 35605). Never connect the green or ground wire to a live terminal.

The machine should only be connected to an outlet having the same configuration as the plug.

EXTENSION CORDS

⚠ WARNING

To reduce the risk of fire or electrical shock, use the proper gauge of extension cord. When using an extension cord, be sure to use one heavy enough to carry the current your machine will draw.

The smaller the gauge-number, the larger the diameter of the extension cord is. If in doubt of the proper size of an extension cord, use a shorter and thicker cord. An undersized cord will cause a drop in line voltage resulting in a loss of power and overheating.

⚠ CAUTION

USE ONLY a 3-wire extension cord that has a 3-prong grounding plug and a 3-pole receptacle that accepts the machine's plug.

If you are using an extension cord outdoors, be sure it is marked with the suffix "W-A" ("W" in Canada) to indicate that it is acceptable for outdoor use.

Make certain the extension cord is properly sized, and in good electrical condition. Always replace a worn or damaged extension cord immediately or have it repaired by a qualified person before using it.

Protect your extension cords from sharp objects, excessive heat, and damp or wet areas.

MINIMUM RECOMMENDED GAUGE FOR EXTENSION CORDS (AWG)			
120 VOLT OPERATION ONLY			
	25' LONG	**50' LONG**	**100' LONG**
0 to 6 Amps	18 AWG	16 AWG	16 AWG
6 to 10 Amps	18 AWG	16 AWG	14 AWG
10 to 12 Amps	16 AWG	16 AWG	14 AWG
12 to 15 Amps	14 AWG	12 AWG	Not recommended

MINIMUM RECOMMENDED GAUGE FOR EXTENSION CORDS (AWG)			
240 VOLT OPERATION ONLY			
	25' LONG	**50' LONG**	**100' LONG**
0 to 6 Amps	18 AWG	18 AWG	16 AWG
6 to 10 Amps	18 AWG	18 AWG	14 AWG
10 to 12 Amps	16 AWG	16 AWG	14 AWG
12 to 15 Amps	14 AWG	12 AWG	Not recommended

UNPACKING & INVENTORY

⚠ WARNING

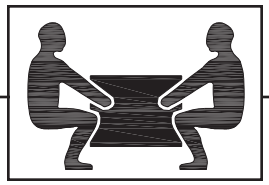

- The machine is heavy, two people are required to unpack and lift.
- Use a safety strap to avoid tip over when lifting machine.

Check shipping carton and machine for damage before unpackaging. Carefully remove packaging materials, parts and machine from shipping carton. Always check for and remove protective shipping materials around motors and moving parts. Lay out all parts on a clean work surface.

Remove any protective materials and coatings from all of the parts and the table saw. The protective coatings can be removed by spraying WD-40 on them and wiping it off with a soft cloth. This may need redone several times before all of the protective coatings are removed completely.

After cleaning, apply a good quality paste wax to any unpainted surfaces. Make sure to buff out the wax before assembly.

Compare the items to inventory figures; verify that all items are accounted for before discarding the shipping box.

⚠ WARNING

If any parts are missing, do not attempt to plug in the power cord and turn "ON" the machine. The machine should only be turned "ON" after all the parts have been obtained and installed correctly. For missing parts, contact Steel City at 1-877-SC4-TOOL.

A) Blade Guard & Splitter Assembly
B) On/Off Switch
C) Miter Gauge
D) Blade Wrench
E) Blade Wrench
F) Handwheel Assembly
G) Handwheel Knob
H) Caster Wheel

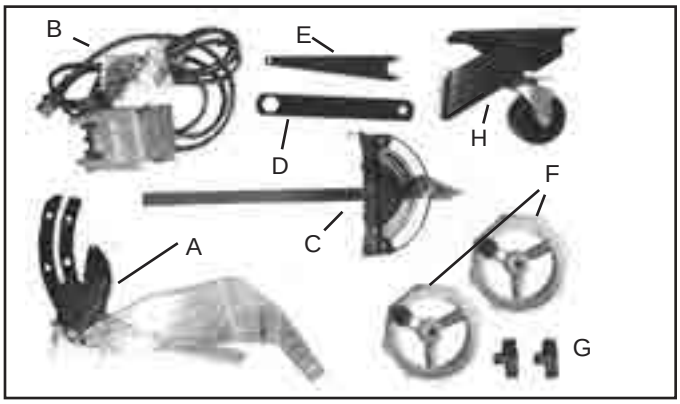

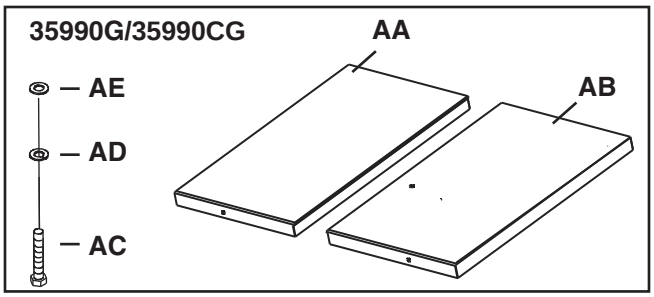

AA) LEFT GRANITE EXTENSION WING
AB) RIGHT GRANITE EXTENSION WING
AC) 5/16-18X50mm HEX SOC SET BOLTS (8)
AD) M8 LOCK WASHER (8)
AE) M8 SPECIAL WASHER (8)

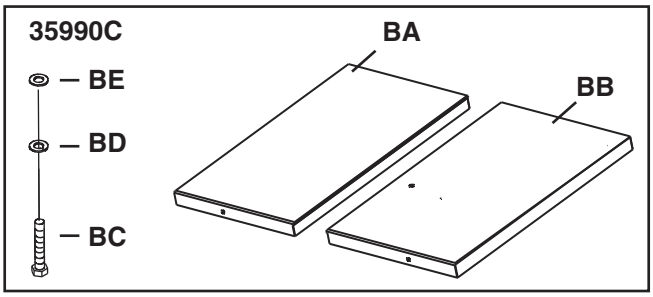

BA) LEFT CAST IRON EXTENSION WING
BB) RIGHT CAST IRON EXTENSION WING
BC) 5/16-18X50mm HEX SOC SET BOLTS (8)
BD) M8 LOCK WASHER (8)
BE) M8 SPECIAL WASHER (8)

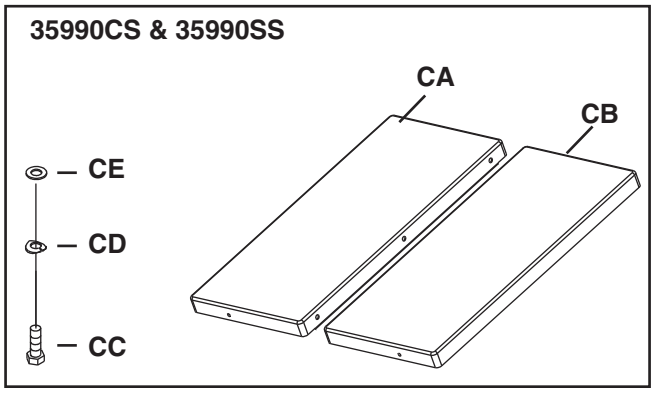

CA) LEFT SHEET METAL EXTENSION WING
CB) RIGHT SHEET METAL EXTENSION WING
CC) 5/16-18X50mm HEX SOC SET BOLTS (4)
CD) M8 LOCK WASHER (4)
CE) M8 SPECIAL WASHER (4)

Bag 1. Extension Wing Screw Package

A) M8 FLAT WASHER	OR91084	(8)
B) M8 LOCK WASHER	OR90248	(8)
C) 5/16-18X50mm HEX ALLEN BOLT	SC80438	(8)

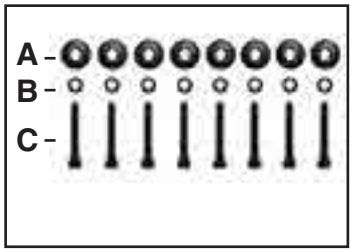

Location

Bag 2. Cabinet Leg Assembly Screw Package

A) M8X20mm HEX HD SCR	OR93917	(8)
B) M8 HEX NUT	OR90307	(16)
C) M8 FLAT WASHER	OR90311	(22)
D) M8 LOCK WASHER	OR90248	(22)
E) M8X16mm CARRIAGE BOLT	OR94770	(16)
F) M8X15mm SCR HEX SOC SET SCR	OR93380	(10)
G) M6X16mm HEX SOC HD SCR	SC80111	(4)
H) M6 HEX NUT	OR90235	(2)

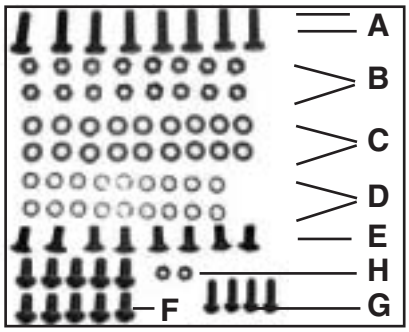

Location

Bag 3. Fence Bracket Package

A) M8X16 CARRIAGE BOLT	OR94770	(2)
B) M8 FLAT WASHER	OR90311	(2)
C) M8 LOCK WASHER	OR90248	(2)
D) M8 HEX NUT	OR90307	(2)
E) M4X8 TAP SCREW	OR91832	(1)
F) FENCE BRACKETS	SC10527	(2)

Bag 4. Switch Screw Package

G) M6 FLAT WASHER	OR90059	(2)
H) M6 LOCK WASHER	OR90502	(2)
I) M6X16 PAN HEAD SCREW	SC80111	(2)

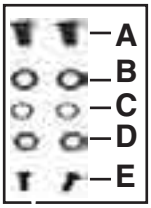

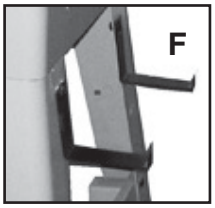

Location

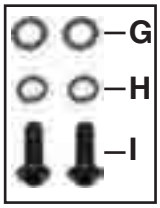

Location

Bag 5. (A) Front/ Back Rail Screw Package

A) 5/16-18*5/8 HEX SOC HD SCR	SC80112	(4)
B) M8 FLAT WASHER	OR90311	(8)
C) M8 LOCK WASHER	OR90248	(8)
D) 5/16-18*5/8 HEX HD SCR	SC80707	(4)
E) 5/16"-18 HEX NUT(35990CS ONLY)	OR90338	(4)

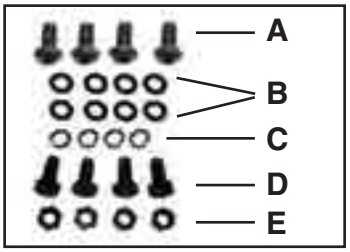

Location

Bag 5. (B) Rail Tube Screw Package

A) M6 FLAT WASHER	OR90059	(8)
B) M6 LOCK WASHER	OR90502	(8)
C) M6X16 PAN HD SCR	SC80111	(8)

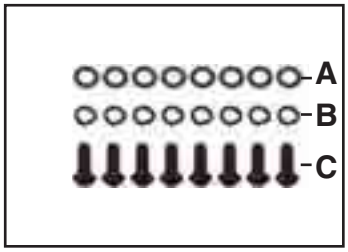

Location

Bag 6. Caster Wheel Screw Package

A) M8X16 CARRIAGE BOLT	OR94470	(2)
B) M8 HEX FLANGE NUT	OR94771	(2)
C) LEVELING SCREW	SC10529	(2)
D) M8 HEX NUT	OR90307	(2)

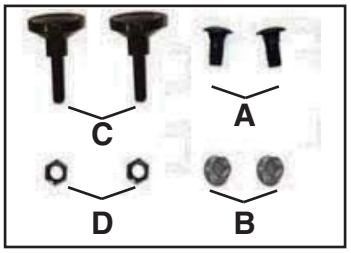

Location Location

Bag. 7 Dust Chute / Port Screw Package

A) 1/4-20 X 1/2 ROUND HD TAP SCREW	SC80408	(4)
B) M5X12 PAN HEAD SCREW	OR92137	(4)

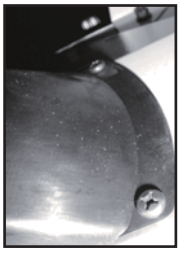

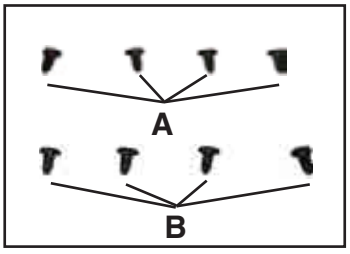

Location Location

ASSEMBLY

⚠ WARNING

- The table saw is a heavy machine; two people may be required for certain assembly operations.
- **DO NOT** assemble the table saw until you are sure the tool is unplugged.
- **DO NOT** assemble the table saw until you are sure the power switch is in the “OFF” position.
- For your own safety, **DO NOT** connect the machine to the power source until the machine is completely assembled and you read and understand this entire User Manual.

CABINET LEG ASSEMBLY

⚠ WARNING

MAKE CERTAIN THAT THE SAW IS DISCONNECTED FROM THE POWER SOURCE.

NOTE: Use **FIG. 1** as a referencing guide.

1. Remove all the doors and panels.
2. Lay the saw on back. **CAUTION:** The table saw is heavy; two people are required for this operation. Be sure to lay cardboard on the floor to protect the table and cabinet. Use wedge to have an angle.
3. Install Primary Dust Chute and the 4” Dust Adapter Port.

Fig. 1

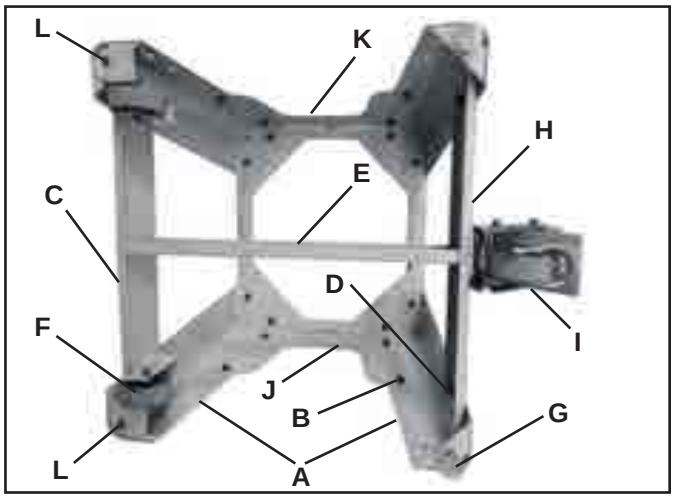

4. Attach four leg assemblies (A) to the cabinet by using 8 of each: Soc Screws, Nuts, Lock Washers and Flat Washers. Do not completely tighten hardware at this time.
5. Attach two U-shape front/ back panels by using 4 of each: Carriage Screws, Lock and Flat Washers.
6. Attach Wheel Kit by using Pan Head Allen Screws (10) and Flat Washers (2) on bottom of Legs.
7. Attach Cross Brace by using M6x16mm Pan Head Screws (4) and Lock Washers.
8. Attach the Flip Wheel to the cross bracket by using Carriage Screws (2) and Lock Nuts (2).
9. Attach two Leveling Feet with Nuts (2).
10. Tighten all hardware, starting at cabinet. With help, place machine upright. **SEE FIG. 24**

Fig. 2

HANDWHEEL ASSEMBLY

⚠ WARNING

MAKE CERTAIN THAT THE SAW IS DISCONNECTED FROM THE POWER SOURCE.

Fig. 3

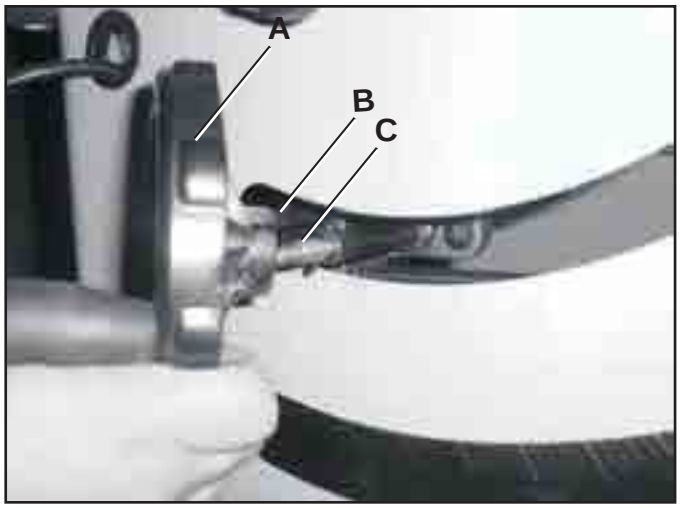

1. Place one of the handwheels (A) onto the blade raise/lower shaft (B) located on the front of the cabinet. Align the groove in the back of the handwheel with the pin (C). **SEE FIG. 3**

Fig. 4

2. Thread the locking knob (D) onto the threaded end of the shaft. **SEE FIG. 4**

   Repeat the steps above to assemble the remaining handwheel and locking knob onto the bevel shaft located on the side of the cabinet.

WRENCH AND FENCE HOOK ASSEMBLY

⚠WARNING

MAKE CERTAIN THAT THE SAW IS DISCONNECTED FROM THE POWER SOURCE.

Fig. 5

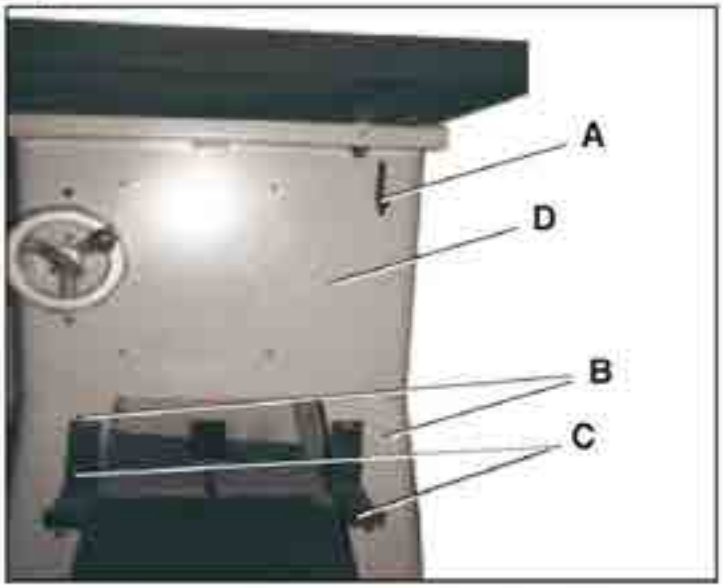

1. Assemble both of the fence hooks (C) to the left and right cabinet leg (B) using two M8x16mm carriage screws, M8 flat washer, M8 lock washer and M8 hex nut to tighten them.

2. Assemble wrench hook (A) to the right side of cabinet (D) using two M4X8mm round head tap screws. **SEE FIG.5**

spacer SC76074 (2pcs)

EXTENSION WING ASSEMBLY FOR 35990G & 35990C &35990CG

⚠WARNING

MAKE CERTAIN THAT THE SAW IS DISCONNECTED FROM THE POWER SOURCE.

CAUTION: The extension wings are heavy; two people are required to assemble both extension wings to the table saw. The installation method for granite and cast iron wing is the same.

1. One person put right/ left extension wing on the top of cabinet. Match the alignment pin (A) to the holes on the bottom of the wing. **SEE FIG. 6**

Fig. 6

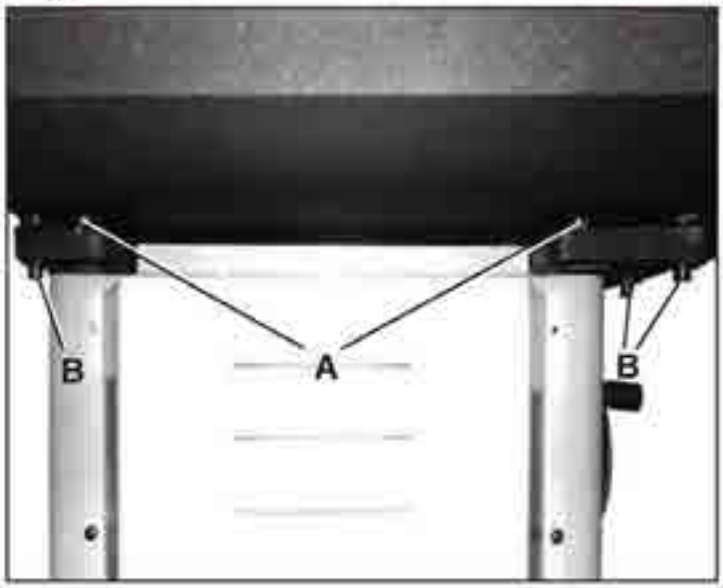

2. The other person installs 53mm Shoulder Screws (4), (B) with Flat and Spring Washers from the bottom of the cabinet. Do not fully tighten. Then use the provided spacer, fit into the mitre slots to achieve proper width for the mitre guage. Tighten the Shoulder Screws in place and remove the mitre slot spacer.

NOTE: The Pre-adjustment and Pre-setting of the extension wings for the flatness has been completed in Factory.

3. To adjust wings, if needed, loosen the set screws by 2.5mm Allen Wrench at (C) location. **SEE FIG. 7**

4. Use blade wrench to adjust the hollow bolt (B). **SEE FIG. 8**

5. Tightening the set screws (C). **SEE FIG. 7**

6. Use a straight edge across to the main table and extension wings, checking the flatness on all as assembled. **SEE FIG. 9**

7. If the wings are not leveled, please repeat Step 3 to 5.

Fig. 7

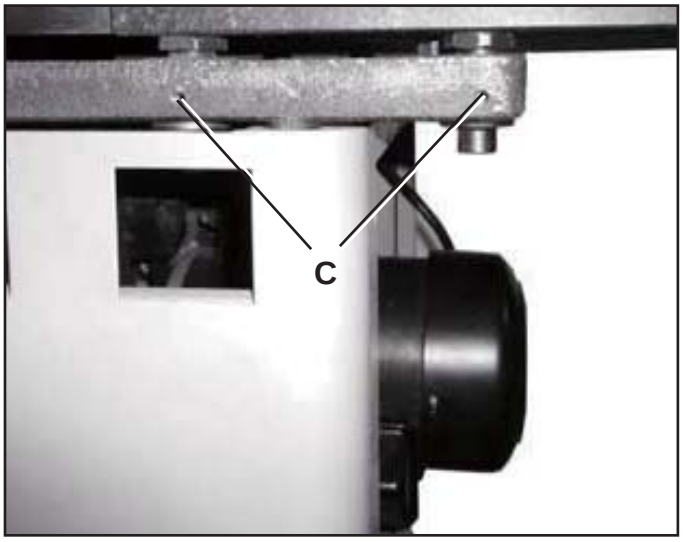

Fig. 8

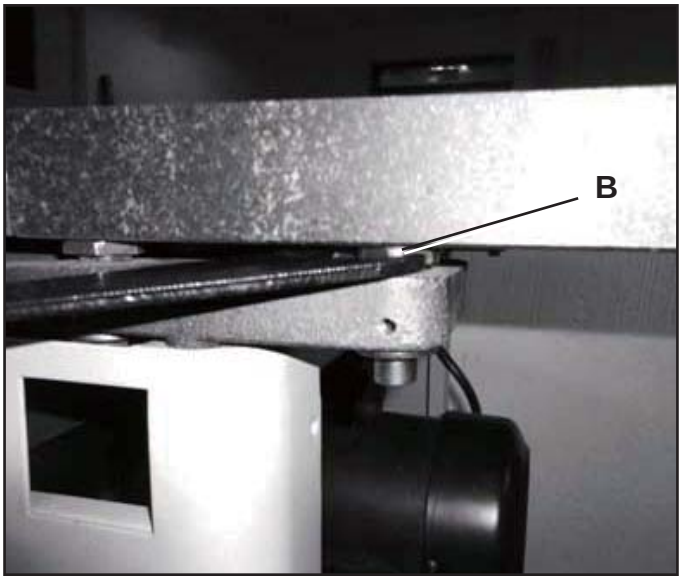

Fig. 9

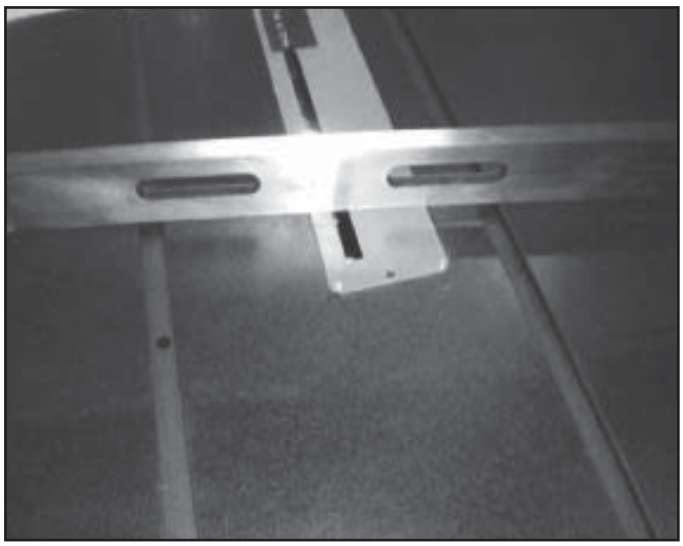

35990CS&35990SS EXTENSION WING ASSEMBLY PROCEDURES

⚠ WARNING

MAKE CERTAIN THAT THE SAW IS DISCONNECTED FROM THE POWER SOURCE.

1. The extension wings are heavy; two people are required to assemble both extension wings to the table saw.

Fig. 10

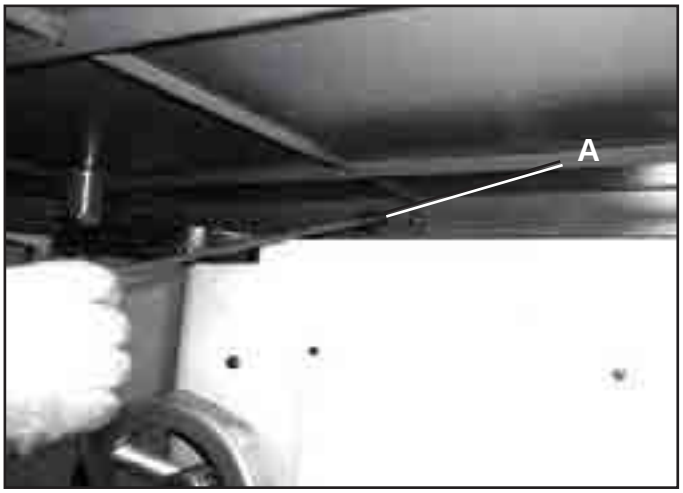

2 One person put right/left extension wing on the top of cabinet. And align the three mounting hole of wing to the hole of table, Another person use M8x16mm hex soc head screw (A) with M8 lock washer and M8 flat
. washer to secure it, do not tighten them completely. **SEE FIG.10**

4. Using two 5/16-18x28mm hex soc head screw (B)with M8 lock washer and M8 flat washer through the hole of the bottom of cabinet and tighten them. **SEE FIG.11**

Fig. 11

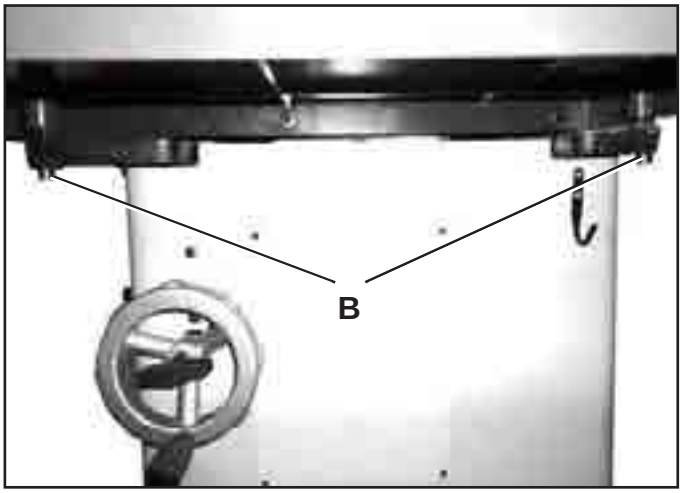

NOTE: To adjustment for this unit, please refer to the page 18-19 of extension wing assembly.

FENCE & RAIL ASSEMBLY PROCEDURES

⚠ WARNING

MAKE CERTAIN THAT THE SAW IS DISCONNECTED FROM THE POWER SOURCE.

1. Fasten the front rail to the table top using four 5/16-18x5/8mm Pan Head Soc Head Screws (A) **SEE FIG.13**

Fig. 13

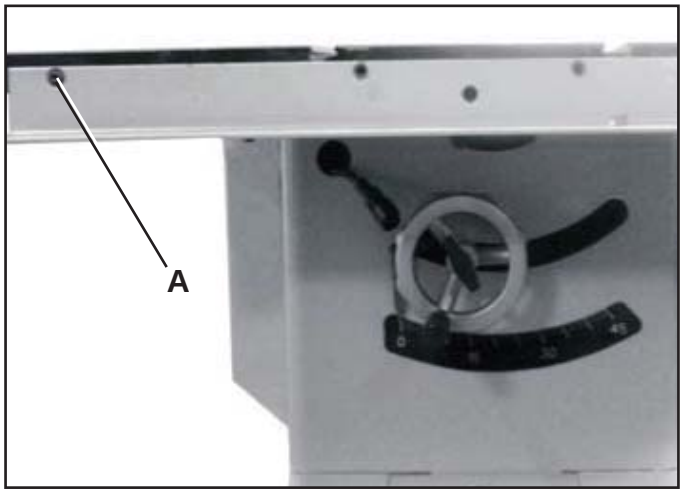

2. Fasten both rear rails to the table using four 5/16-18x5/8mm Hex Head Screws (B) with M8 Flat Washer and M8 Lock Washer. **SEE FIG.14**

Fig. 14

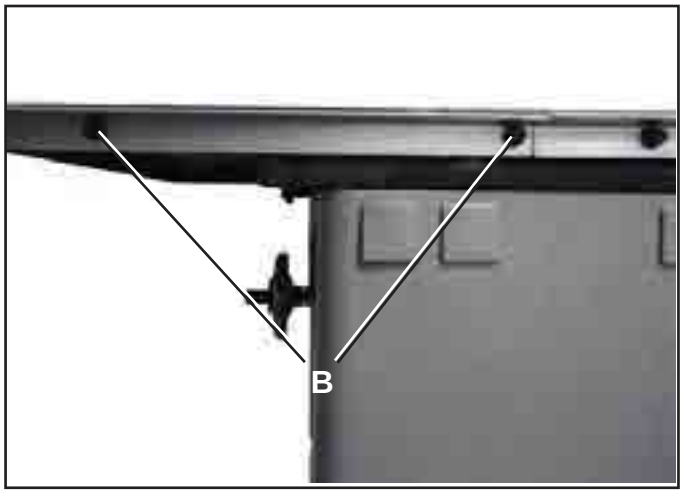

3. Connect the right guide tube (long) and left guide tube (short) with cap (D), and place them on the front rail. **SEE FIG. 15**
4. The guide tube must be fasten by eight M6X16mm Allen Pan Head screws (C) with M6 Flat Washer and M6 Lock Washer. **SEE FIG.15**

Fig. 15

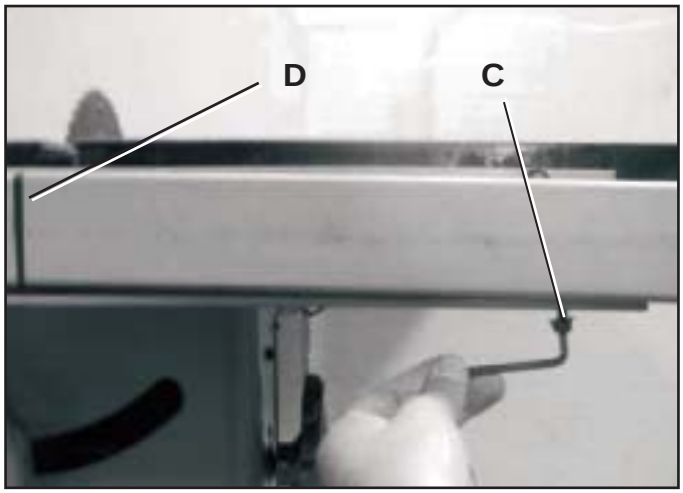

5. Place the Fence Body (E) on the table top and against the blade to make sure that if the "zero" scale on the cursor (F) is align with the "zero" scale of the right/left scale label stuck on the guide tube.
6. Loosen the pan head screw (G) and move the cursor (F) till the zero scale aligns with the zero scale on the right/left scale. **SEE FIG.16**

Fig. 16

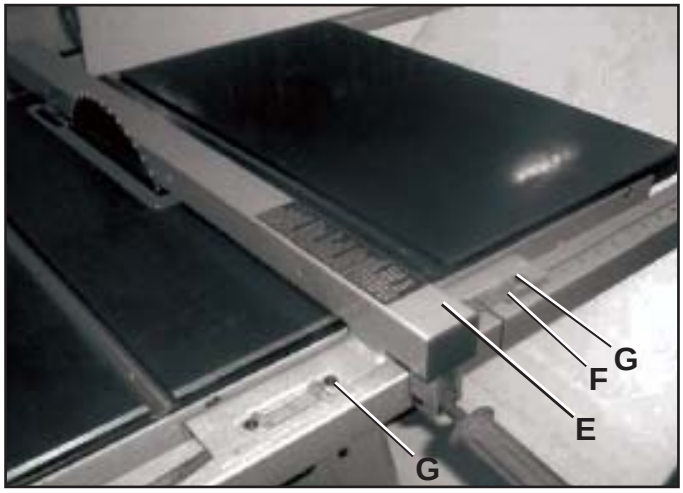

7. Install switch assembly with two M6x16mm Allen Pan Head Screws, Washers and Lock Washers (H). **SEE FIG.17**

Fig. 17

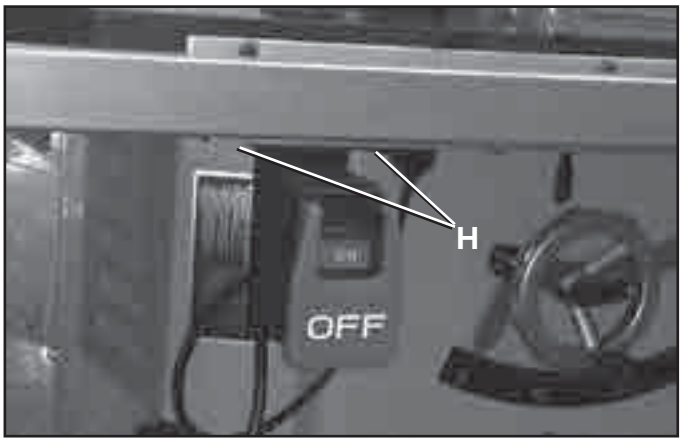

CONNECTING SWITCH CORD TO MOTOR CORD

⚠ WARNING

MAKE CERTAIN THAT THE SAW IS DISCONNECTED FROM THE POWER SOURCE.

1. Place the switch cord (A) through hole (B) in front of Cabinet. **SEE FIG. 18**

2. Open motor cover, insert three prong switch cord (C) into three hole outlet (D) of the motor cord. **SEE FIG. 19**

Fig. 18

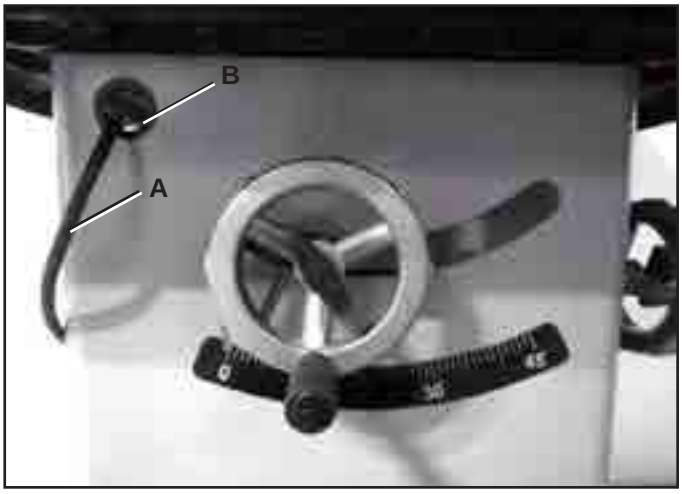

3. Pull slack in switch cord into the cabinet. Make sure that the power cord inside of the cabinet is properly routed and clear of the saw blade and any pinch points for all blade height and blade angle settings.

Fig. 19

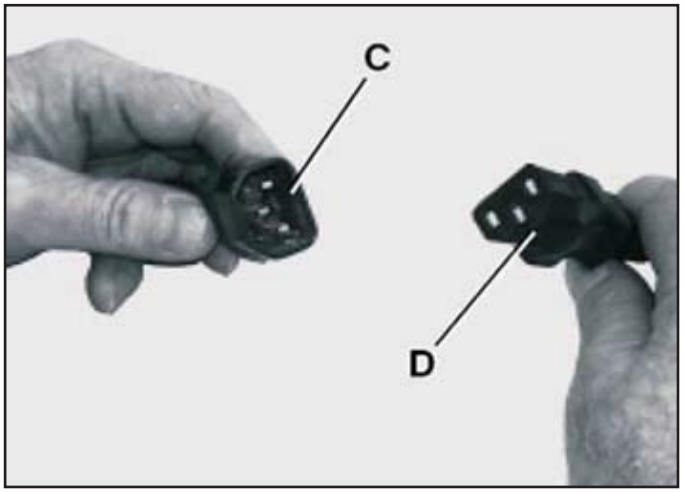

INSTALLATION AND LEVELING

Final location for the saw must be level, dry, well lighted, and have enough room to allow movement around the msaw with long pieces of wood stock.

Level the saw front to back and side to side, using a carpenter's level placed on the table. Use shims under the corners, if necessary, but make sure the saw is stable before being placed into service.

RIVING KNIFE / SPLITTER COMPONENTS ASSEMBLY

⚠ WARNING

MAKE CERTAIN THAT THE SAW IS DISCONNECTED FROM THE POWER SOURCE.

NOTE: Remove the table insert (Table insert are gripped by four magnets on the table).

Fig. 20

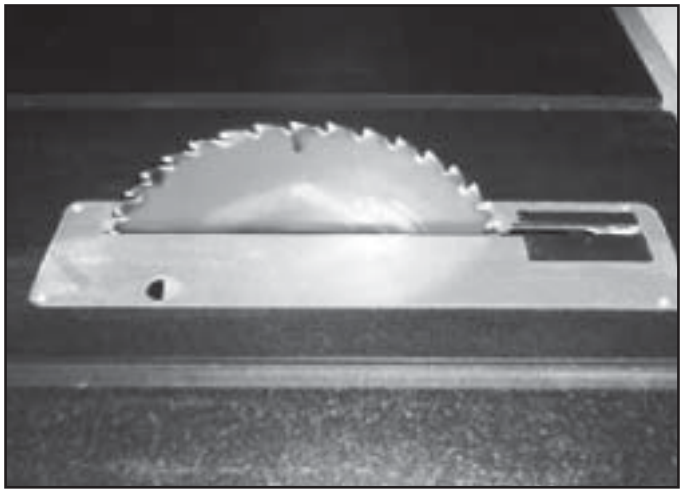

INSTALLING AND REMOVING THE RIVING KNIFE / SPLITTER

To Install:

1. Loosen the knob by pulling upwards (C), Line up the riving knife/splitter in the proper direction to the mounting bracket (B). **SEE FIG. 21**
2. Push the Riving Knife/ Splitter all the way down into the mounting bracket, make sure the location pin is properly locked in the hole of the Riving Knife/ Splitter. (The location hole is on the button side of the Riving Knife/ Splitter).
3. Tighten the fasting knob by lowering down (C). **SEE FIG. 22**

To Remove:

1. Loosen the fasten knob (C). **SEE FIG. 22**
2. Remove the Riving Knife/ splitter out of mounting bracket (B). **SEE FIG. 22**

NOTE: Make sure blade or arbor is at the highest position before adding or removing the riving Knife/ Splitter.

Fig. 22

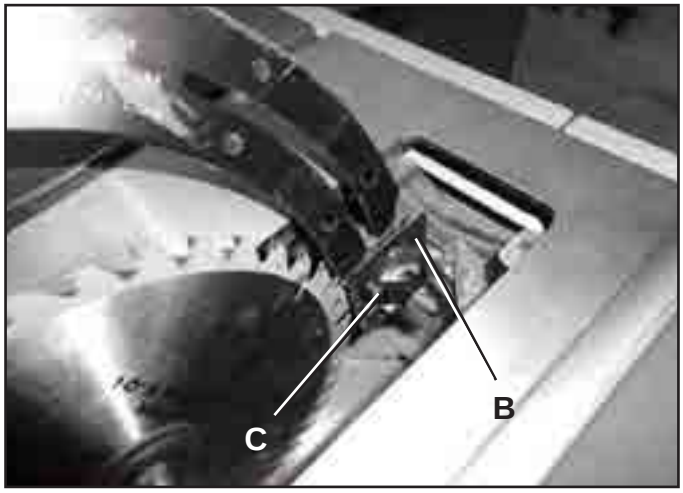

Fig. 22

BLADE ASSEMBLY

⚠ WARNING

MAKE CERTAIN THAT THE SAW IS DISCONNECTED FROM THE POWER SOURCE.

Fig. 23

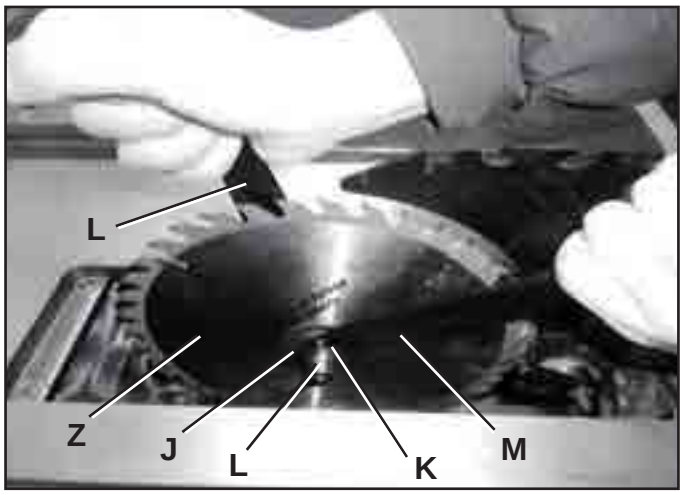

1. Remove the hex nut (K) and outer flange (J) from the blade arbor (I).

NOTE: The arbor has a right hand thread; to loosen the hex nut turn it counterclockwise by using the supplied wrenches.

2. Place a 10” saw blade (Z) onto the blade arbor (I), make sure the teeth of the blade are pointing down in the front of the table saw. Place the outer flange (J) and hex nut (K) onto the blade arbor and snug hex nut by hand. Place the open-end blade wrench (L) on the flats of the inner blade flange (not shown) and the box-end blade wrench (M) onto the hex nut and securely tighten. **SEE FIG. 23**

NOTE: The blade arbor has a right hand thread, to tighten the hex nut turn it clockwise.

Fig. 24

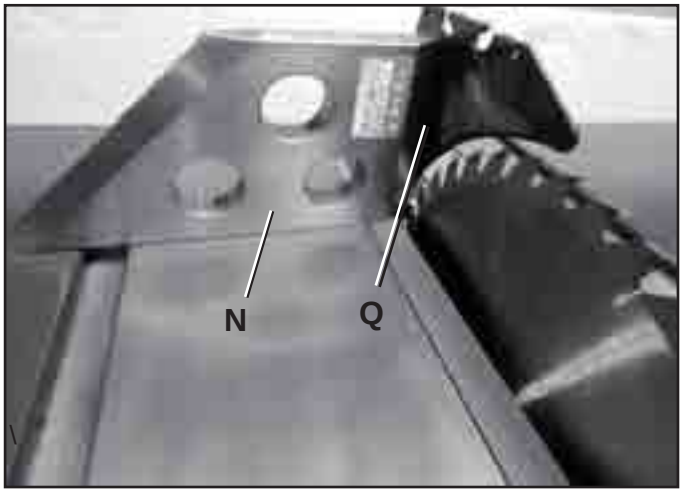

3. Place a square (N) onto the saw blade and against the splitter assembly (O). Make sure the splitter is square to table. **SEE FIG.24**

4. Lay a straight edge (R) against the left side of the saw blade (S) Align the splitter and make sure the splitter is aligned to the blade. **SEE FIG.25**

Fig. 25

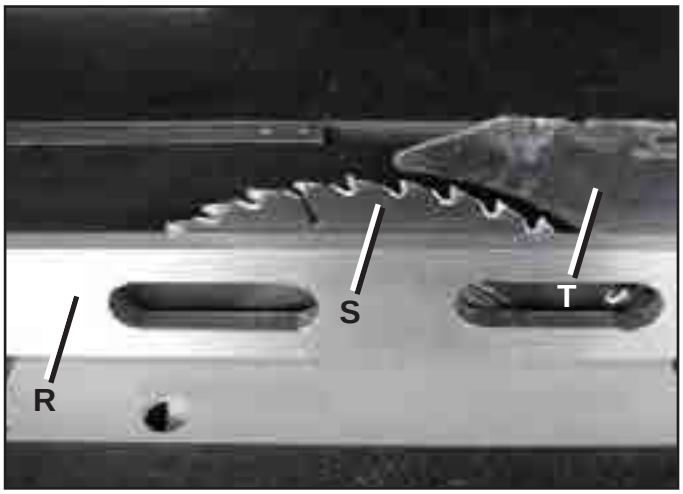

CONVERSION THE SPLITTER TO RIVING KNIFE

⚠ WARNING

MAKE CERTAIN THAT THE SAW IS DISCONNECTED FROM THE POWER SOURCE.

NOTE: Splitter can be used as riving knife.

1. Remove the guard assembly(C) and kick-back pawl assembly (D) by loosing knob (A) and (B). **SEE FIG. 26**

Fig. 26

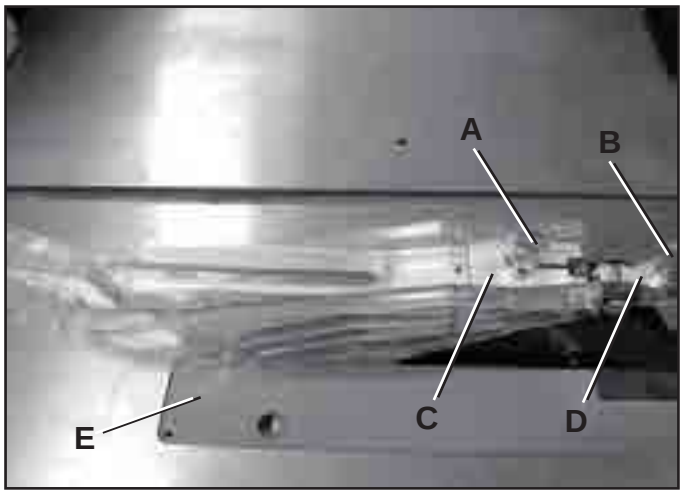

2. Remove the table insert (E). **SEE FIG. 26**

Fig. 27

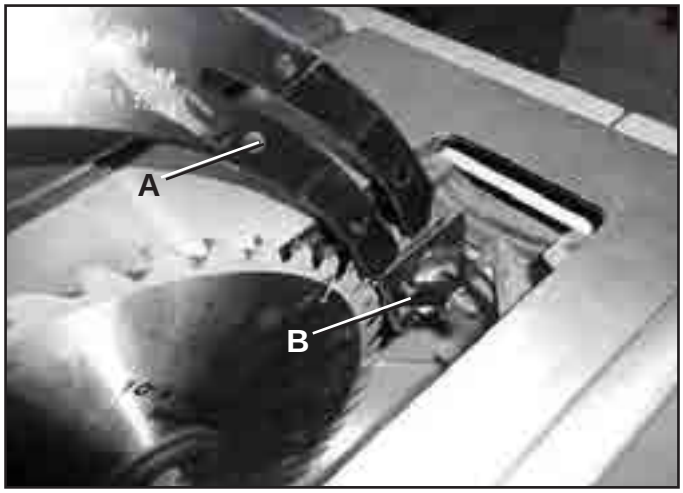

3. Loose Fasten Knob (B) and locate pin to hole (A). **SEE FIG. 27**

4. Tighten the Knob (B) and re-install the table insert. **SEE FIG. 27**

ADJUSTMENTS

RAISING AND LOWERING THE BLADE

Fig. 28

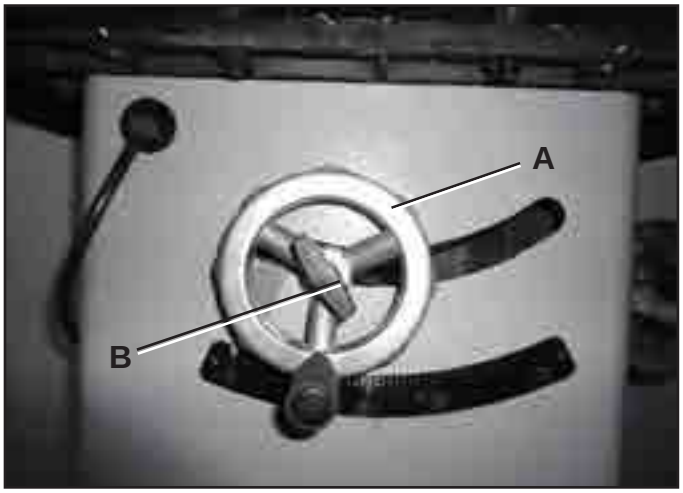

The blade height adjustment handwheel and handwheel lock knob are located on the front of the cabinet above the blade bevel scale. To raise the saw blade, loosen the handwheel lock knob (B) (counterclockwise) and turn the handwheel (A) clockwise. When the saw blade is at its desired height, tighten the handwheel lock knob (clockwise) until it is securely tightened.

To lower the saw blade, loosen the handwheel lock knob (counterclockwise) and turn the handwheel counterclockwise. When the saw blade is at its desired height, tighten the handwheel lock knob (clockwise) until it is securely tightened. **SEE FIG. 28**

TILTING THE BLADE

The blade bevel handwheel and handwheel lock knob are located on the right side of the cabinet. To increase the saw blade bevel, loosen the adjustment knob (C) and then turn the hand wheel clockwise. When the saw blade is at its desired degree, tighten the adjustment knob (clockwise) (C). **SEE FIG. 28A**

Fig. 28A

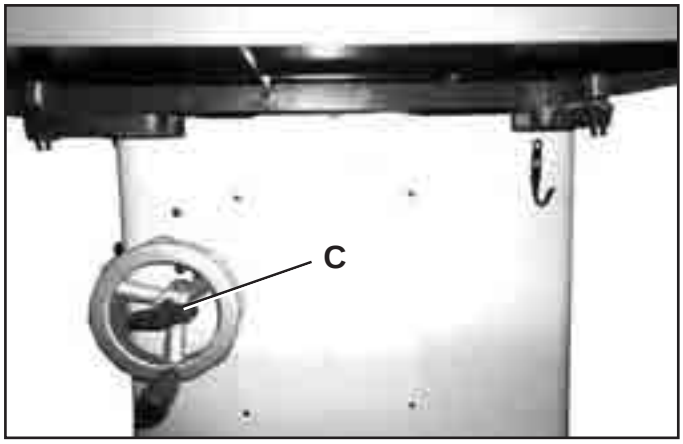

ADJUSTING BLADE BEVEL POSITIVE STOP

Fig. 29

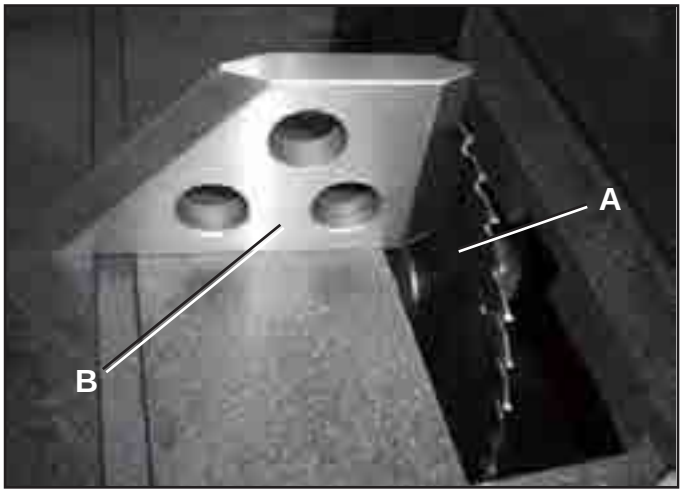

1. To adjust blade to a 90-degree blade bevel positive stop, raise the saw blade (A) to its highest position. **SEE FIG. 29**
2. Using a combination square (B) check that the blade is 90 degrees to the saw table (zero degrees on bevel Scale).
3. If the blade will not tilt to 90 degrees, when the set screw contacts the stop position, and turn it until the blade can be positioned to 90 degrees.
4. Once the blade has been tilted to 90 degrees (confirm this using your square), tighten the adjustment handle, located on the front of the cabinet. This will keep the blade from tilting further. **SEE FIG. 28**
5. If the blade will not tilt to 45 degrees, when the set screw (D) contacts the stop position and turn it until the blade can be positioned to 45 degrees. **SEE FIG. 30**

Fig. 30

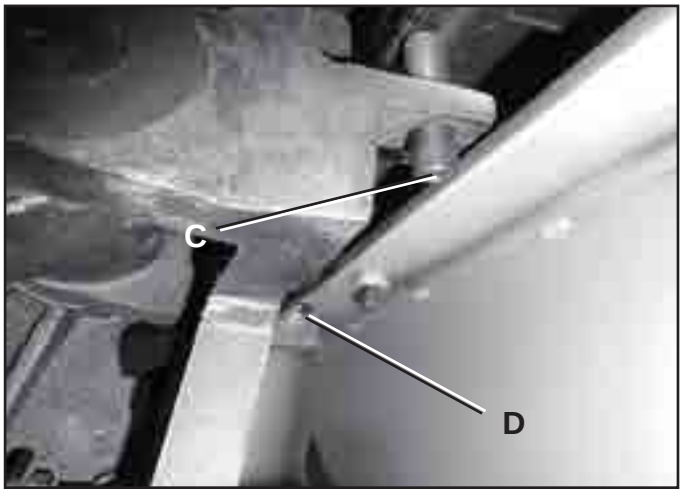

Fig. 31

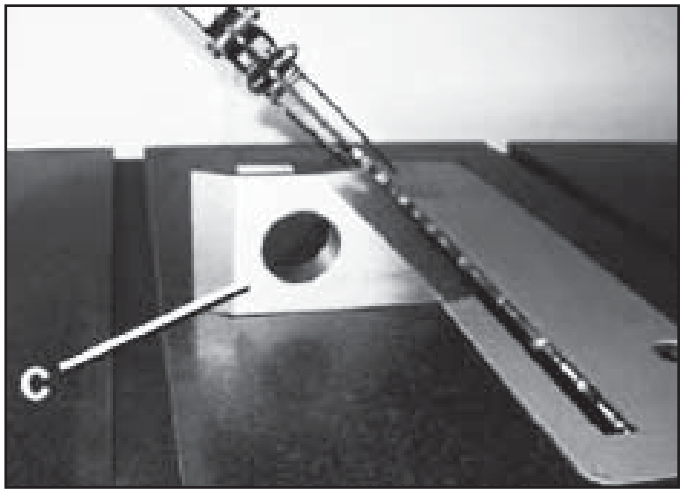

6. Using a combination square (C), make sure that the blade is at 45 degrees. **SEE FIG. 31**
7. With the blade at 45 degrees, tighten the adjustment handle to keep the blade from further tilting.
8. Turn the set screw clockwise until it comes in contact with the positive stop (D). **SEE FIG. 30**

CHECKING BLADE ALIGNMENT

Blade heel is the misalignment of the blade to the miter slots. This means that the blade is not parallel to the miter slots. The blade is set parallel at the factory and should not need any adjustments. You can check this by using a dial indicator (not included) or a combination square (not included). It is recommended to check the alignment before initial operation as follows:

⚠ WARNING

MAKE CERTAIN THAT THE SAW IS DISCONNECTED FROM THE POWER SOURCE.

Fig. 32

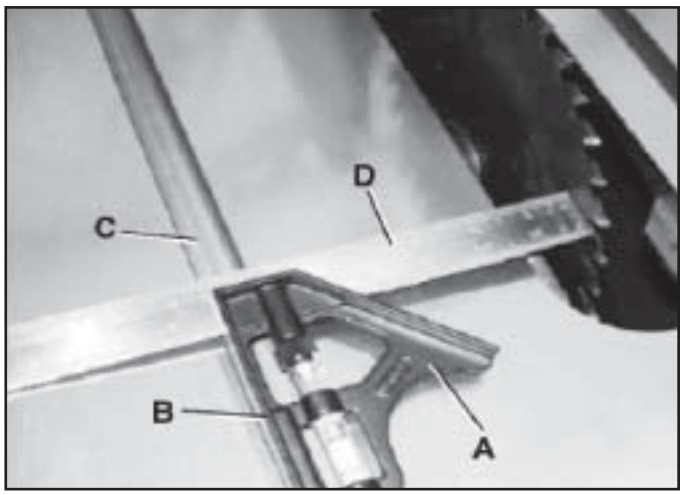

1. Raise the saw blade to its highest point.
2. Place a combination square (A) on the saw table with one edge (B) of the square against the left miter slot (C). **SEE FIG. 32**
3. Adjust the square so the rule (D) just touches the saw blade. Make sure the rule is not touching any of the carbide tips of the saw blade.
4. Lock the rule in this position.

Fig. 33

6. Rotate the saw blade back so that you take the measurement from the same spot on the saw blade. **SEE FIG. 33**
7. Take a reading at the rear of the blade (E) with the combination square. If there is a difference of more than. 01 in between the rule and the blade, then an adjustment will have to be made.

ADJUSTING BLADE ALIGNMENT

NOTICE: Blade alignment is factory set and should not need adjustment. All saw blades have some runout. Therefore, readjusting the blade alignment should only be attempted if it becomes necessary (see "CHECKING BLADE ALIGNMENT")

⚠ WARNING

MAKE CERTAIN THAT THE SAW IS DISCONNECTED FROM THE POWER SOURCE.

1. To align the blade parallel to the miter slot, first loosen two hex soc head screws (A) under the front side of the table saw. This is the same side as the raise/lower handwheel (B). **SEE FIG. 34**

2. Remove the End cap on the rear side of the table saw, Loosen two hex soc head screws (C). **SEE FIG. 35**

3. The saw table is now loose and can be repositioned until the blade is parallel to the miter slot. Repeat steps in **"CHECKING BLADE ALIGNMENT."**

Fig. 34

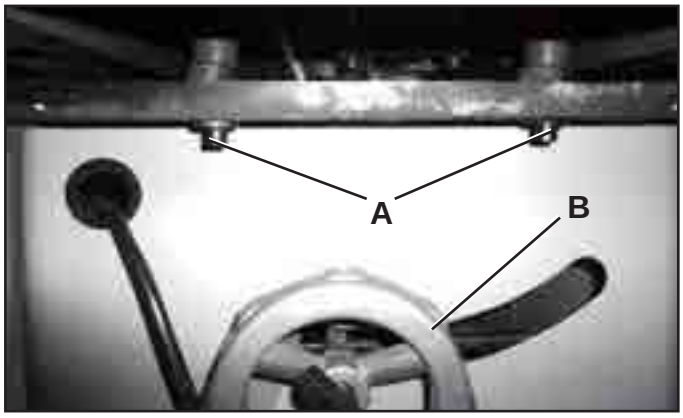

Fig. 35

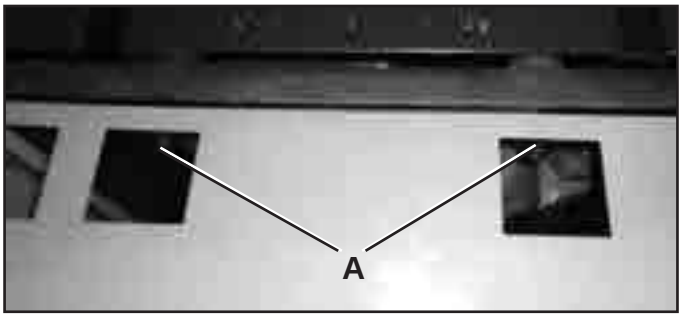

4. When blade is parallel to miter slot, tighten all four hex soc head screws.
5. Recheck blade alignment.
6. Tilt the blade to 45 degrees, and rotate the saw blade by hand. Make sure the blade does not contact the table insert.

BEVEL ARROW ADJUSTMENT

1. Make certain that the blade is at 90-degrees to the table surface with a combination square.
2. Check that the bevel arrow is pointing to the zer degree mark on the bevel scale located on the front of the cabinet.
3. To adjust arrow, loosen the Phillips head screw (A), and reposition the bevel arrow and tighten screw.

Fig. 36

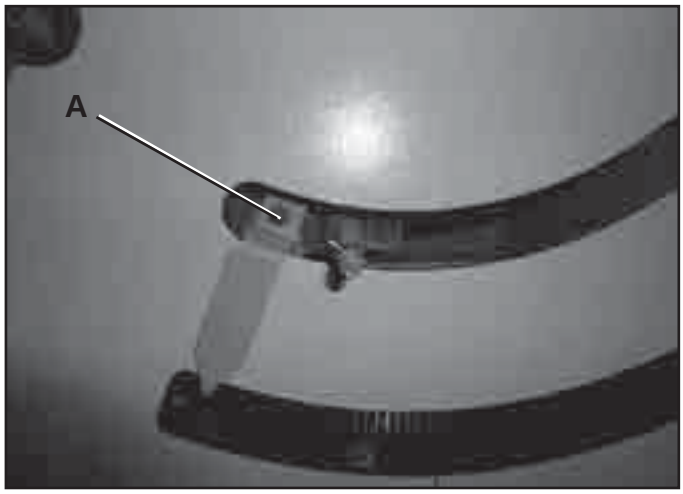

POLY-V BELT ASSEMBLY

1. Loosen 6 of M5x10mm cross pan head tap screws (A) and remove the cabinet access door. **SEE FIG. 37**

Fig. 37

2. Install the belt on the Arbor Pulley and raise motor by loosing 1 of the motor mounting bolts (B) and nuts (C) to reach the belt distance for assembling the belt on the motor Pulley. **SEE FIG. 38 & FIG. 39**

Fig. 38

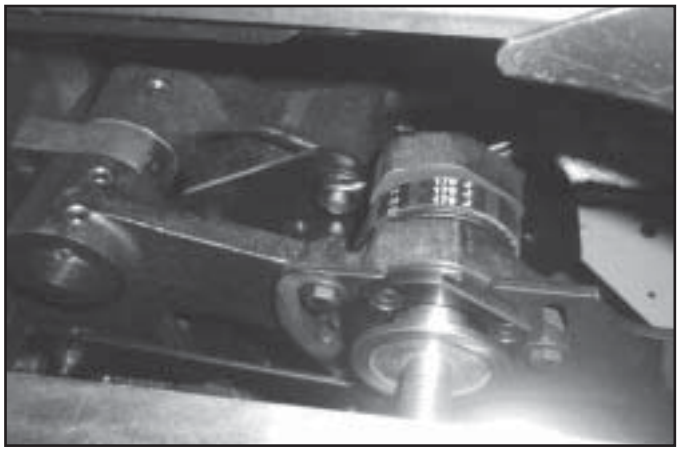

Fig. 39

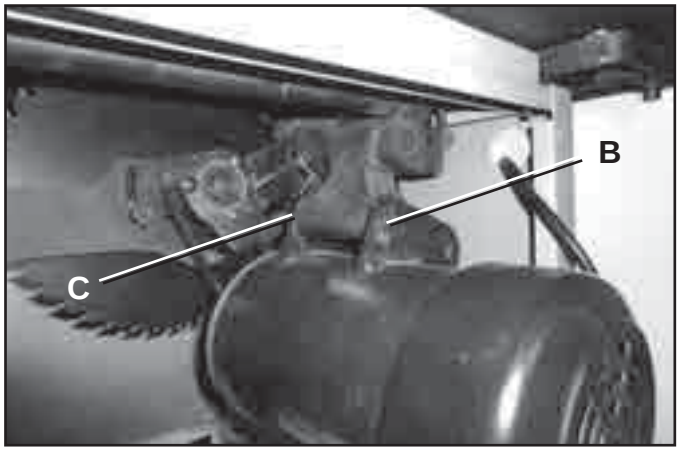

3. Replace the cabinet access door.

TABLE INSERT ADJUSTMENT

⚠ WARNING

MAKE CERTAIN THAT THE SAW IS DISCONNECTED FROM THE POWER SOURCE.

Fig. 40

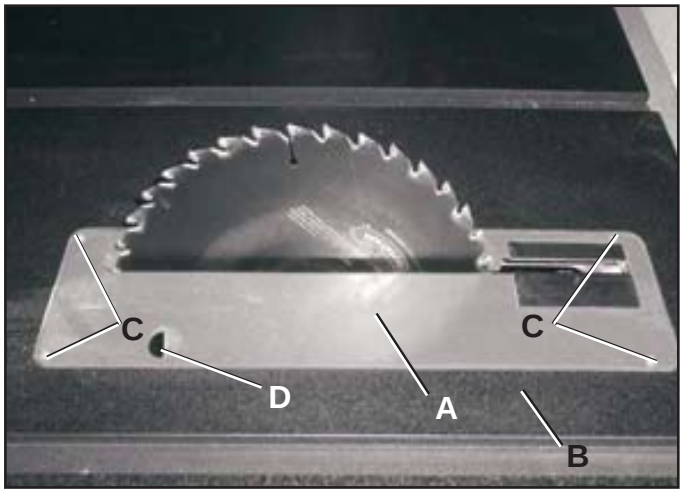

1. The table insert (A) must always be level with the saw table (B).
2. Place a straight edge across the front and rear of the table insert. Check that the insert is perfectly level with the saw table.
3. To level the table insert, turn the one or more adjusting set screws (C) as needed and recheck.
4. The table insert is equipped with a finger hole (D) for easy removal. **SEE FIG. 40**

MITER GUAGE ADJUSTMENT

⚠ WARNING

MAKE CERTAIN THAT THE SAW IS DISCONNECTED FROM THE POWER SOURCE.

Fig. 41

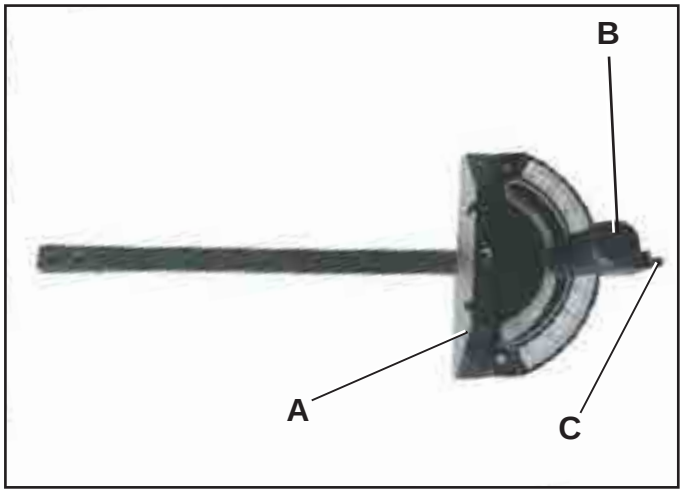

1. The miter gauge has adjustable positive stops at 0-degree and 45-degrees or it can be manually set at any angle between 60-degrees.
2. To rotate miter gauge body (A), loosen knob (B) and pull out plunger (C) and rotate miter gauge body to desired angle and tighten knob.
3. To rotate to the next positive stop, pull plunger (C) out, rotate miter gauge body then push plunger back in and continue rotating miter gauge body until it stops against next positive stop.

ADJUSTING POSITIVE STOPS

Fig. 42

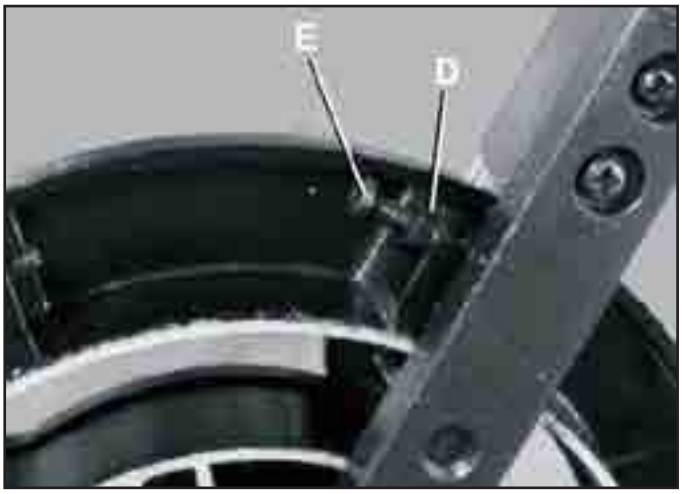

1. To adjust 0-degree positive stops, loosen knob (B), pull out on plunger (C) and turn miter gauge over.
2. Loosen the lock nut (D) 3 or 4 turns. **SEE FIG. 42**
3. Place a square against the guide bar and front of the miter gauge body. Square the miter gauge body to the guide bar and tighten knob.
4. Push in plunger and make adjustments to stop screw (E) so that it touches the plunger and tighten lock nut.
5. Recheck the positive stop angle to the saw blade. insert the guide bar into the miter slot and slide the miter gauge up to the saw blade.
6. To check, place a square against the saw blade and miter gauge body. If any more adjustments are needed repeat steps above.
7. To set both 45-degree positive stops, repeat steps 1 thru 6 above at the 45-degree settings.

OPERATIONS

⚠ CAUTION

- A separate electrical circuit should be used for your table saw. The circuit should not be less than #14 AWG wire and should be protected with a 15-amp time lag fuse.
- Have a qualified electrician repair or replace damaged or worn cord immediately.
- Before connecting the motor to the power line, make certain the switch is in the “OFF” position and be sure that the electric current is of the same characteristics as the motor nameplate. All line connections should make good contact.
- Running on low voltage or long extension cords will damage the motor.

⚠ WARNING

- **DO NOT** expose the table saw to rain or operate the in damp locations.
- **MAKE SURE** all parts have been assembled correctly and are in working order.
- **KEEP** table surface clear of tools and debris before starting table saw.

STARTING AND STOPPING THE SAW

Fig. A

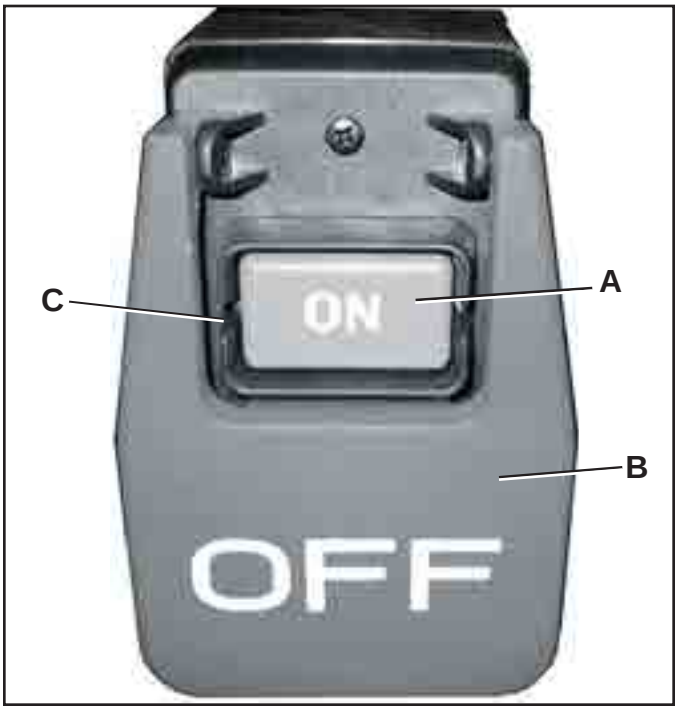

1. The ON/OFF switch is located under the front rail on the table saw.
2. To turn the table saw on, press the green “START” button (A) in one-half inch. Note: There is a safety feature on the switch to insure that the switch must be completely pressed before the saw will START. **SEE FIG. A.**
3. To turn the table saw off, press the large red “OFF” paddle (B) or lift the paddle and press directly on the red “OFF” button.
4. When the table saw is not in use, the “ON” button should be locked so that it cannot be started.
5. Using a padlock (not provided), it is possible to lock the switch to prevent unauthorized use. Lift the red “OFF” paddle and place a padlock through the holes (C) in the side of the “ON” button and then lock the padlock. Make sure keys have been removed from padlock and placed where no children can get them. **SEE FIG. A.**
6. To use the table saw, unlock and remove the padlock from the “ON” button.

THERMAL-OVERLOAD PROTECTION

⚠ WARNING

- Turn the power switch “OFF” and unplug the power cord from its power source prior to doing or performing any maintenance.
- Make certain that the “OFF” button has been depressed before pushing the thermal-overload reset button.

The motor supplied with your table saw has a resettable thermal-overload relay located on the side of the switch. If the motor shuts off during an operation (cutting a workpiece too fast or using a dull blade, using the saw beyond its capacity, or low voltage) press the “OFF” button and let the motor cool three to five minutes. Push the reset thermal-overload button on the side of the ON/OFF switch assembly. Make certain that the saw blade and work area has been cleared of debris before restarting saw. The motor can now be turned on again.

⚠ WARNING

MAKE CERTAIN THAT THE SAW IS DISCONNECTED FROM THE POWER SOURCE.

⚠ WARNING

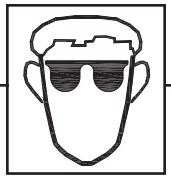

ALWAYS wear eye protection. Any machine can throw debris into the eyes during operations, which could cause severe and permanent eye damage. Everyday eyeglasses are **NOT** safety glasses. **ALWAYS** wear Safety Goggles (that comply with ANSI standard Z87.1) when operating power tools.

⚠ WARNING

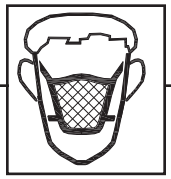

ALWAYS wear a NIOSH/OSHA approved dust mask to prevent inhaling dangerous dust or airborne particles.

NOTICE

The following section was designed to give instructions on the basic operations of this table saw. However, it is in no way comprehensive of every table saw application. It is strongly recommended that you read books, trade magazines, or get formal training to maximize the potential of your table saw and to minimize the risks.

PRE-RUN CHECK

Before you begin to use your Table Saw, you should give it a thorough inspection, making sure you ask yourself the following questions:

1. Is the blade mounted correctly?
2. Is the saw stable?
3. Is it wired properly?
4. Is your electrical system properly configured?
5. Haved you checked your workpiece for obvious defects?
6. Is the guard assembly installed and functional?
7. Have you checked the saw blade clearance when it is adjusted to varying angles and depths?
8. Have you read all the warnings and directions regarding the operation of this machine?

TEST RUN

1. Face the table saw and stand to the left of the blade path.
2. With one finger on the ON button and one finger on the OFF button, turn the saw on. Be ready to turn the saw off in case of a mishap.
3. Watch and listen to the saw. Note whether there are any unusual sounds or excessive vibrations.
4. If anything appears abnormal, immediately turn off the saw, unplug it, and fix the problems. If a problem exists that is beyond the scope of this manual, contact your dealer.
5. If the saw is behaving normally, turn it off and prepare to make a cut according to the instructions outlined in this section.

BLADE SELECTION

Choosing the correct blade for the job is essential for the safe and efficient use of your table saw. Ignoring this important step could result in damage to the saw and serious injury to the operator. Below are the most common saw blades and their uses.

1. **Rip Blade:** Used for cutting with the grain. Typically, 10” rip blades have between 18-40 teeth and large gullets to allow for large chip removal. **SEE FIG. 31.**

Fig. 31

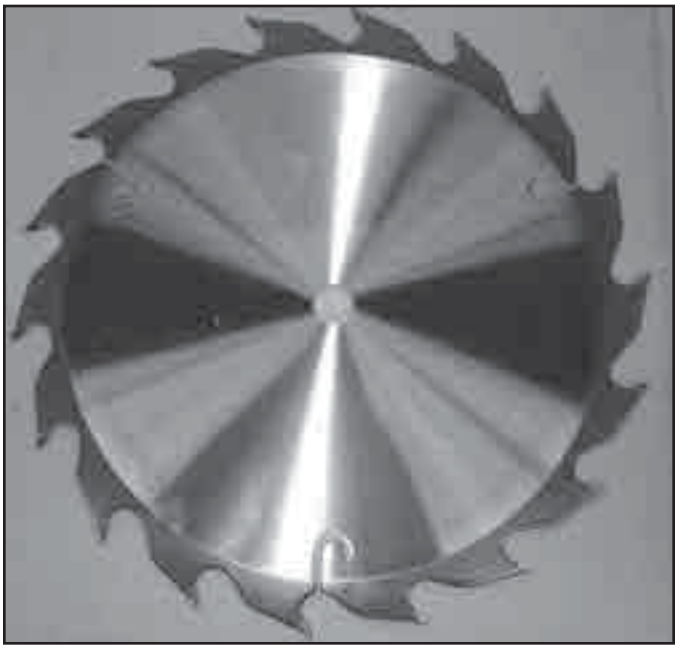

2. **Cross-cut Blade:** Used for cutting across the grain. 10” cross-cut blades have between 60-80 teeth and a shallow gullet. **SEE FIG. 32.**

Fig. 32

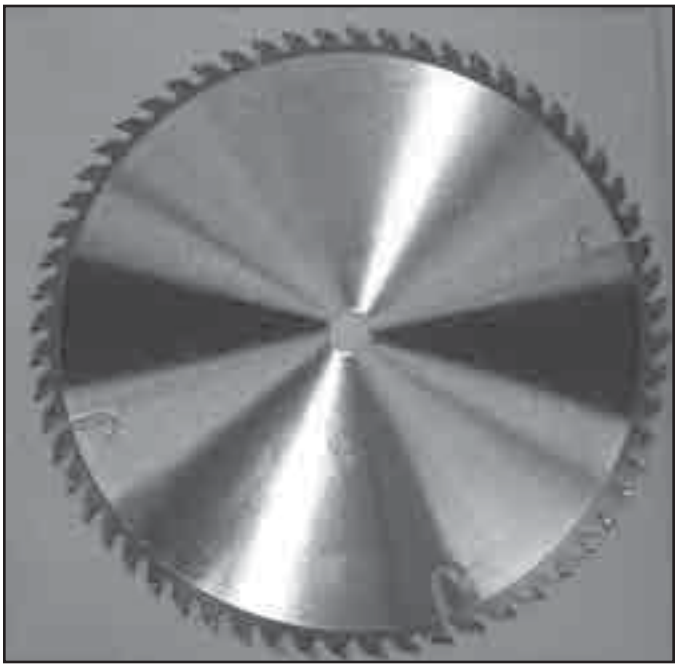

3. **Combination Blade:** Used for cutting with and across the grain. A compromise between a rip blade and a cross-cut blade, a 10” combination blade will typically have between 40-50 teeth. **SEE FIG. 33.**

Fig. 33

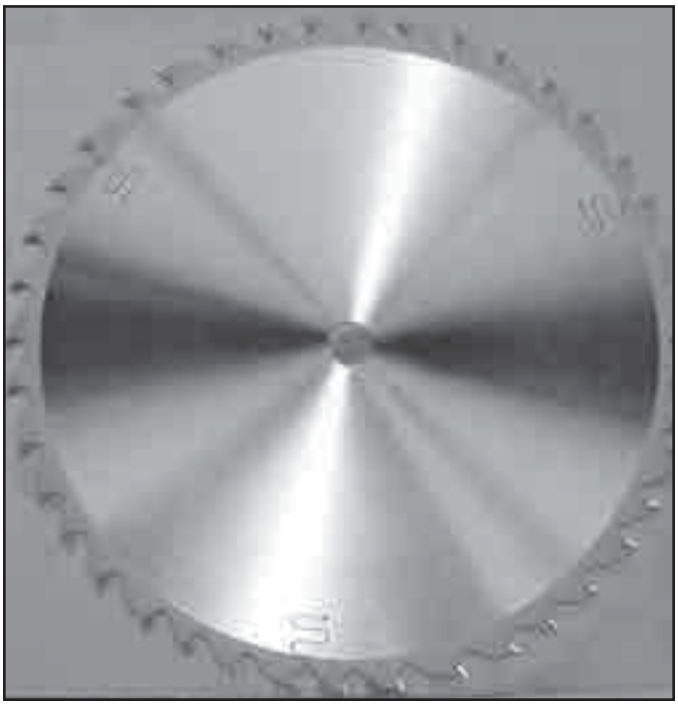

4. **Thin-kerf:** Most types of saw blades are available in a thin-kerf style. Designed primarily to minimize stock waste, thin-kerf blades are used in conjunction with a blade stabilizer to reduce blade wobble. **Note:** Many blade guards/splitters are thicker than many thin-kerf blades. Make sure that the stock will pass by the guard/splitter before beginning a cut.

5. **Dado Blades:** There are two types of dado blades: stack and wobble. Stack dadoes involve more set-up time, but they provide a superior finish cut when compared to a wobble dado.

6. **Moulding Heads:** A moulding head is a cutterhead that attaches to the arbor and holds individual moulding knives. They are very dangerous and require training beyond the scope of this manual.

This section on blade selection is by no means comprehensive. Always follow the saw blade manufacturer’s recommendations to assure safe and efficient operation of your table saw.

CROSSCUTTING

Crosscutting means cutting across the grain of the wood. In wood products without grain (i.e. MDF, particleboard), crosscutting simply means cutting across the width of the stock.

Crosscuts are made with the miter gauge. There are two miter gauge slots in the table top. Use the one that works best for the piece being crosscut. **To make a crosscut using the miter gauge:**

1. Inspect the board for soundness. You do not necessarily need a square edge to crosscut with accuracy.
2. Inspect the miter gauge. Is it properly set and tight? Move the rip fence completely out of the way.
3. Turn on the saw and allow it to come to full speed.
4. Hold the workpiece firmly against the face of the miter gauge and ease it into the blade and through the workpiece. **SEE FIG. 34.**

Fig. 34

5. Turn off the saw and allow the blade to come to a full stop.

⚠ WARNING

Small cutoff pieces can contact the moving blade and be thrown back toward the operator. Always use the least amount of clearance between the table insert and the blade to reduce the risk of injury from these pieces. Never attempt to grab these pieces while the table saw is turned on. Your hand may come into contact with the blade. Turn the table saw off and safely remove these pieces AFTER the blade has come to a complete stop.

RIPPING

Ripping means to cut with the grain of the wood. In other materials such as MDF or plywood, ripping simply means to cut lengthwise. **To rip a board:**

1. Inspect the board for soundness. You will need a straightedge to rip with accuracy. Your workpiece may need to be jointed flat before attempting to cut on the table saw.

⚠ WARNING

Never attempt to rip a board that does not have one perfectly straight edge on it. Always run the straight edge of the board against the rip fence. Failure to do this could result in kickback and serious personal injury.

2. Set the rip fence to the desired distance from the blade. **IF YOU ARE MAKING NARROW CUTS, USE A PUSH-STICK**. Serious injury can occur if you put your hands close to the blade. A push-stick pattern has been included at the end of this manual. Use it to hold the workpiece against the table and fence and push the workpiece fully past the blade. When a small width is to be ripped and a push-stick cannot be safely put between the blade and rip fence, rip a larger piece to obtain the desired piece.
3. Turn on the saw and allow it to reach full speed. Place the trued edge of the board against the rip fence. Feed the workpiece slowly and evenly into the blade and through the workpiece. When ripping, always stand off to the side of the workpiece and push it through, making sure to keep your fingers out of line with the blade. **SEE FIG. 35**.

Fig. 35

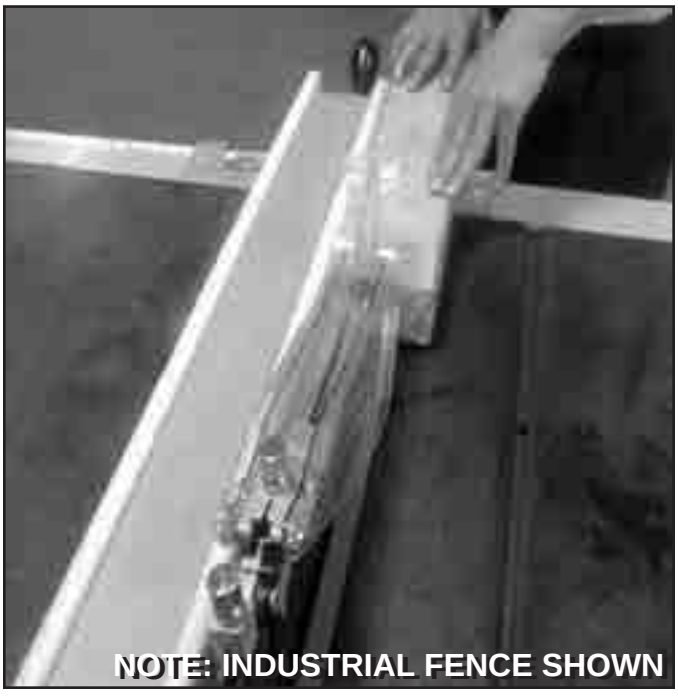

Do not stand directly behind the workpiece when ripping. **SEE FIG. 36.**

Fig. 36

⚠ WARNING

Stand out of the line of potential kickback. Hold the workpiece firmly against the fence and table. Do not allow your fingers to get close to the blade! Do not reach over the blade to off-load the workpiece.

DADO OPERATIONS

In addition to its ability to rip and crosscut lumber, the table saw is also an invaluable tool for creating a variety of dadoes. These non-through cuts can be created with specially-designed stacking or wobbling dado blades.

⚠ WARNING

Never allow hands or arms to be above or behind the saw blade. Should kickback occur, the hands and arms can be pulled into the saw blade. Serious injury will result.

⚠ WARNING

Never perform a through cut operation with a dado blade. A dado blade was designed to make non-through cuts only. Failure to follow these dierctions could result in serious injury.

⚠ WARNING

Dado operations present very real hazards requiring proper procedures to avoid serious injury. The chance of kickback is always greater when dado blades are used so extra precautions must be used. Any movement of the stock away from the fence will cause kickback. Be certain that stock is flat and straight. Failure to follow these warnings could result in serious personal injury.

⚠ CAUTION

Always use push sticks, featherboards, push paddles and other safety accessories whenever possible to increase safety and control during operations which require the blade guard and splitter to be removed from the saw. ALWAYS replace the blade guard after dadoing is complete.

Proper dado operations will differ depending on the blade system you choose. Consult the instructions included with your dado blades for directions regarding attachment and adjustment. To use a dado blade:

⚠ WARNING

MAKE CERTAIN THAT THE SAW IS DISCONNECTED FROM THE POWER SOURCE.

1. Remove the table insert, splitter guard, and regular saw blade.
2. Attach and adjust the dado blade system as recommended in the dado blade's instructions.
3. Install the dado table insert.
4. Raise the blade system up to the desired depth of the dado. Make sure the dado blade will not cut through the workpiece.
5. If dadoing along the length of your workpiece, adjust the distance between the fence and the inside edge of the blade to suit your needs. When cutting across the wood grain, use the miter gauge as a guide while dadoing. **Remember:** Never use the fence as a stop in conjunction with your miter gauge.
6. Reconnect the saw to the power source.
7. Using a scrap piece as a test piece, switch on the saw and take a pass over the dado blade.
8. If the cut is satisfactory, repeat with your finish stock.

MAINTAINENCE

PROTECTING CAST IRON TABLE FROM RUST

⚠ WARNING

MAKE CERTAIN THAT THE SAW IS DISCONNECTED FROM THE POWER SOURCE.

The environment and frequency of human contact can have a very detrimental impact on unpainted cast iron surface. Moisture, humidity and oils (from human hands!) can cause the unpainted cast iron surfaces to mar or rust, so it is important to conduct routine maintenance to keep your table saw looking new. Cleaning and waxing the cast iron surfaces on a regular maintenance schedule is recommended as follows:

To clean and maintain the unpained cast iron surfaces:

- Apply a heavy coat of WD-40 onto the unpainted cast iron surface.
- Use a fine steel wood pad to buff the unpainted cast iron. Make sure to buff in a “front-to-rear” direction only. A side-to-side buffing motion will show in the finely ground cast iron as a flaw, defect or scratches.
- Reapply WD-40 and buff the unpainted cast iron surfaces until the stains or rust is removed. Mak sure you use the same front-to-rear buffing direction to avoid scratching or marring the cast iron surface.
- After all stains and/or rust have been removed, clean all oil and dirt from the table saw using a soft cloth or rag.
- Lastly, you need to apply a good automotive paste wax to all unpainted cast iron surfaces. This will help to protect the saw from rusting from further contact with moisture or oily hands.

This table saw requires very little maintenance other than minor lubrication and cleaning. The following sections detail what will need to be done in order to assure continued operation of your saw.

LUBRICATION

The table saw has sealed lubricated bearings in the motor housing that do not require any additional lubrication from the operator.

Use a wire brush to clean off the worm gears and trunnions and apply a white lithium grease to keep them lubricated.

CLEANING

Keep the inside of the cabinet clear of saw dust and wood chips. With the table saw unplugged, vacuum out the inside of the cabinet or blow out the inside with an air hose. Be sure to use air pressure no higher than 50 P.S.I. as high pressure air may damage insulation.

⚠ WARNING

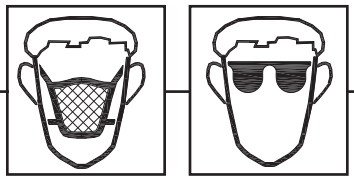

Be sure to wear protective eyewear and dust mask when cleaning out the cabinet of the saw.

LOCATE YOUR SERIAL NUMBER

The Serial Number of your unit can be located on the specification sticker label and the carton label. It is a letter L followed by 8 digit code. Please use the model number and serial number as reference. **SEE FIG. 37 & 38**

Fig. 37

Fig. 38

Fig. 7

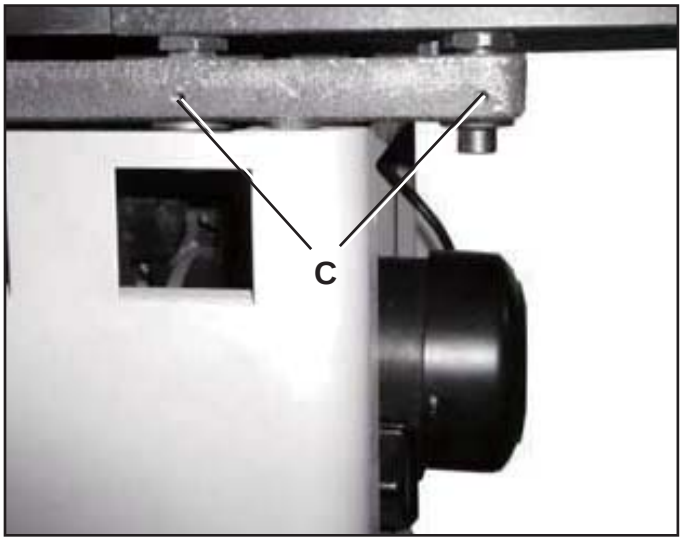

Fig. 8

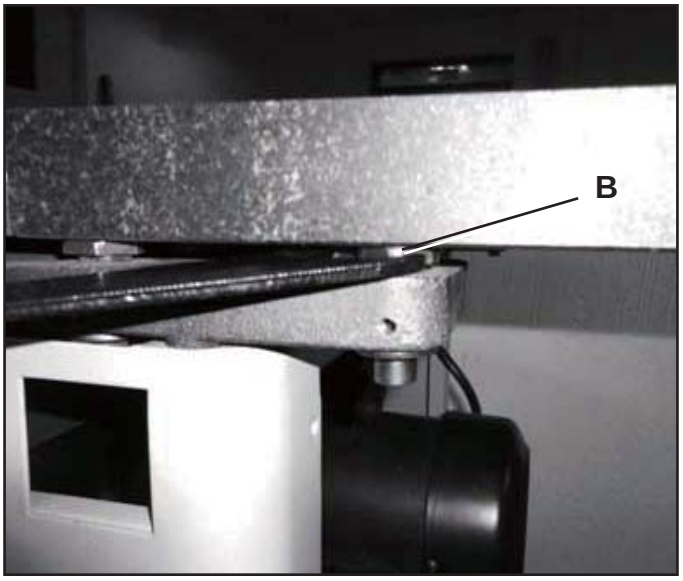

Fig. 9

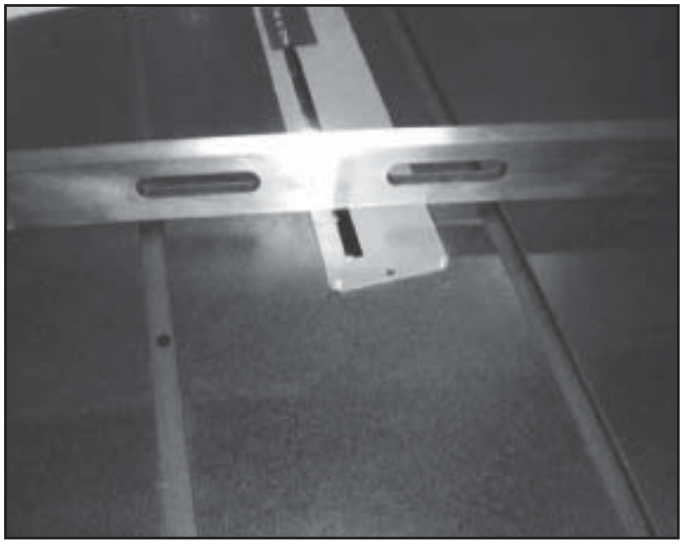

35990CS&35990SS EXTENSION WING ASSEMBLY PROCEDURES

⚠ WARNING

MAKE CERTAIN THAT THE SAW IS DISCONNECTED FROM THE POWER SOURCE.

1. The extension wings are heavy; two people are required to assemble both extension wings to the table saw.

Fig. 10

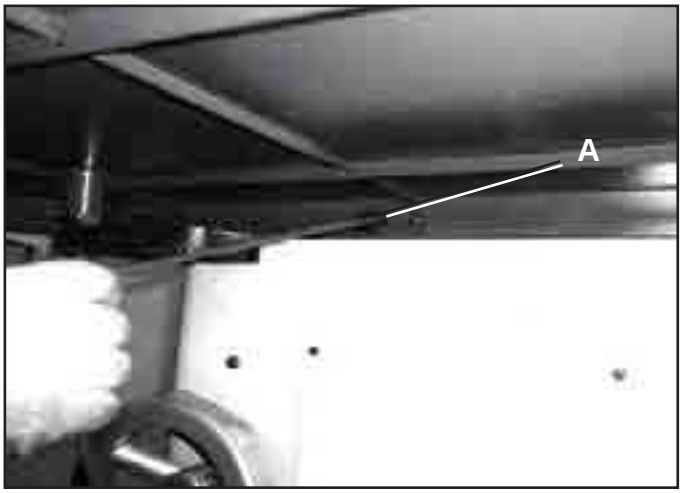

2 One person put right/left extension wing on the top of cabinet. And align the three mounting hole of wing to the hole of table, Another person use M8x16mm hex soc head screw (A) with M8 lock washer and M8 flat
. washer to secure it, do not tighten them completely. **SEE FIG.10**

4. Using two 5/16-18x28mm hex soc head screw (B)with M8 lock washer and M8 flat washer through the hole of the bottom of cabinet and tighten them. **SEE FIG.11**

Fig. 11

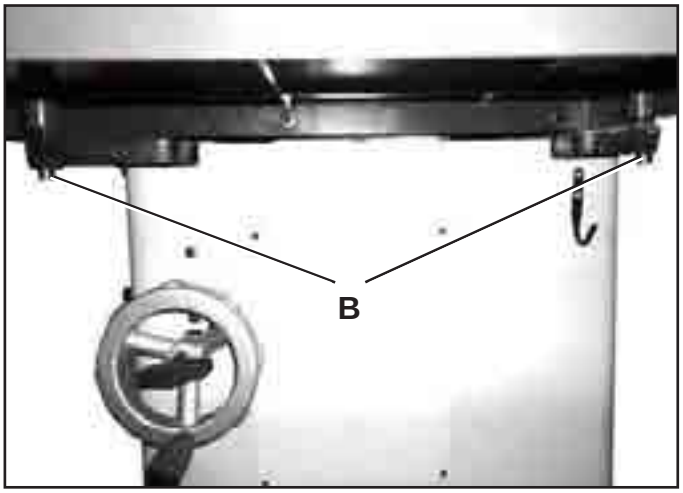

NOTE: To adjustment for this unit, please refer to the page 18-19 of extension wing assembly.

◆ NOTES ◆

PARTS

35990G
35990C
35990CS
35990SS
35990CG

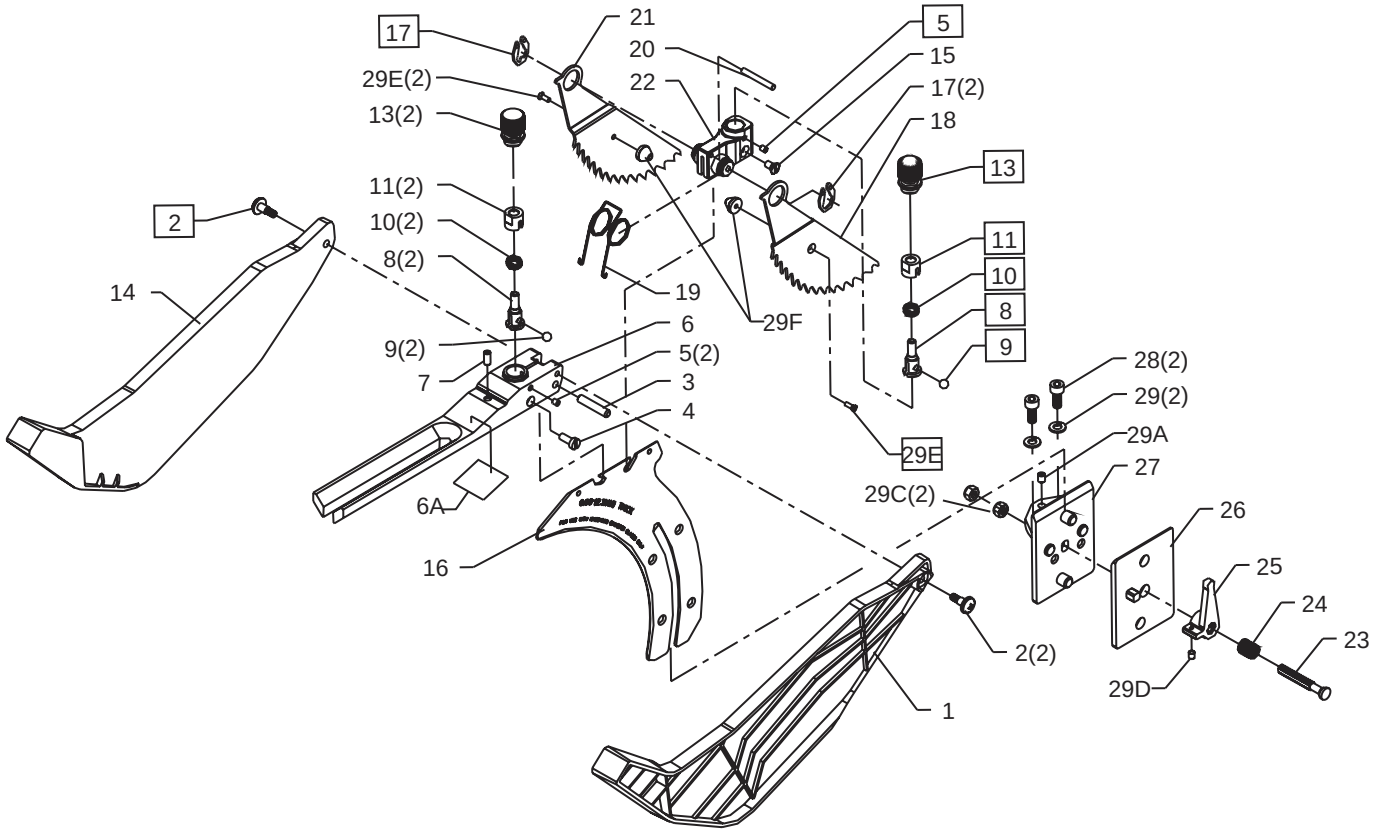

KEY NO.	PART NO.	DESCRIPTION	QTY.
1	SC10464	RIGHT BLADE GUARD	1
2	SC10465	SHOULDERED SCR	2
3	SC10466	ROUND PIN	2
4	SC80439	M4X10mm ROUND HD CUTTING SCR	1
5	SC80318	M4X6mm HEX SOC SET SCR W/FLAT POINT	2
6	SC10467	BLADE GUARD SUPPORT ARM	1
6A	SC76039	WARNING LABEL	1
7	SC80319	M5X12mm HEX SOC SET SCR W/CONE POINT	1
8	SC10468	FIXED SHAFT	2
9	SC10469	7/32 STEEL BALL	2
10	SC10470	SPRING	2
11	SC10471	BUSHING	2
12	OR90059	M6 FLAT WASHER	2
13	SC10472	TWIST GRIP	2
14	SC10473	LEFT BLADE GUARD	1
15	OR95116	M4X8mm COUNTERSUNK HD SCR	1
16	SC10474	RIVING KNIFE 2.3 MM	1

KEY NO.	PART NO.	DESCRIPTION	QTY.
17	OR94858	RETAINING RING E-RING 9	2
18	SC10475	RIGHT ANTI KICKBACK FINGER	1
19	SC10476	TWIST SPRING	1
20	SC84302	✆3X30mm SPRING PIN	1
21	SC10477	LEFT ANTI KICKBACK FINGER	1
22	SC10478	ANTI KICKBACK FINGER SUPPORT	1
23	SC10479	SPECIAL BOLT	1
24	SC10480	SPRING	1
25	SC10481	FAST NUT BASE	1
26	SC10482	RIVING KNIFE PLATE	1
27	SC10483	RIVING KNIFE SUPPORT	1
28	OR93372	SCR SOC HD CAP M6 X 12mm	2
29	OR90502	M6 LOCK WASHER	2
29A	SC80321	M6X8mm HEX SOC HD SCR WITH FLAT POINT	1
29C	SC81113	M8 LOCK NUT(LEFT)	2
29D	SC80322	M5X10mm HEX SOC HD SCR WITH FLAT POINT	1
29E	SC80437	ST2.9X6.5 CROSS COUNTERSUNK TAP SCR	2
29F	SC10484	ANTI KICKBACK FINGER SUPPORT BEARER	2

OR91712
SWITCH ASSY

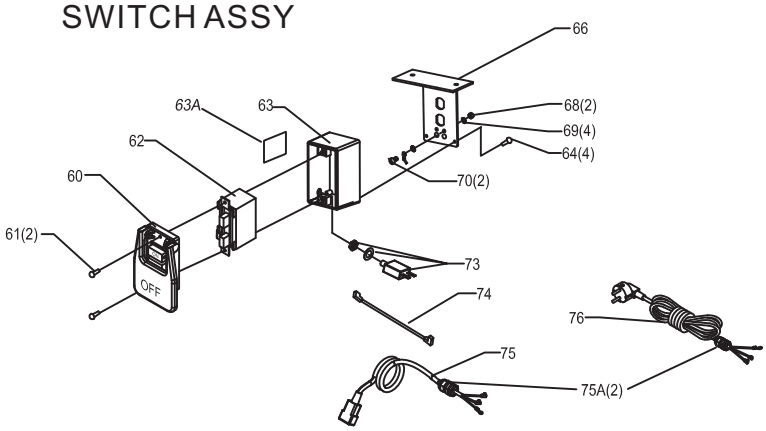

SC10160
MITER GAUGE ASSY

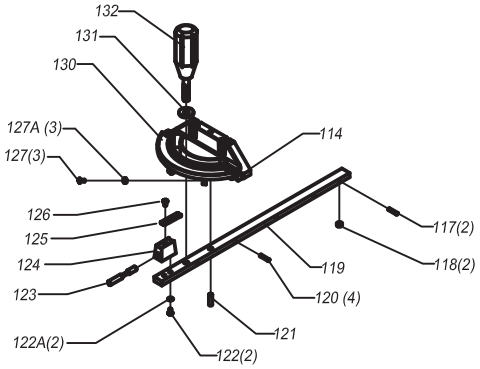

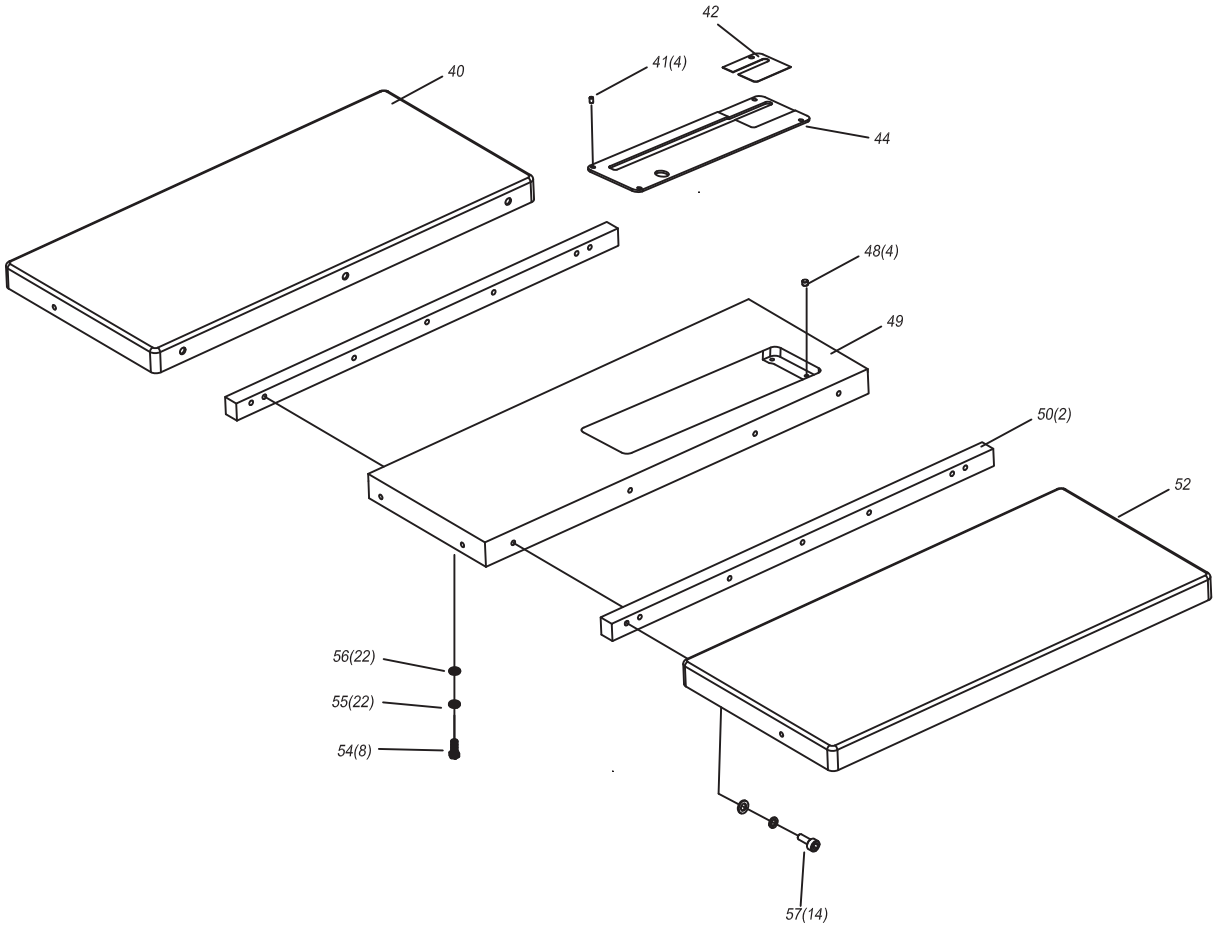

KEY NO.	PART NO.	DESCRIPTION	QTY

35990G&35990C&35990CG

40	SC10728	LEFT GRANITE EXTENSION WING(35990G)	1
40	SC10729	LEFT CAST IRON EXTENSION WING(35990C)	1
41	OR91789	1/4-28 X 3/8" SET SCR	4
42	SC10154	TABLE INSERT LEFT PAD	2
43	SC10155	TABLE INSERT RIGHT PAD	1
44	SC10486	MAIN TABLE INSERT	1
48	SC10487	¢8X6mm MAGNET	4
49	SC10488	TABLE ASSY (35990G)	1
49	SC10535	TABLE ASSY (35990C)	1
52	SC10731	RIGHT GRANITE EXTENSION WING(35990G)	1
52	SC10730	RIGHT CAST IRON EXTENSION WING(35990C)	1
54	Sc80470	5/16-18X50mm HEX SOC SET SCR	12
55	OR90248	M8 LOCK WASHER	12
56	OR91084	SPECIAL WASHER(8.3X25X3.5)	12

35990CS

40	SC10732	LEFT STEEL EXTENSION WING	1
41	OR91789	1/4-28 X 3/8" SET SCR	4
42	SC10154	TABLE INSERT LEFT PAD	2
43	SC10155	TABLE INSERT RIGHT PAD	1
44	Sc10772	MAIN TABLE INSERT	1
48	SC10487	¢8X6mm MAGNET	4
49	SC10733	TABLE ASSY	1
52	SC10734	RIGHT STEEL EXTENSION WING	1
54	Sc80470	5/16-18X50mm HEX SOC SET SCR	8
55	OR90248	M8 LOCK WASHER	14
56	OR91084	SPECIAL WASHER(8.3X25X3.5)	14
57	Sc80724	M8X16mm HEX SOC HD SCR	6

35990SS

40	SC10732	LEFT STEEL EXTENSION WING	1
41	OR91789	1/4-28 X 3/8" SET SCR	4
42	SC10154	TABLE INSERT LEFT PAD	2
43	SC10155	TABLE INSERT RIGHT PAD	1
44	Sc10772	TABLE INSERT	1
48	SC10487	¢8X6mm MAGNET	4
49	SC10735	MAIN TABLE ASSY	1
50	SC10736	BAR	2
52	SC10734	RIGHT STEEL EXTENSION WING	1
54	Sc80470	5/16-18X50mm HEX SOC SET SCR	8
55	OR90248	M8 LOCK WASHER	22
56	OR91084	SPECIAL WASHER(8.3X25X3.5)	22
57	SC80724	M8X16mm HEX SOC HD SCR	14

KEY NO.	PART NO.	DESCRIPTION	QTY
*	OR91712	SWITCH ASSY (#60-#76)	
60	OR91040	SWITCH PADDLE	1
61	SC80411S	M4X25mm ROUND HD TAP SCR	2
62	C72065	SWITCH	1
63	OR91063	SWITCH BOX	1
63A	OR91579	SWITCH RESET LABEL	1
64	SC80410	M4X16mm ROUND HD TAP SCR	4
66	OR91062	SWITCH SUPPORT	1
68	OR90381	M5 HEX NUT	2
69	OR90362	M5 EXT TOOTH WASHER	4
70	OR90505	M5X12mm PAN HD SCR	2
73	OR70139	RESET SWITCH 25AMP	1
74	OR91032	WIRE JUMPER	1
75	OR91007	SWITCH CORD	1
75A	OR70141	STRAIN RELIEF(7P-2)	2
76	OR91030	POWER CORD	1
*	SC10160	MITER GAUGE ASSY(#114-#132)	
114	OR91076	MITER GAUGE BODY	1
115	SC10161	SPECIAL WASHER	3
116	Sc10162	SPECIAL SCR	2
117	Sc80725	M4X4mm SCREW (for 35990SS,CS only)	2
118	SC90015A	MAGNET (for 35990SS,CS only)	2
119	SC10163	GUIDE BAR (for 35990G,C,CG only)	1
119	Sc10774	GUIDE BAR (for 35990CS,SS only)	1
120	Or91763	M4X16mm SET SCR	4
121	OR91783	1/4"X3/4 PIN	1
122	OR91774	M4X10mm PAN HD SCR	2
122A	OR90143	M4 FLAT WASHER	2
123	OR91080	PLUNGER	1
124	OR91081	PLUNGER BLOCK	1
125	OR91082	CURSOR	1
126	OR91775	M4X15mm PAN HD SCR	1
127	OR94404	M4X20mm PAN HD SCR	3
127A	OR90078	M4 HEX NUT	3
130	OR91573	MITER SCALE	1
131	OR91084	SPECIAL WASHER, MITER HANDLE	1
132	SC10153	MITER GAUGE KNOB	1

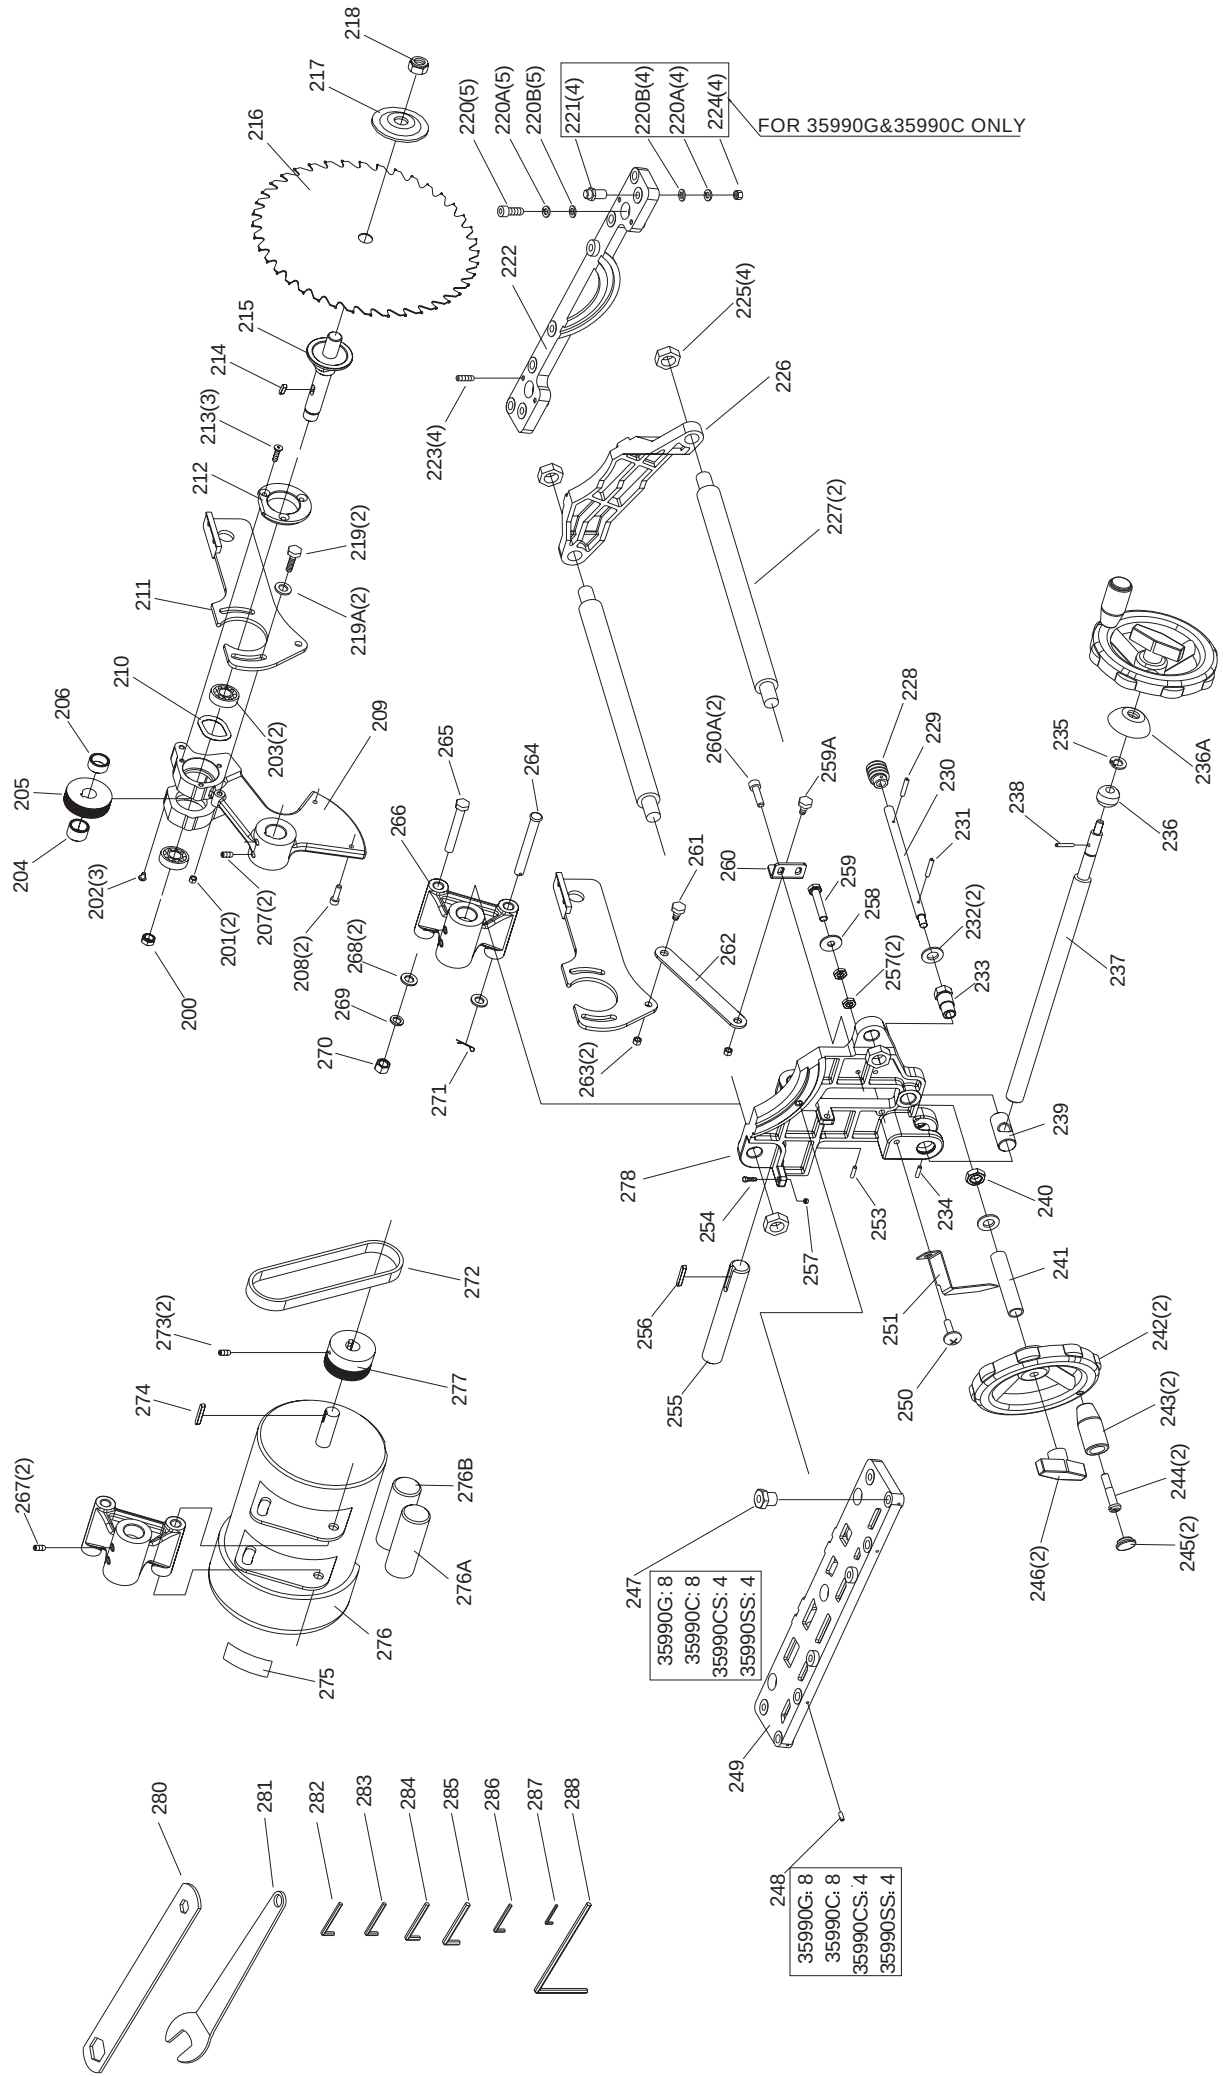
FOR 35990G&35990C ONLY
35990G: 8
35990C: 8
35990CS: 4
35990SS: 4
35990G: 8
35990C: 8
35990CS: 4
35990SS: 4

KEY NO.	PART NO.	DESCRIPTION	QTY
200	OR91766	5/8-18 LOCK NUT	1
201	OR90235	M6 HEX NUT	2
202	OR92137	M5X12mm PAN HD SCR	3
203	OR91733	(6203 LLB) BALL BEARING	2
204	SC10491	BUSHING	1
205	SC10492	ARBOR PULLEY	1
206	SC10493	BUSHING	1
207	SC80113	M8X8mm HEX SOC HD SCR	2
208	SC80104	M6X10mm HEX SOC HDSCR	2
209	SC10494	ARBOR RAISING SUPPORT BRACKET	1
210	OR91801	WAVE WASHER	1
211	SC10495	SPLITTER MOUNT SUPPORT	1
212	SC10496	FLANGE	1
213	SC80325	M5X12mm HEX SOC HD SCR	3
214	OR91824	5X5X15 KEY	1
215	SC10497	ARBOR SHAFT	1
216	SC10721	BLADE(OD: 10" ID: 5/8" 40TH)	1
217	OR91026	BLADE FLANGE	1
218	SC10540	ARBOR NUT	1
219	OR73016	M6X35mm HEX SOC HD SCR	2
219A	OR90059	M6 FLAT WASHER	2
220	OR91761	M8X25mm SOC HEX HD SCR	5
220A	OR90248	M8 LOCK WASHER	5
220B	OR91084	M8 SPECIAL WASHER(35990G&35990C)	9
220B	OR91084	M8 SPECIAL WASHER(35990CS&35990SS)	5
221	SC10738	PIN(35990G&35990C)	4
222	SC10737	REAR BRACKET	1
223	OR91821	M8X20mm SOC HEX HD SCR	4
224	OR90307	M8 HEX NUT(35990G&35990C)	4
225	OR91766	5/8-18 LOCK NUT	4
226	SC10499	REAR TRUNNION	1
227	SC10500	TIE BAR	2
*	SC10541	EELEVATING SHAFT ASSY(#228-#230)	1
228	OR91744	GEAR	1
229	OR91792	3X15mm SPRING PIN	1
230	SC10739	ELEVATION SHAFT	1
231	OR90232	¢4X20mm SPRING PIN	1
232	OR91740	3/8" FIBER WASHER	2
233	SC10501	ECCENTRIC SCR	1
234	OR93906	M5X6mm HEX SOC HD SCR	1
235	SC85308	RETAINING RING¢9	1
236	SC10740	SUPPORT BUSHING	1
236A	SC10741	FLANGE	1
237	SC10742	TILT SHAFT	1
238	OR90232	¢4X20mm SPRING PIN	1
239	SC10502	TILT NUT	1
240	OR91766	5/8-18 LOCK NUT	1
241	SC10503	BUSHING	1

KEY NO.	PART NO.	DESCRIPTION	QTY
242	SC10722	HANDWHEEL	2
243	OR70156	KNOB	2
244	OR91038	KNOB BOLT	2
245	OR70157	KNOB END CAP	2
246	OR91046	HANDWHEEL LOCK KNOB	2
247	OR72944	ADJUSTMENT SCR	4
248	OR91046	M5X6mm SOC HEX HD SCR	4
249	SC10743	FRONT BRACKET	1
250	OR90306	M6X12mm PAN HD SCR	1
251	SC10506	POINTER	1
253	OR93914	SCR HEX SOC HD M8 X 30mm	1
254	OR93891	SCR HEX HD M8 X 40mm	1
255	SC10507	SHAFT	1
256	OR74452	6X6X35 KEY	1
257	OR90307	M8 HEX NUT	3
258	OR91084	M8 WASHER SPECIAL	1
259	OR93891	M8X40mm HEX HD SCR	1
259A	SC10508	SCREW	1
260	SC10509	SUPPORT BOARD	1
260A	SC80104	M6X10mm HEX SOC HD SCR	2
261	SC10510	SCREW	1
262	SC10511	LINK ROD	1
263	OR91754	M6 NYLON HEX NUT	2
264	SC84303	8X90 B PIN	1
265	SC80706	M8X100mm HEX HD SCR	1
266	SC10512	MOTOR SUPPORT BRACKET	1
267	SC80323	M8X8mm HEX HD SET SCR	2
268	OR90311	M8 FLAT WASHER	2
269	OR90248	M8 LOCK WASHER	1
270	OR90307	M8 HEX NUT	1
271	OR74472	3.2X22mm CUTTER PIN	1
272	SC10513	6PJ174 BELT	1
273	SC80409	1/4-20X3/8mm HEX SOC SET SCR	2
274	OR91770	5X5X36mm KEY	1
275	SC76041	MOTOR SPEC LABEL	1
276	SC72042	MOTOR ASSY (1.5HP)	1
276A	SC70151	START CAPACITOR,150uF/250V	1
276B	SC72067	RUN CAPACITOR,35uF/300V	1
277	OR91023	MOTOR PULLEY	1
278	SC10514	REAR TRUNNION	1
280	SC10515	7/8"X1/2" WRENCH	1
281	SC10516	22MM OPEN END WRENCH	1
282	OR90289	2.5MM ALLEN WRENCH	1
283	OR90290	3MM ALLEN WRENCH	1
284	OR90291	4MM ALLEN WRENCH	1
285	OR91728	5MM ALLEN WRENCH	1
286	OR92172	6MM ALLEN WRENCH	1
287	OR91808	1/8" ALLEN WRENCH	1
288	SC10514	6MM ALLEN WRENCH1	

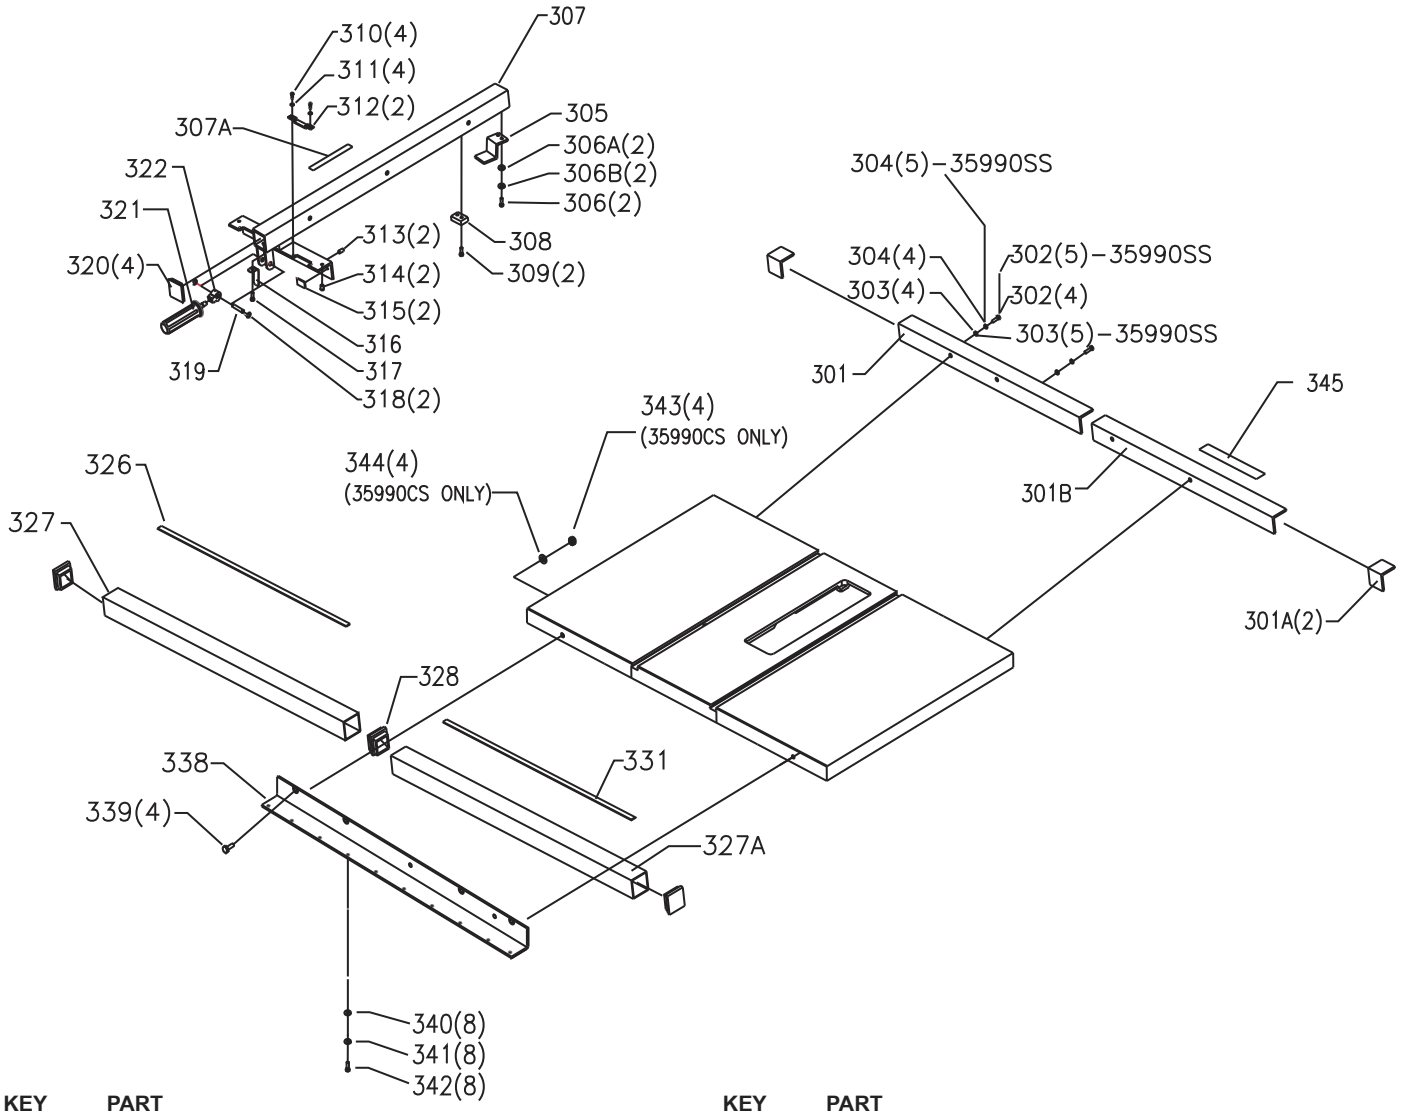

KEY NO.	PART NO.	DESCRIPTION	QTY
301	SC10517	LEFT REAR RAIL	1
301	SC10745	LEFT REAR RAIL(35990SS)	1
301A	SC10280	REAR RAIL CAP	2
301B	SC10518	RIGHT REAR RAIL	1
301B	SC10746	RIGHT REAR RAIL(35990SS)	1
302	SC80707	5/16-18*5/8 HEX HD SCR	4
302	SC80707	5/16-18*5/8 HEX HD SCR(35990SS)	5
303	OR90311	M8 FLAT WASHER	4
303	OR90311	M8 FLAT WASHER(35990SS)	5
304	OR90248	M8 LOCK WASHER	4
304	OR90248	M8 LOCK WASHER(35990SS)	5
305	SC10723	HOOK	1
306	SC80104	M6X10MM HEX SOC HD SCR	2
306A	OR90059	M6 FLAT WASHER	2
306B	OR90502	M6 LOCK WASHER	2
307	SC10724	FENCE ASS'Y	1
307A	SC76042	FENCE WARNING LABEL	1
308	SC10284	PLASTIC PAD	1
309	SC80324	M6X15 HEX SOC HD SCR	2
310	OR91774	M4X10 PAN HD SCR	4
311	OR90143	M4 FLAT WASHER	4
312	OR94573	CURSOR	2

KEY NO.	PART NO.	DESCRIPTION	QTY
313	SC80113	M8X8mm SET SCR	2
314	SC10550	SPECIAL SCREW NYLON	2
315	OR94575	CLAMP PAD NYLON	2
316	OR94576	TENSION CLIP	1
317	OR90306	M6X12mm PAN HD SCR	1
318	OR91739	E-RING #8	2
319	OR94577	HANDLE PIVOT SHAFT	1
320	OR94578	TUBE PLUG	4
321	OR94579	LOCK HANDLE ASSY	1
322	OR91736	CLAMP CAM	1
326	SC10288	SCALE, LEFT 20" CAPACITY	1
327	SC10564	LEFT FRONT RAIL	1
327A	SC10565	RIGHT FRONT RAIL	1
328	OR94582	FENCE RAIL CONNECTOR CAP	1
331	SC10289	SCALE, RIGHT 30" CAPACITY	1
338	SC10519	FRONT RAIL BRACKET	1
339	SC80112	5/16-18*5/8 ALLAN HEAD	3
340	OR90059	M6 FLAT WASHER	10
341	OR90502	M6 LOCK WASHER	10
342	SC80111	M6X16 HEX SOC HD SCR	10
343	OR90338	5/16-18 HEX NUT(35990CS ONLY)	4
344	OR90064	5/16" FLAT WASHER(35990CS ONLY)	4
345	SC76072	WARNING LABEL	1

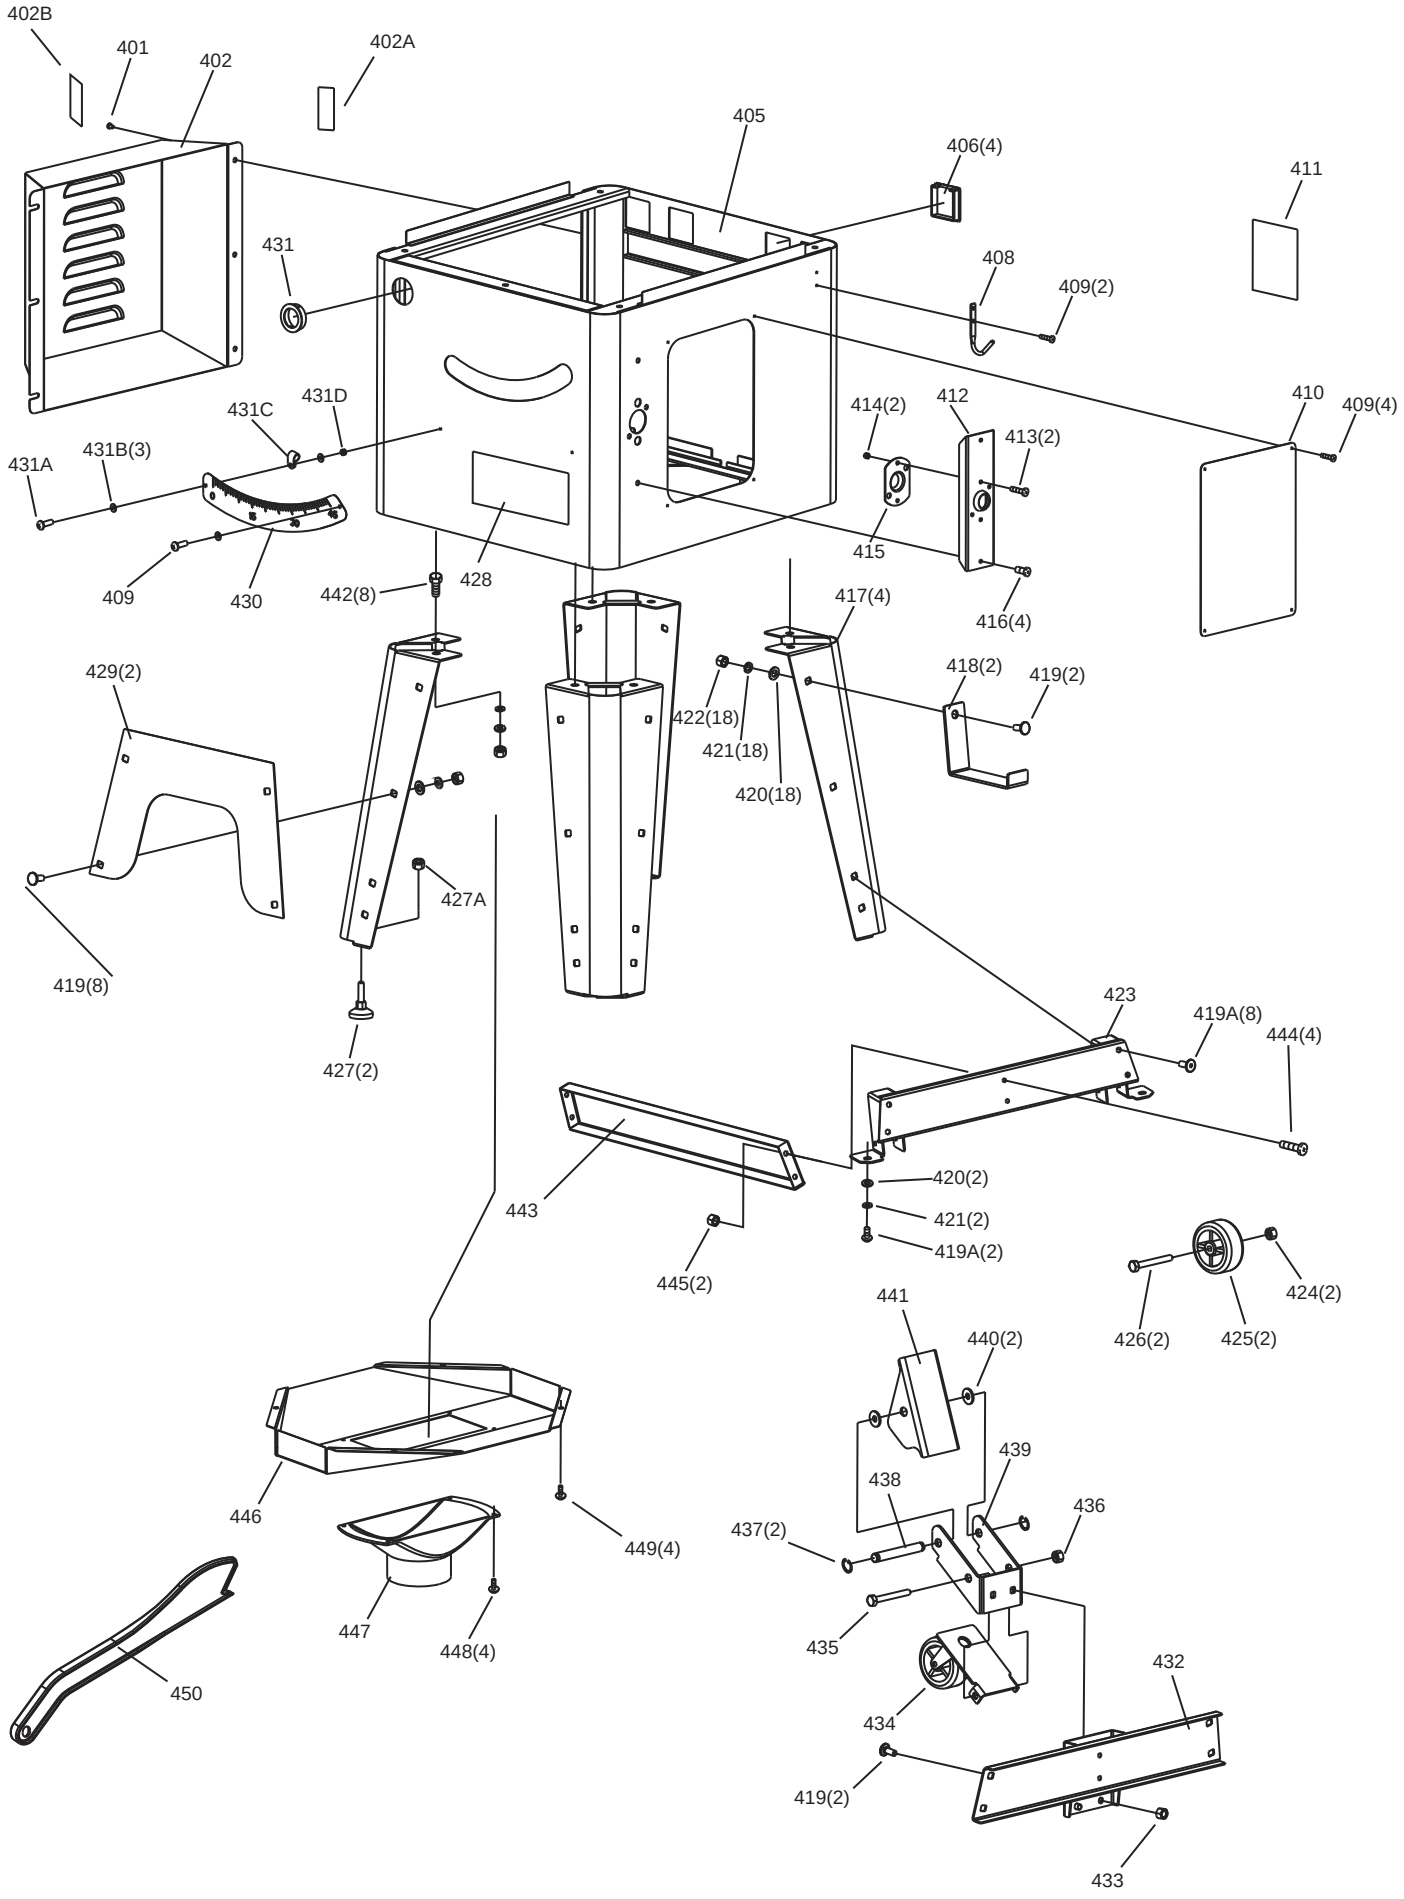
402B
401
402
402A
405
406(4)
411
431
408
409(2)
431C
431D
414(2)
412
410
409(4)
431A
431B(3)
413(2)
415
409
430
442(8)
428
416(4)
417(4)
429(2)
418(2)
419(2)
422(18)
421(18)
420(18)
427A
419(8)
427(2)
423
419A(8)
444(4)
443
420(2)
421(2)
419A(2)
445(2)
424(2)
426(2)
425(2)
441
440(2)
439
438
436
437(2)
435
446
449(4)
447
448(4)
450
434
432
419(2)
433

KEY NO.	PART NO.	DESCRIPTION	QTY
401	OR90761	M5X10mm PAN HD SCR	6
402	SC10520	MOTOR COVER	1
402A	SC10212	BIG WARNING LABEL	1
402B	SC10215	SMALL WARNING LABEL	1
405	SC10747	CABINET ASSY WELDMENT	1
406	SC10456	END CAP	4
408	OR91134	WRENCH HOOK	1
409	OR91832	M4X8 TRIANGULAR THREAD TAP SCR	8
410	SC10523	CABINET ACCESS DOOR	1
411	SC76043	SPEC LABEL(FOR 35990G)	1
411	SC76049	SPEC LABEL(FOR 35990C)	1
411	SC76050	SPEC LABEL(FOR 35990CS)	1
411	SC76073	SPEC LABEL(FOR 35990SS)	1
412	SC10524	SUPPORT BOARD	1
413	OR90761	M5X10mm PAN HD SCR	2
414	OR94428	M5 LOCK NUT	2
415	SC10525	FIXED BOARD	1
416	OR91787	1/4-20 x3/8 ROUND HD TAP SCR	4
417	SC10526	LEG	4
418	SC10527	FENCE BRACKET	2
419	OR94770	M8X16mm CARRIAGE BOLT	18
419A	OR93380	M8X15mm SCR HEX SOC SET SCR	10
420	OR90311	M8 FLAT WASHER	20
421	OR90248	M8 LOCK WASHER	20
422	OR90307	M8 HEX NUT	18
423	SC10528	FIXED WHEEL ASSY	1
424	OR92724	M8 LOCK NUT	2
425	OR91505	CASTER WHEEL	2
426	OR94878	M8X55mm HEX SOC HD SCR	2
427	SC10529	LEVELING SCR	2
427A	OR90307	M8 HEX NUT	2
428	OR71620	NAME PLATE	1
429	SC10530	LEG SUPPORT	2
430	SC76045	BEVEL SCALE	1
431	OR91106	INSULATOR	1
431A	OR91775	M4x15mm PAN HD SCR	1
431B	OR91043	M4 FLAT WASHER	3
431C	OR91737	CABLE CLAMP	1
431D	OR90078	M4 HEX NUT	1
432	SC10531	WHEEL ASSY	1
433	OR94771	M8 FLANGE HEX NUT	2
434	OR91506	CASTER ASSY	1
435	OR91502	5/16-18X4"HEX HD SCREW	1
436	OR91503	5/16-18 LOCK NUT	1
437	OR91507	EXT.RET.RING1/2"	2
438	OR91508	PIN	1
439	OR72922	REAR WHEEL BRACKET	1
440	OR91504	1/2" FLAT WASHER	2
441	OR91469	FOOT PEDAL	1
442	OR93917	M8X20mm HEX HD SCR	8
443	SC10532	REINFORCEMENT PLATE	1
444	OR93930	M6XP1.0X10mm HEX SOC HD SCR	4
445	OR90235	M6 HEX NUT	2
446	SC10533	DUST PLATE	1
447	OR91128	DUST PORT	1
448	SC80408	1/4-20X1/2 ROUND HD TAP SCR	4
449	OR92137	M5X12mm PAN HD SCR	4
450	SC10548	PUSH STICK	1

35990G
35990C

Switch Assembly - OR91712

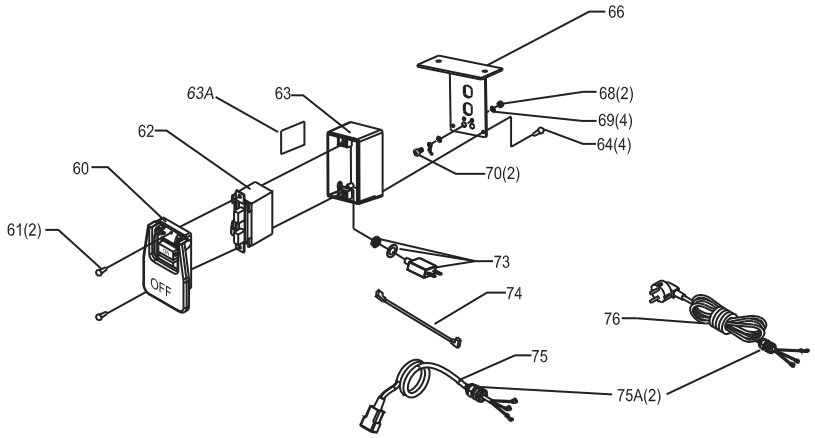

Miter Guage Assembly - SC10160

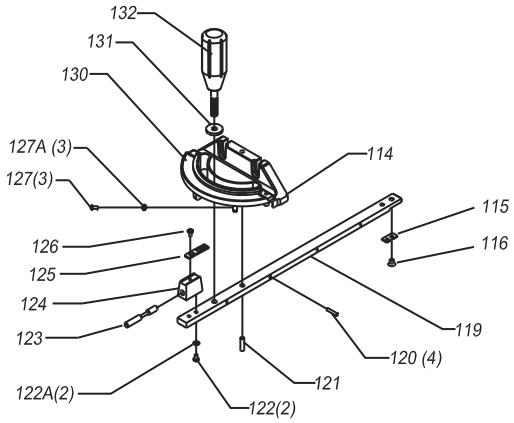

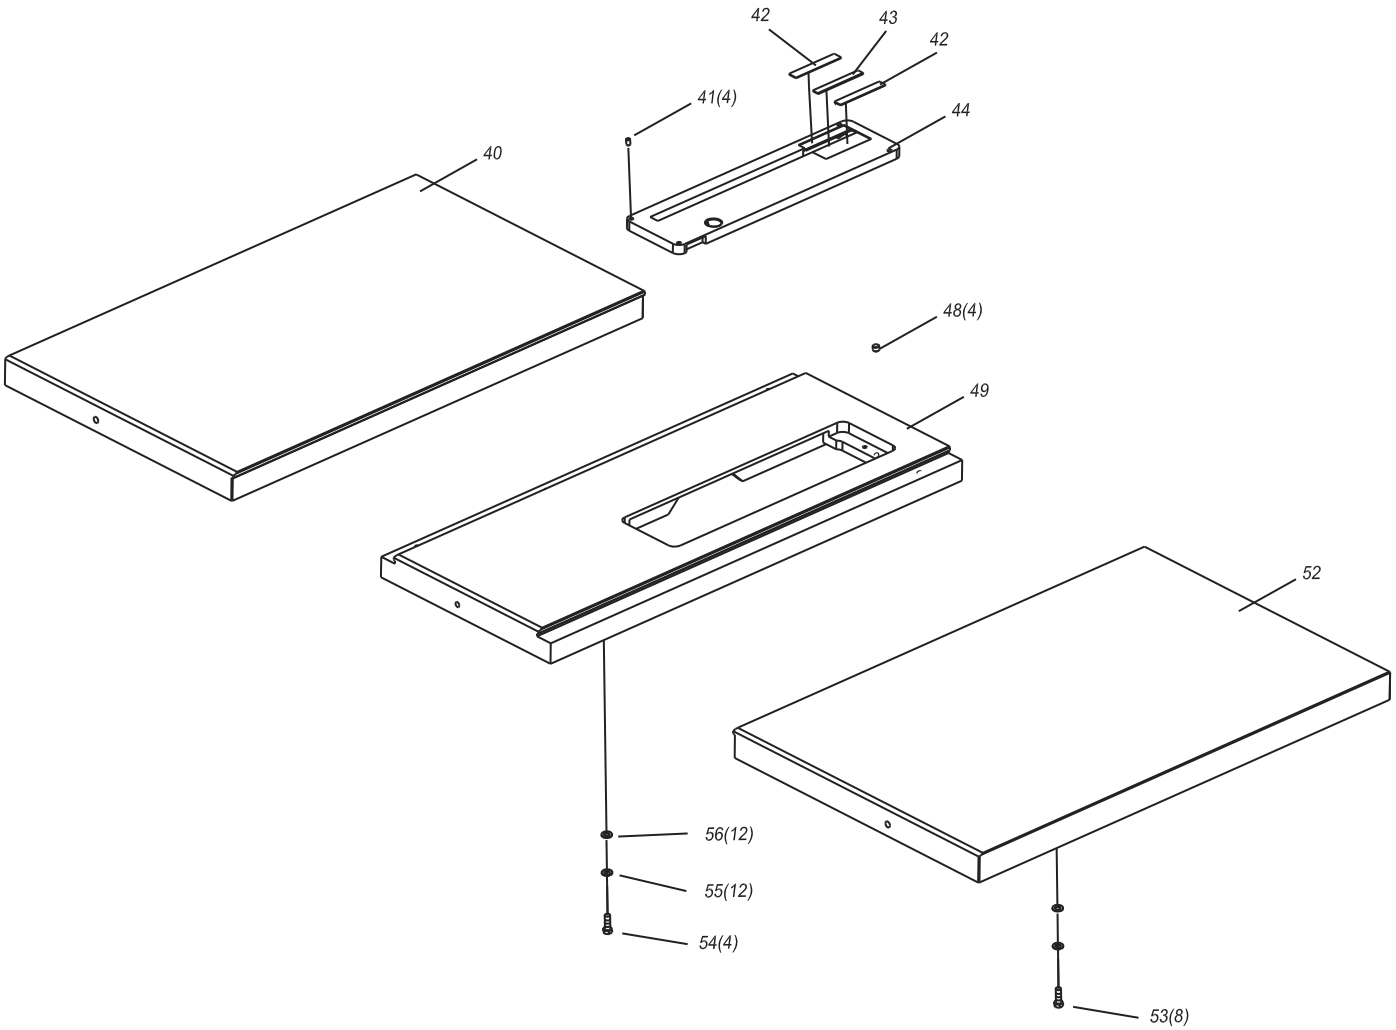

35990CS

Switch Assembly - OR91712

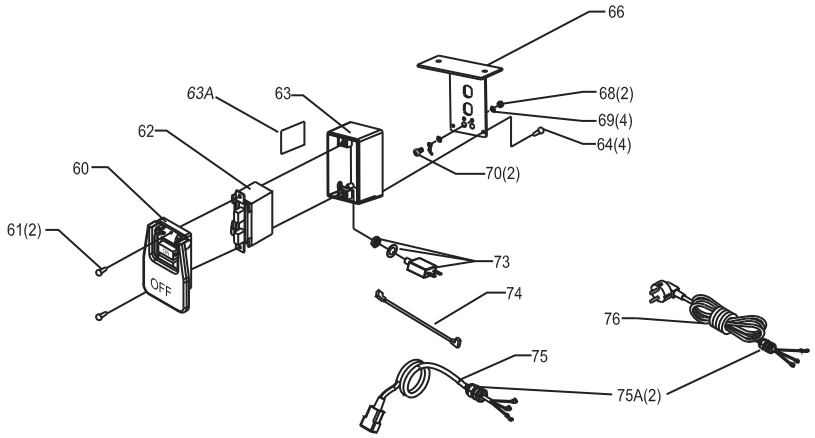

Miter Guage Assembly - SC10160

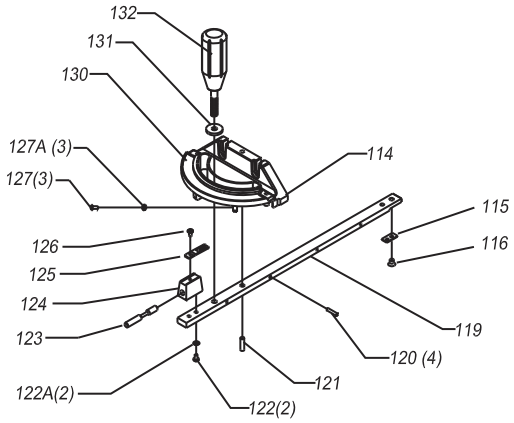

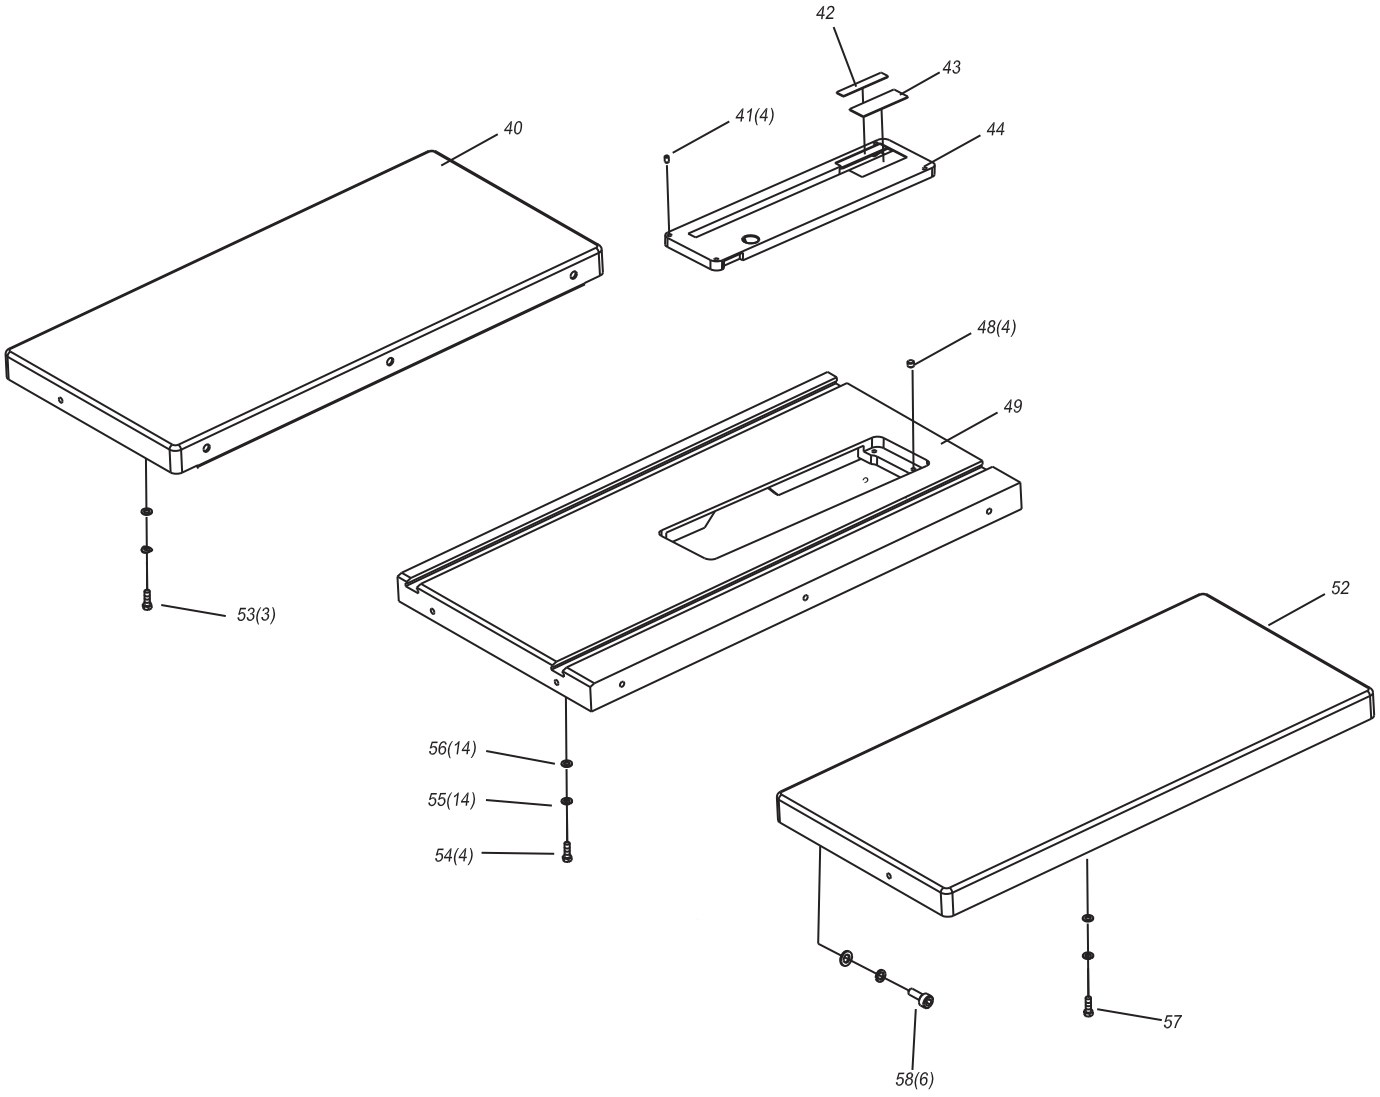

KEY NO.	PART NO.	DESCRIPTION	QTY
35990G			
40	SC10485	LEFT GRANITE EXTENSION WING	1
41	OR91789	1/4-28 X 3/8" SET SCR	4
42	SC10154	TABLE INSERT LEFT PAD	2
43	SC10155	TABLE INSERT RIGHT PAD	1
44	SC10486	TABLE INSERT	1
48	SC10487	¢8X6mm MAGNET	4
49	SC10488	TABLE ASSY	1
52	SC10490	RIGHT GRANITE EXTENSION WING	1
53	SC80438	5/16-18X55mm HEX SOC SET SCR	8
54	SC80430	5/16-18X28mmHEX SOC HD SCR	4
55	OR90248	M8 LOCK WASHER	12
56	OR91084	SPECIAL WASHER(8.3X25X3.5)	12
35990C			
40	SC10534	CAST IRON LEFT EXTENSION WING	1
41	OR91789	1/4-28 X 3/8" SET SCR	4
42	SC10154	TABLE INSERT LEFT PAD	2
43	SC10155	TABLE INSERT RIGHT PAD	1
44	SC10486	TABLE INSERT	1
48	SC10487	¢8X6mm MAGNET	4
49	SC10535	TABLE ASSY	1
52	SC10536	CAST IRON RIGHT EXTENSION WING	1
53	SC80438	5/16-18X55mm HEX SOC SET SCR	8
54	SC80430	5/16-18X28mmHEX SOC HD SCR	4
55	OR90248	M8 LOCK WASHER	12
56	OR91084	SPECIAL WASHER(8.3X25X3.5)	12
35990CS			
40	SC10537	CAST STEEL LEFT EXTENSION WING	1
41	OR91789	1/4-28 X 3/8" SET SCR	4
42	SC10154	TABLE INSERT LEFT PAD	2
43	SC10155	TABLE INSERT RIGHT PAD	1
44	SC10486	TABLE INSERT	1
48	SC10487	¢8X6mm MAGNET	4
49	SC10538	TABLE ASSY	1
52	SC10539	CAST STEEL RIGHT EXTENSION WING	1
53	SC80438	5/16-18X55mm HEX SOC SET SCR	4
54	SC80430	5/16-18X28mmHEX SOC HD SCR	4
55	OR90248	M8 LOCK WASHER	14
56	OR91084	SPECIAL WASHER(8.3X25X3.5)	14
57	SC80724	M8*16 HEX SOC HD SCR	6

KEY NO.	PART NO.	DESCRIPTION	QTY
*	OR91712	SWITCH ASSY(#60-#76)	1
60	OR91040	SWITCH PADDLE	1
61	SC80411	M4X25mm ROUND HD TAP SCR	2
62	SC72065	SWITCH	1
63	OR91063	SWITCH BOX	1
63A	OR91579	SWITCH RESET LABEL	1
64	SC80410	M4X16mm ROUND HD TAP SCR	4
66	OR91062	SWITCH SUPPORT	1
68	OR90381	M5 HEX NUT	2
69	OR90362	M5 EXT TOOTH WASHER	4
70	OR90505	M5X12mm PAN HD SCR	2
73	OR70139	RESET SWITCH	1
74	OR91032	WIRE	1
75	OR91007	SWITCH CORD	1
75A	OR70141	STRAIN RELIEF(7P-2)	2
76	OR91030	POWER CORD	1
*	SC10160	MITER GAUGE ASSY(#114-#132)	
114	OR91076	MITER GAUGE BODY	1
115	SC10161	SPECIAL WASHER	3
116	SC10162	SPECIAL SCR	2
119	SC10163	GUIDE BAR	1
120	OR91763	M4X16mm SET SCR	4
121	OR91783	1/4"X3/4 PIN	1
122	OR91774	M4X10mm PAN HD SCR	2
122A	OR90143	M4 FLAT WASHER	2
123	OR91080	PLUNGER	1
124	OR91081	PLUNGER BLOCK	1
125	OR91082	CURSOR	1
126	OR91775	M4X15mm PAN HD SCR	1
127	OR94404	M4X20mm PAN HD SCR	3
127A	OR90078	M4 HEX NUT	3
130	OR91573	MITER SCALE	1
131	OR91084	SPECIAL WASHER, MITER HANDLE	1
132	SC10153	MITER GAUGE KNOB	1

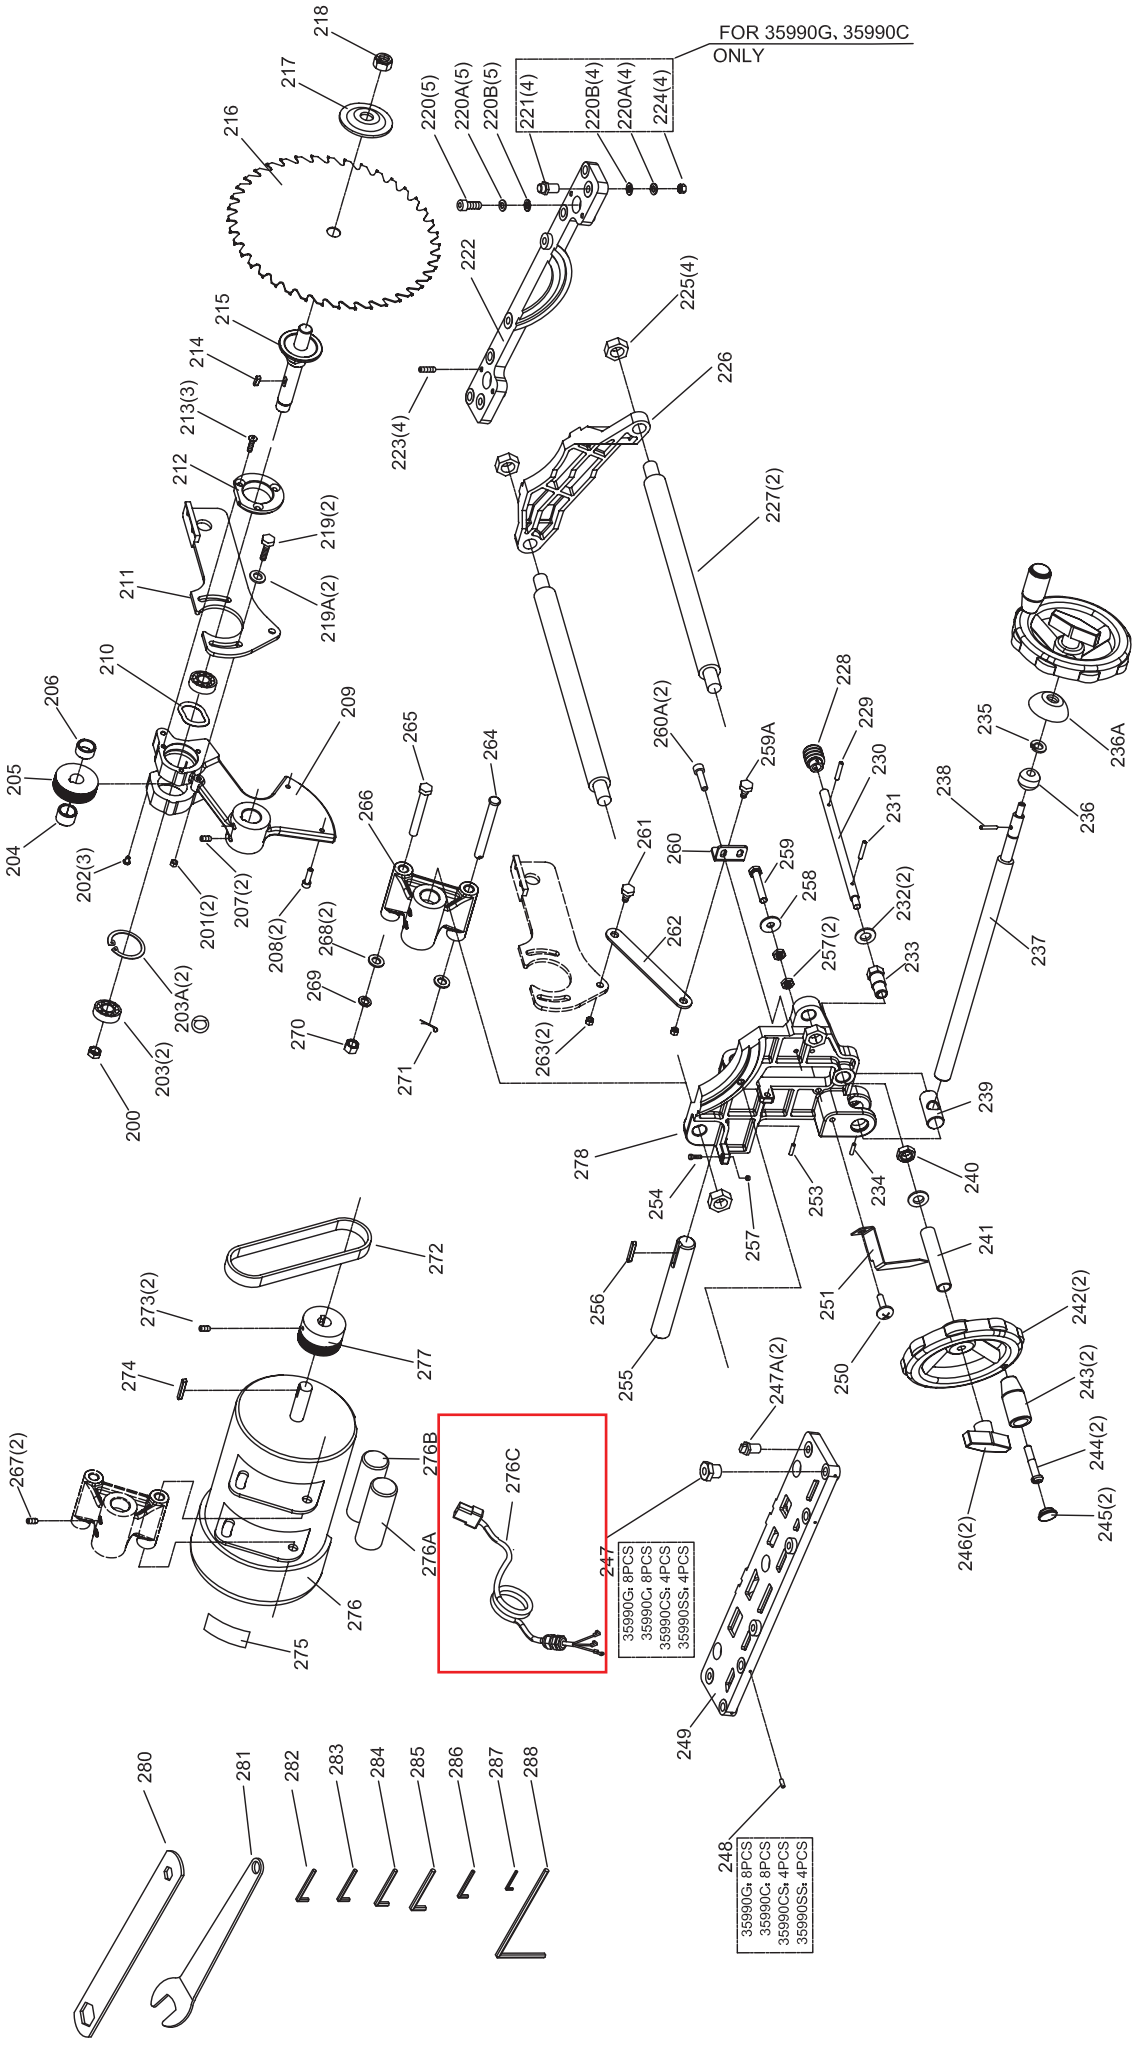
FOR 35990G, 35990C ONLY
35990G: 8PCS
35990C: 8PCS
35990CS: 4PCS
35990SS: 4PCS

KEY NO.	PART NO.	DESCRIPTION	QTY
200	OR91766	5/8-18 LOCK NUT	1
201	OR90235	M6 HEX NUT	2
202	OR92137	M5X12mm PAN HD SCR	3
203	OR91733	(6203 LLB) BALL BEARING	2
204	SC10491	BUSHING	1
205	SC10492	ARBOR PULLEY	1
206	SC10493	BUSHING	1
207	SC80113	M8X8mm HEX SOC HD SCR	2
208	SC80104	M6X10mm HEX SOC HDSCR	2
209	SC10494	ARBOR RAISING SUPPORT BRACKET	1
210	OR91801	WAVE WASHER	1
211	SC10495	SPLITTER MOUNT SUPPORT	1
212	SC10496	FLANGE	1
213	SC80325	M5X12mm HEX SOC HD SCR	3
214	OR91824	5X5X15 KEY	1
215	SC10497	ARBOR SHAFT	1
216	SC10721	BLADE(OD: 10" ID: 5/8" 40TH)	1
217	OR91026	BLADE FLANGE	1
218	SC10540	ARBOR NUT	1
219	OR73016	M6X35mm HEX SOC HD SCR	2
219A	OR90059	M6 FLAT WASHER	2
220	OR91761	M8X25mm SOC HEX HD SCR	5
220A	OR90248	M8 LOCK WASHER	5
220B	OR91084	M8 SPECIAL WASHER(35990G&35990C)	9
220B	OR91084	M8 SPECIAL WASHER(35990CS&35990SS)	5
221	SC10738	PIN(35990G&35990C)	4
222	SC10737	REAR BRACKET	1
223	OR91821	M8X20mm SOC HEX HD SCR	4
224	OR90307	M8 HEX NUT(35990G&35990C)	4
225	OR91766	5/8-18 LOCK NUT	4
226	SC10499	REAR TRUNNION	1
227	SC10500	TIE BAR	2
*	SC10541	EELEVATING SHAFT ASSY(#228-#230)	1
228	OR91744	GEAR	1
229	OR91792	3X15mm SPRING PIN	1
230	SC10739	ELEVATION SHAFT	1
231	OR90232	¢4X20mm SPRING PIN	1
232	OR91740	3/8" FIBER WASHER	2
233	SC10501	ECCENTRIC SCR	1
234	OR93906	M5X6mm HEX SOC HD SCR	1
235	SC85308	RETAINING RING¢9	1
236	SC10740	SUPPORT BUSHING	1
236A	SC10741	FLANGE	1
237	SC10742	TILT SHAFT	1
238	OR90232	¢4X20mm SPRING PIN	1
239	SC10502	TILT NUT	1
240	OR91766	5/8-18 LOCK NUT	1
241	SC10503	BUSHING	1

KEY NO.	PART NO.	DESCRIPTION	QTY
242	SC10722	HANDWHEEL	2
243	OR70156	KNOB	2
244	OR91038	KNOB BOLT	2
245	OR70157	KNOB END CAP	2
246	OR91046	HANDWHEEL LOCK KNOB	2
247	OR72944	ADJUSTMENT SCR	4
248	OR91046	M5X6mm SOC HEX HD SCR	4
249	SC10743	FRONT BRACKET	1
250	OR90306	M6X12mm PAN HD SCR	1
251	SC10506	POINTER	1
253	OR93914	SCR HEX SOC SET M8 X 30	1
254	OR93891	SCR HEX HD M8 X 40mm	1
255	SC10507	SHAFT	1
256	OR74452	6X6X35 KEY	1
257	OR90307	M8 HEX NUT	3
258	Or91084	M8 WASHER SPECIAL	1
259	OR93891	M8X40mm HEX HD SCR	1
259A	SC10508	SCREW	1
260	SC10509	SUPPORT BOARD	1
260A	SC80104	M6X10mm HEX SOC HD SCR	2
261	SC10510	SCREW	1
262	SC10511	LINK ROD	1
263	OR91754	M6 NYLON HEX NUT	2
264	SC84303	8X90 B PIN	1
265	SC80706	M8X100mm HEX HD SCR	1
266	SC10512	MOTOR SUPPORT BRACKET	1
267	SC80323	M8X8mm HEX HD SET SCR	2
268	OR90311	M8 FLAT WASHER	2
269	OR90248	M8 LOCK WASHER	1
270	OR90307	M8 HEX NUT	1
271	OR74472	3.2X22mm CUTTER PIN	1
272	SC10513	6PJ174 BELT	1
273	SC80409	1/4-20X3/8mm HEX SOC SET SCR	2
274	OR91770	5X5X36mm KEY	1
275	SC76041	MOTOR SPEC LABEL	1
276	SC72042	MOTOR ASSY (1.5HP)	1
276A	SC70151	START CAPACITOR,150uF/250V	1
276B	SC72067	RUN CAPACITOR,35uF/300V	1
276C	OR91007M	CORD WFEMALE DISCONNECTION	1
277	OR91023	MOTOR PULLEY	1
278	SC10514	REAR TRUNNION	1
280	SC10515	7/8"X1/2" WRENCH	1
281	SC10516	22MM OPEN END WRENCH	1
282	OR90289	2.5MM ALLEN WRENCH	1
283	OR90290	3MM ALLEN WRENCH	1
284	OR90291	4MM ALLEN WRENCH	1
285	OR91728	5MM ALLEN WRENCH	1
286	OR92172	6MM ALLEN WRENCH	1
287	OR91808	1/8" ALLEN WRENCH	1
288	SC10514	6MM ALLEN WRENCH1	

EARLY MODEL

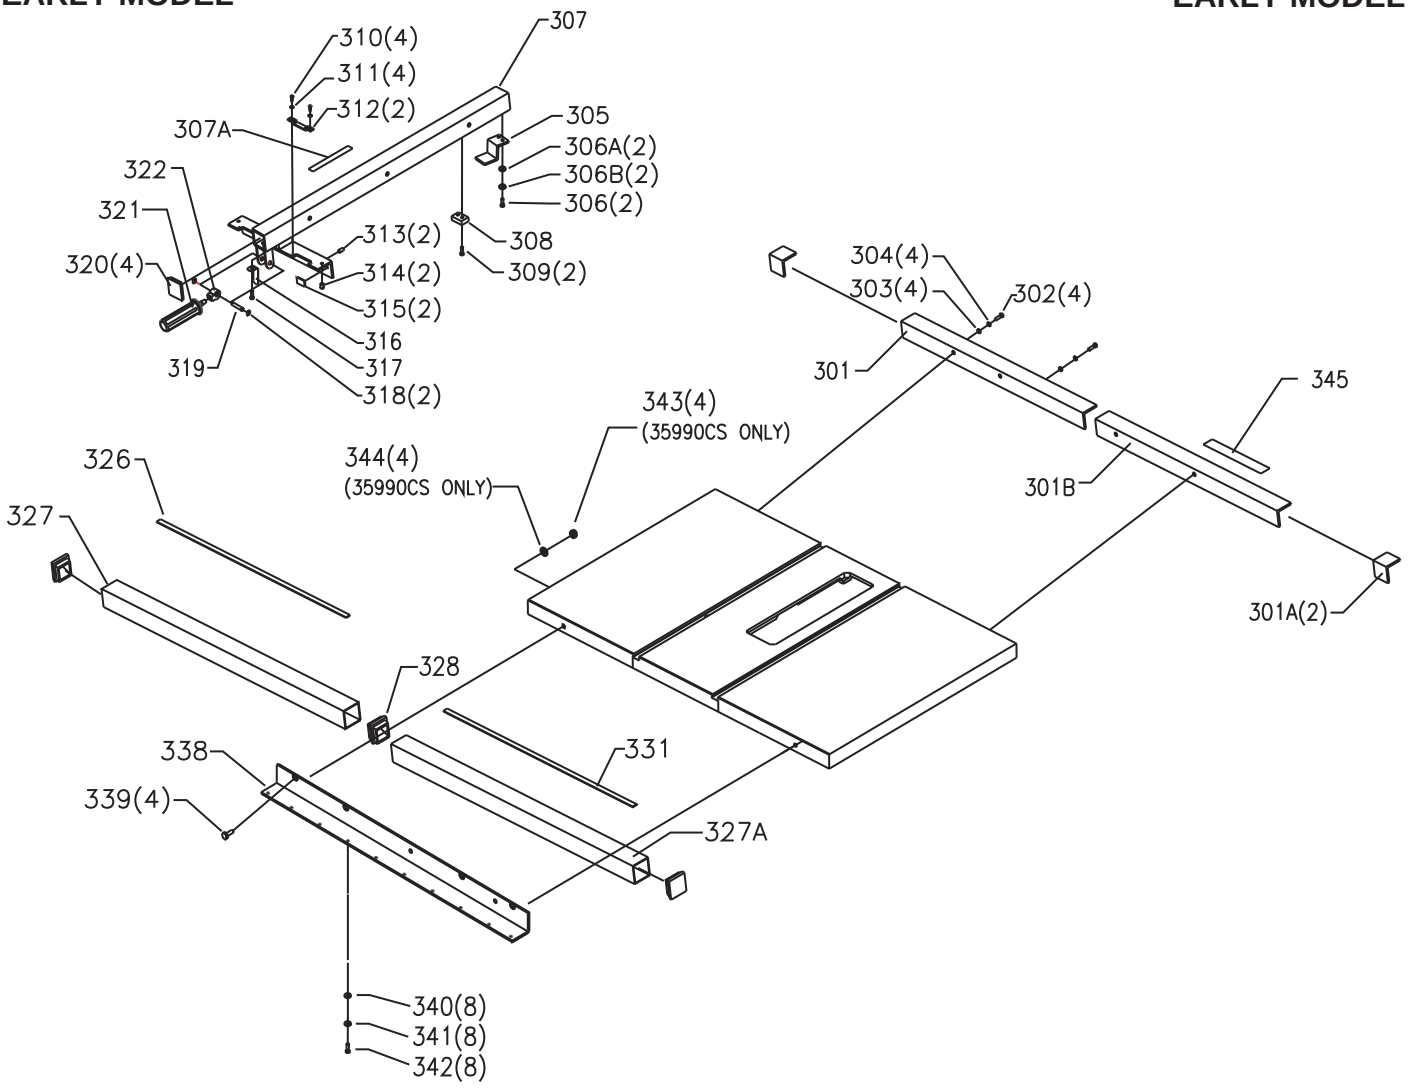

KEY NO.	PART NO.	DESCRIPTION	QTY
301	SC10517	LEFT REAR RAIL	1
301A	SC10280	REAR RAIL CAP	2
301B	SC10518	RIGHT REAR RAIL	1
302	SC80707	5/16-18*5/8 HEX HD SCR	4
303	OR90311	M8 FLAT WASHER	4
304	OR90248	M8 LOCK WASHER	4
305	SC10723	HOOK	1
306	SC80104	M6X10MM HEX SOC HD SCR	2
306A	OR90059	M6 FLAT WASHER	2
306B	OR90502	M6 LOCK WASHER	2
307	SC10724	FENCE ASS'Y	1
307A	SC76042	FENCE WARNING LABEL	1
308	SC10284	PLASTIC PAD	1
309	SC80324	M6X15 HEX SOC HD SCR	2
310	OR91774	M4X10 PAN HD SCR	4
311	OR90143	M4 FLAT WASHER	4
312	OR94573	CURSOR	2
313	SC80113	M8X8mm SET SCR	2
314	SC10550	SPECIAL SCREW NYLON	2
315	OR94575	CLAMP PAD NYLON	2

KEY NO.	PART NO.	DESCRIPTION	QTY
316	OR94576	TENSION CLIP	1
317	OR90306	M6X12mm PAN HD SCR	1
318	OR91739	E-RING #8	2
319	OR94577	HANDLE PIVOT SHAFT	1
320	OR94578	TUBE PLUG	4
321	OR94579	LOCK HANDLE ASSY	1
322	OR91736	CLAMP CAM	1
326	SC10288	SCALE, LEFT 20" CAPACITY	1
327	SC10564	LEFT FRONT RAIL	1
327A	SC10565	RIGHT FRONT RAIL	1
328	OR94582	FENCE RAIL CONNECTOR CAP	1
331	SC10289	SCALE, RIGHT 30" CAPACITY	1
338	SC10519	FRONT RAIL BRACKET	1
339	SC80112	5/16-18*5/8 ALLAN HEAD SCR	3
340	OR90059	M6 FLAT WASHER	1
341	OR90502	M6 LOCK WASHER	1
342	SC80111	M6X16 HEX SOC HD SCR	10
343	OR90338	5/16-18 HEX NUT(35990CS ONLY)	4
344	OR90064	5/16" FLAT WASHER(35990CS ONLY)	4
345	SC76072	WARNING LABEL	1

EARLY MODEL

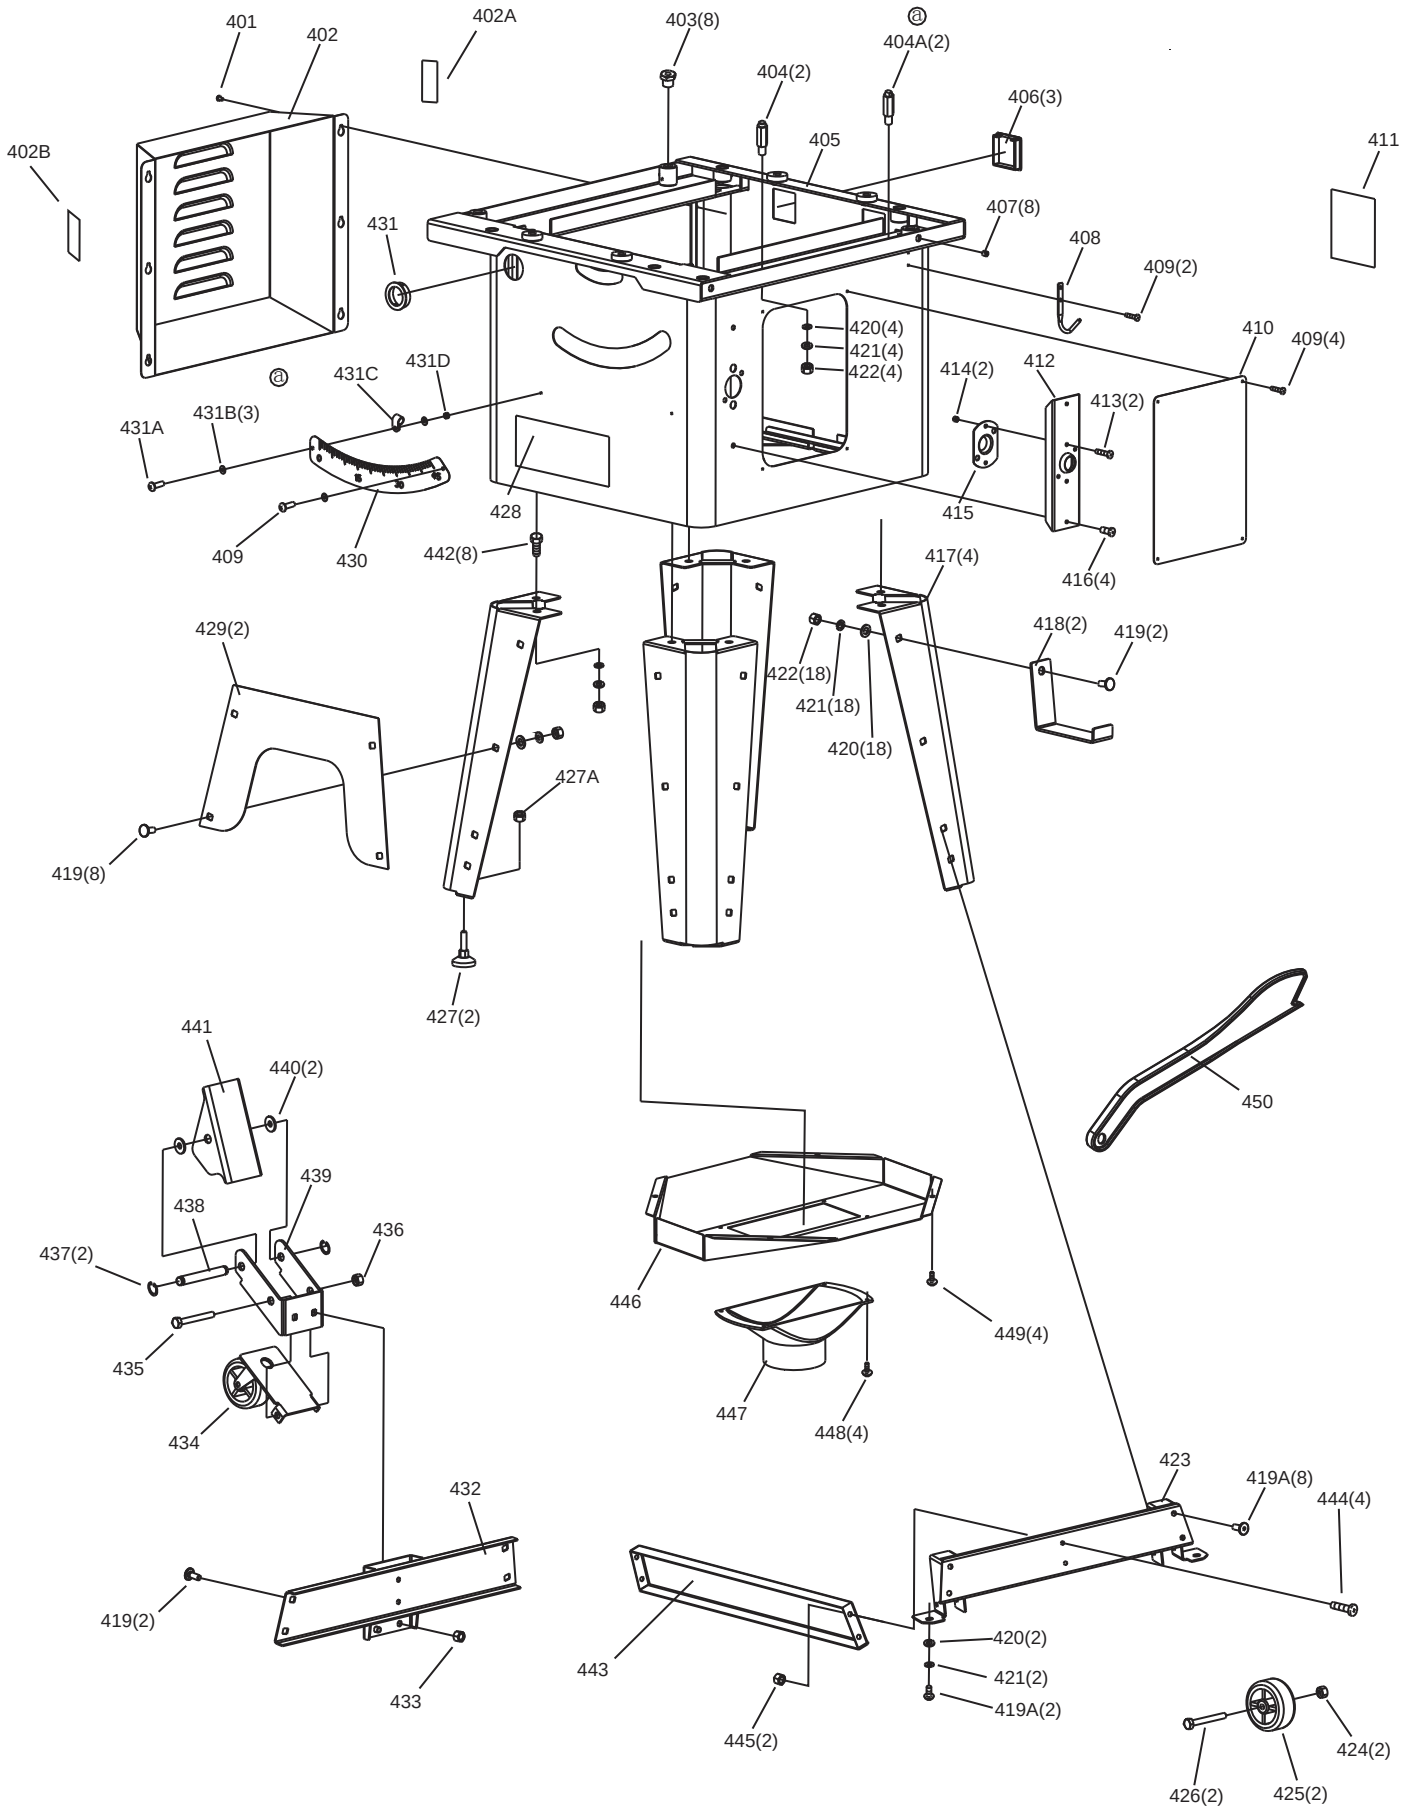
401
402
402A
403(8)
404A(2)
404(2)
406(3)
405
411
402B
431
407(8)
408
409(2)
420(4)
421(4)
422(4)
410
409(4)
431C
431D
414(2)
412
413(2)
431A
431B(3)
428
415
409
430
442(8)
416(4)
417(4)
429(2)
418(2)
419(2)
422(18)
421(18)
420(18)
427A
419(8)
427(2)
450
441
440(2)
439
438
436
437(2)
446
449(4)
435
447
448(4)
434
423
419A(8)
444(4)
432
419(2)
443
420(2)
421(2)
419A(2)
433
445(2)
424(2)
426(2)
425(2)

KEY NO.	PART NO.	DESCRIPTION	QTY
401	OR90761	M5X10mm PAN HD SCR	6
402	SC10520	MOTOR COVER	1
402A	SC10212	BIG WARNING LABEL	1
402B	SC10215	SMALL WARNING LABEL	1
403	SC10454	ADJUSTMENT SCR	8
404	SC10521	POSITION PIN	2
404A	SC10748	SPECIAL PIN	2
405	SC10522	CABINET ASSY WELDMENT	1
406	SC10456	END CAP	3
407	OR93906	M5X6mm HEX SOC HD SCR	8
408	OR91134	WRENCH HOOK	1
409	OR91832	M4X8 TRIANGULAR THREAD TAP SCR	7
410	SC10523	CABINET ACCESS DOOR	1
411	SC76043	SPEC LABEL(FOR 35990G)	1
411	SC76049	SPEC LABEL(FOR 35990C)	1
411	SC76050	SPEC LABEL(FOR 35990CS)	1
412	SC10524	SUPPORT BOARD	1
413	OR90761	M5X10mm PAN HD SCR	2
414	OR94428	M5 LOCK NUT	2
415	SC10525	FIXED BOARD	1
416	OR91787	1/4-20 x3/8 ROUND HD TAP SCR	4
417	SC10526	LEG	4
418	SC10527	FENCE BRACKET	2
419	OR94770	M8X16mm CARRIAGE BOLT	18
419A	OR93380	M8X15mm SCR HEX SOC SET SCR	10
420	OR90311	M8 FLAT WASHER	24
421	OR90248	M8 LOCK WASHER	24
422	OR90307	M8 HEX NUT	22
423	SC10528	FIXED WHEEL ASSY	1
424	OR92724	M8 LOCK NUT	2

KEY NO.	PART NO.	DESCRIPTION	QTY
425	OR91505	CASTER WHEEL	2
426	OR94878	M8X55mm HEX SOC HD SCR	2
427	SC10529	LEVELING SCR	2
427A	OR90307	M8 HEX NUT	2
428	OR71620	NAME PLATE	1
429	SC10530	LEG SUPPORT	2
430	SC76045	BEVEL SCALE	1
431	OR91106	INSULATOR	1
431A	OR91775	M4x15mm PAN HD SCR	1
431B	OR90143	M4 FLAT WASHER	3
431C	OR91737	CABLE CLAMP	1
431D	OR90078	M4 HEX NUT	1
432	SC10531	WHEEL ASSY	1
433	OR94771	M8 FLANGE HEX NUT	2
434	OR91506	CASTER ASSY	1
435	OR91502	5/16-18X4"HEX HD SCREW	1
436	OR91503	5/16-18 LOCK NUT	1
437	OR91507	EXT.RET.RING1/2"	2
438	OR91508	PIN	1
439	OR72922	REAR WHEEL BRACKET	1
440	OR91504	1/2" FLAT WASHER	2
441	OR91469	FOOT PEDAL	1
442	OR93917	M8X20mm HEX HD SCR	8
443	SC10532	REINFORCEMENT PLATE	1
444	OR93930	M6XP1.0X10mm HEX SOC HD SCR	4
445	OR90235	M6 HEX NUT	2
446	SC10533	DUST PLATE	1
447	OR91128	DUST PORT	1
448	SC80408	1/4-20X1/2 ROUND HD TAP SCR	4
449	OR92137	M5X12mm PAN HD SCR	4
450	SC10548	PUSH STICK	1

◆ NOTES ◆

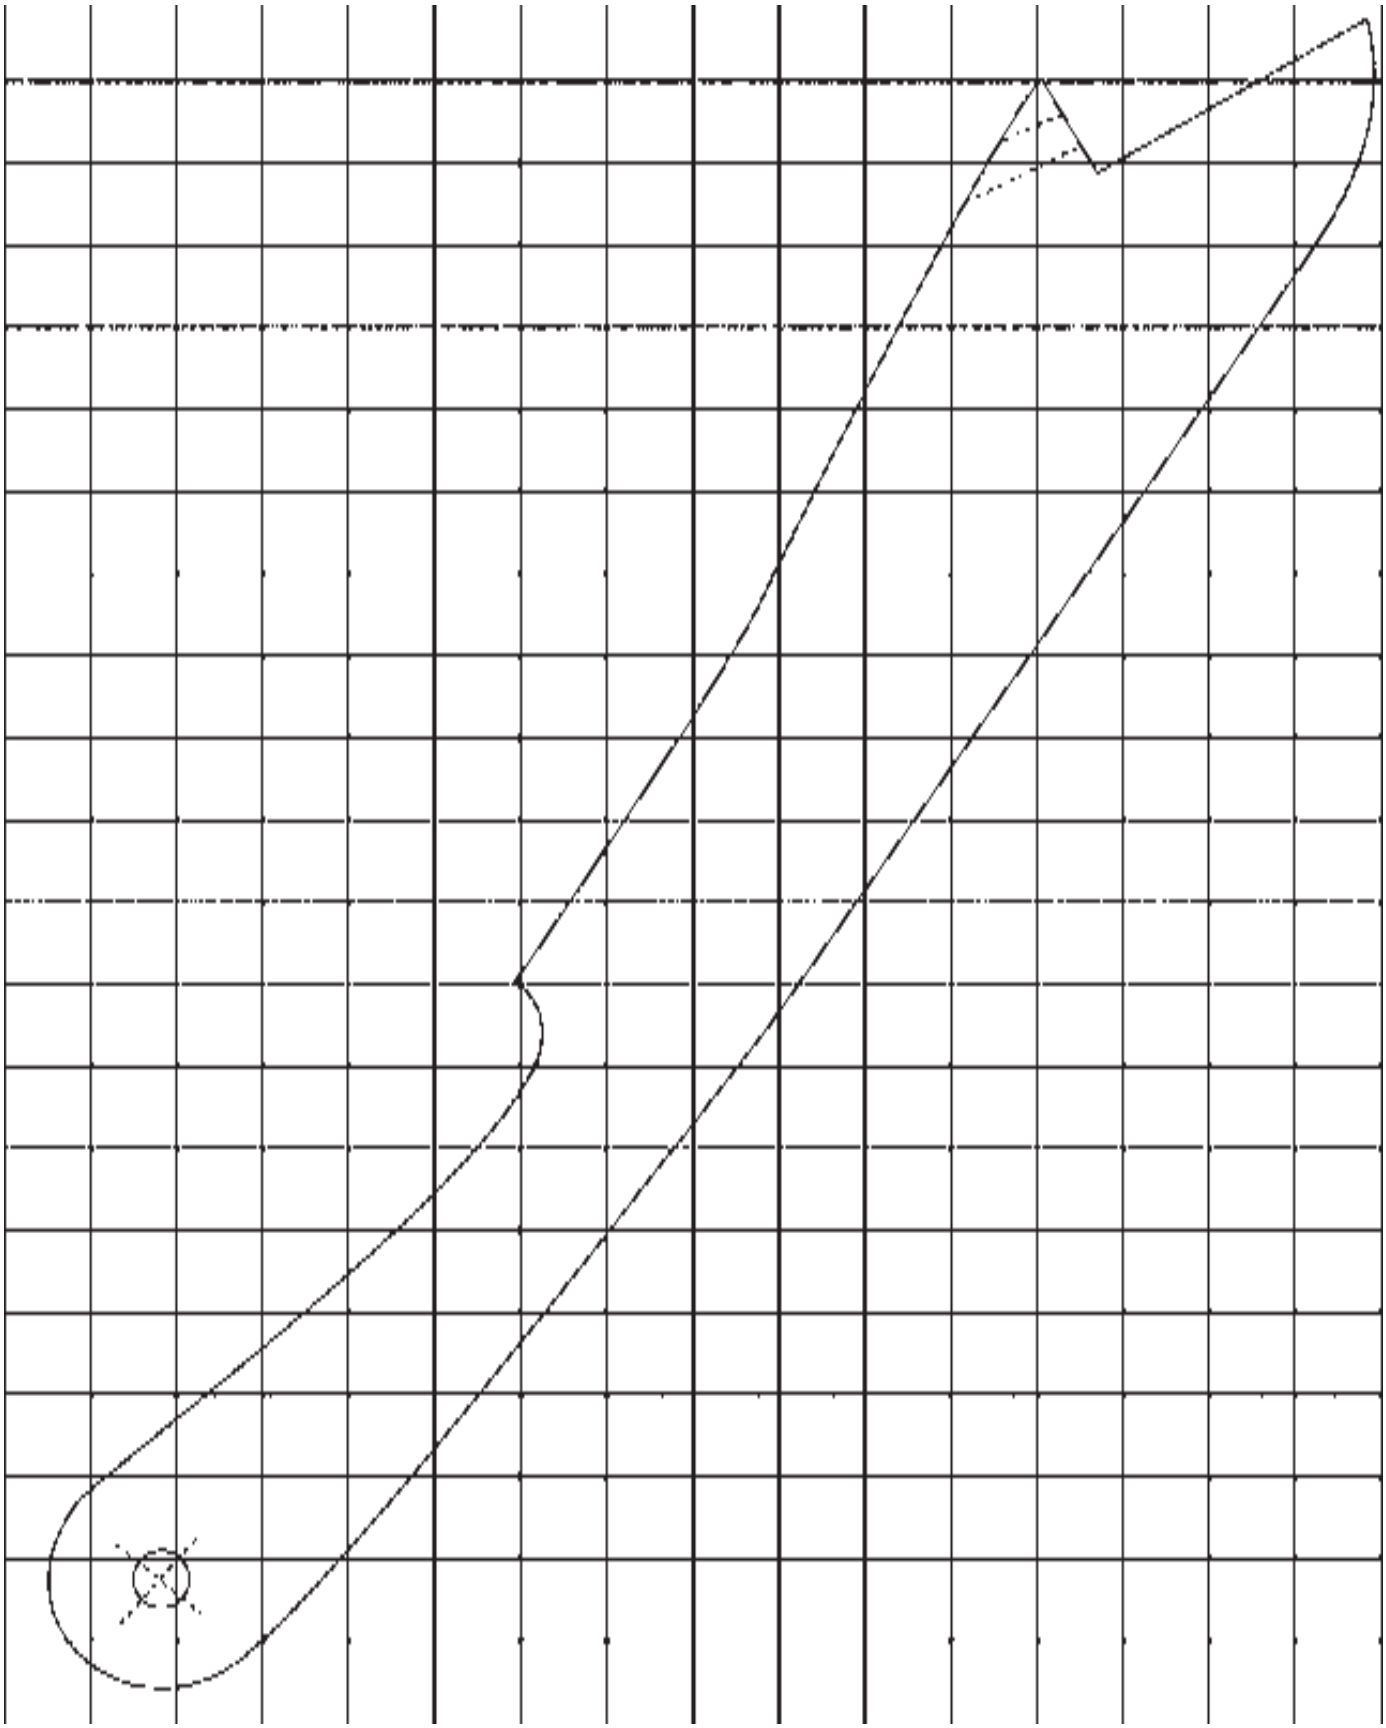

STEEL CITY TOOL WORKS

www.steelcitytoolworks.com

1-877-SC4-TOOL

(1-877-724-8665)

2 *Year Warranty*

ATTENTION

Spacer use for setting the wings on your new Steel City table saw.

1. Mount the left and right wings onto the top of your table saw but do not tighten bolts at this time.
2. Insert a spacer in the miter slot at front and rear of the table saw.
3. Use your hand to hold the wing tight against the main table.
4. Tighten the bolts and remove the spacers.
5. Test the miter gauge in the slot, adjust if necessary.
6. Repeat on the other wing.
7. Save you spacers with your manual for future use. i.e. move the table saw from your garage to your new workshop.

Please note the miter gauge is a standard size, measuring 19mm (3/4”) and the spacers are 19.2mm each.